

**FARMALL® 55A**  
**FARMALL® 65A**  
**FARMALL® 75A**  
Tractor

**SERVICE MANUAL**

**Part number 51489994**

1<sup>st</sup> edition English

October 2018



# Contents

---

<b>Maintenance</b> .....	<b>00</b>
[00.100] New unit pre-delivery operations .....	00.1
[00.150] Start-up .....	00.2
<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
<b>Clutch</b> .....	<b>18</b>
[18.110] Clutch and components .....	18.1
<b>Transmission</b> .....	<b>21</b>
[21.114] Mechanical transmission .....	21.1
[21.112] Power shuttle transmission .....	21.2
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.101] Mechanical control .....	23.1
[23.304] Four-Wheel Drive (4WD) gearbox .....	23.2
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle .....	27.1
<b>Power Take-Off (PTO)</b> .....	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.104] Rear electro-hydraulic control .....	31.2
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.3
<b>Brakes and controls</b> .....	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems .....	35.1

[35.116] Three-point hitch cylinder .....	35.2
[35.204] Remote control valves .....	35.3
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders .....	41.3
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.200] Air conditioning.....	50.2
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.2
[55.100] Harnesses and connectors.....	55.3
[55.201] Engine starting system .....	55.4
[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.408] Warning indicators, alarms, and instruments .....	55.7
[55.512] Cab controls.....	55.8
[55.DTC] FAULT CODES.....	55.9
<b>Front loader and bucket.....</b>	<b>82</b>
[82.100] Arm.....	82.1
[82.300] Bucket.....	82.2
[82.AAA] Front loader and bucket generic sub-group.....	82.3
<b>Platform, cab, bodywork, and decals.....</b>	<b>90</b>
[90.150] Cab.....	90.1

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)