

**Farmall® 55C**  
**Farmall® 65C**  
**Farmall® 75C**  
Efficient Power - Tractor

**SERVICE MANUAL**

Part number 51505329

English

September 2018



## Link Product / Engine

Product	Market Product	Engine
Farmall® 55C Without cab [ELRFC055PHAP00070 - ]	Middle East Africa	F5DFL463C*G001
Farmall® 55C Without cab [ELRFC055PHAP00070 - ]	Australia New Zealand	F5DFL463C*G001
Farmall® 55C Without cab [ELRFC055PHAP00070 - ]	Europe	F5DFL463C*G001
Farmall® 55C Without cab [ELRFC055PHAP00070 - ]	Asia Pacific	F5DFL463C*G001
Farmall® 55C With cab [ELRFC055HHAP00010 - ]	Europe	F5DFL463C*G001
Farmall® 55C With cab [ELRFC055HHAP00010 - ]	Asia Pacific	F5DFL463C*G001
Farmall® 55C With cab [ELRFC055HHAP00010 - ]	Middle East Africa	F5DFL463C*G001
Farmall® 55C With cab [ELRFC055HHAP00010 - ]	Australia New Zealand	F5DFL463C*G001
Farmall® 65C Without cab [ELRFC065KHAP00045 - ]	Middle East Africa	F5DFL463B*G001
Farmall® 65C Without cab [ELRFC065KHAP00045 - ]	Australia New Zealand	F5DFL463B*G001
Farmall® 65C Without cab [ELRFC065KHAP00045 - ]	Europe	F5DFL463B*G001
Farmall® 65C Without cab [ELRFC065KHAP00045 - ]	Asia Pacific	F5DFL463B*G001
Farmall® 65C With cab [ELRFC065LHAP00005 - ]	Europe	F5DFL463B*G001
Farmall® 65C With cab [ELRFC065LHAP00005 - ]	Australia New Zealand	F5DFL463B*G001
Farmall® 65C With cab [ELRFC065LHAP00005 - ]	Middle East Africa	F5DFL463B*G001
Farmall® 65C With cab [ELRFC065LHAP00005 - ]	Asia Pacific	F5DFL463B*G001
Farmall® 75C Without cab [ELRFC075THAP00002 - ]	Australia New Zealand	F5DFL463A*G002
Farmall® 75C Without cab [ELRFC075THAP00002 - ]	Middle East Africa	F5DFL463A*G002
Farmall® 75C Without cab [ELRFC075THAP00002 - ]	Europe	F5DFL463A*G002
Farmall® 75C Without cab [ELRFC075THAP00002 - ]	Asia Pacific	F5DFL463A*G002
Farmall® 75C With cab [ELRFC075PHAP00003 - ]	Europe	F5DFL463A*G002
Farmall® 75C With cab [ELRFC075PHAP00003 - ]	Australia New Zealand	F5DFL463A*G002
Farmall® 75C With cab [ELRFC075PHAP00003 - ]	Middle East Africa	F5DFL463A*G002
Farmall® 75C With cab [ELRFC075PHAP00003 - ]	Asia Pacific	F5DFL463A*G002

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.206] Fuel filters .....	10.3
[10.218] Fuel injection system.....	10.4
[10.202] Air cleaners and lines .....	10.5
[10.250] Turbocharger and lines.....	10.6
[10.254] Intake and exhaust manifolds and muffler .....	10.7
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.8
[10.400] Engine cooling system .....	10.9
[10.414] Fan and drive .....	10.10
[10.304] Engine lubrication system.....	10.11
<b>Clutch</b> .....	<b>18</b>
[18.100] Clutch mechanical release control .....	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components .....	18.3
[18.112] Slip clutch or flywheel damper .....	18.4
<b>Transmission</b> .....	<b>21</b>
[21.114] Mechanical transmission .....	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.112] Power shuttle transmission.....	21.4
[21.110] Master clutch housing .....	21.5
[21.134] Power shuttle transmission external controls .....	21.6
[21.104] Power shuttle transmission hydraulic components .....	21.7
[21.154] Power shuttle transmission internal components .....	21.8

[21.160] Creeper .....	21.9
[21.162] Reverser .....	21.10
[21.109] Transmission cooler and lines.....	21.11
[21.118] Transmission/Rear drive .....	21.12
<b>Four-Wheel Drive (4WD) system .....</b>	<b>23</b>
[23.101] Mechanical control .....	23.1
[23.202] Electro-hydraulic control .....	23.2
<b>Front axle system .....</b>	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.400] Non-powered front axle .....	25.4
<b>Rear axle system.....</b>	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.110] One-speed rear Power Take-Off (PTO) .....	31.3
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.4
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1

[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.350] Safety and main relief valves .....	35.4
[35.204] Remote control valves .....	35.5
[35.100] Main lift system.....	35.6
[35.114] Three-point hitch control valve .....	35.7
[35.116] Three-point hitch cylinder .....	35.8
[35.701] Front loader arm hydraulic system .....	35.9
[35.723] Front loader bucket hydraulic system .....	35.10
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.100] Drawbars and towing hitches .....	37.1
[37.110] Rear three-point hitch .....	37.2
[37.120] Rear three-point hitch linkage.....	37.3
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.206] Pump.....	41.4
[41.216] Cylinders .....	41.5
<b>Wheels.....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels .....	44.2
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning.....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.100] Harnesses and connectors.....	55.1

[55.525] Cab engine controls .....	55.2
[55.015] Engine control system.....	55.3
[55.201] Engine starting system .....	55.4
[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.202] Cold start aid .....	55.7
[55.011] Fuel tank system .....	55.8
[55.010] Fuel injection system .....	55.9
[55.014] Engine intake and exhaust system.....	55.10
[55.989] Exhaust Gas Recirculation (EGR) electrical system .....	55.11
[55.012] Engine cooling system .....	55.12
[55.013] Engine oil system .....	55.13
[55.640] Electronic modules .....	55.14
[55.513] Cab transmission controls.....	55.15
[55.020] Transmission speed sensors.....	55.16
[55.021] Transmission pressure sensors and switches .....	55.17
[55.040] Four-Wheel Drive (4WD) control system.....	55.18
[55.522] Cab Power Take-Off (PTO) controls .....	55.19
[55.048] Rear Power Take-Off (PTO) control system .....	55.20
[55.519] Cab brake controls .....	55.21
[55.031] Parking brake electrical system .....	55.22
[55.032] Trailer brake electrical system .....	55.23
[55.036] Hydraulic system control .....	55.24
[55.408] Warning indicators, alarms, and instruments .....	55.25
[55.DTC] FAULT CODES.....	55.26
<b>Front loader and bucket.....</b>	<b>82</b>
[82.AAA] Front loader and bucket generic sub-group .....	82.1
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.150] Cab.....	90.1

[90.151] Cab interior .....	90.2
[90.160] Cab interior trim and panels .....	90.3
[90.154] Cab doors and hatches .....	90.4
[90.110] Operator platform less cab .....	90.5
[90.100] Engine hood and panels .....	90.6

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)