

4408-22

4412-20

4412-22

4416-20

4416-22

4418-20

4418-22

Corn Header

SERVICE MANUAL

Part number 51510601

1st edition English

July 2018





SERVICE MANUAL

4408-22 Eight-row corn header with twenty-two inch row spacing., 4412-20 Twelve-row corn header with twenty inch row spacing., 4412-22 Twelve-row corn header with twenty-two inch row spacing., 4416-20 Sixteen-row corn header with twenty-inch row spacing., 4416-22 Sixteen-row corn header with twenty-two inch row spacing., 4418-20 Eighteen-row corn header with twenty inch row spacing., 4418-22 Eighteen-row corn header with twenty-two inch row spacing.

Contents

INTRODUCTION

Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.603] Deck plate hydraulic system	35.2
[35.910] Head and header hydraulic drive	35.3
Electrical systems.....	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors.....	55.2
[55.404] External lighting	55.3
[55.421] Feeding control system	55.4
[55.662] Header height control	55.5
[55.785] Precision farming system	55.6
[55.995] Chopper slip clutch monitoring system.....	55.7
Attachments/Headers.....	58
[58.100] Attachment/Header support and drives	58.1
[58.120] Attachment/Header feed auger	58.2
[58.130] Attachment/Header frame.....	58.3
[58.208] Corn header shields and guards	58.4
[58.210] Corn header feed chain and rollers	58.5
[58.218] Corn header feeder structure	58.6
[58.220] Corn header structure.....	58.7
[58.224] Header drive	58.8
[58.228] Rotating dividers	58.9
[58.230] Stalk choppers	58.10
[58.414] Row-independent header gearboxes	58.11
Lubrication system.....	71

[71.480] Oiler system 71.1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com