

QUANTUM® 80F
QUANTUM® 90F
QUANTUM® 100F
QUANTUM® 110F
QUANTUM® 80CL
QUANTUM® 90CL
QUANTUM® 100CL
QUANTUM® 110CL

Tractor

PIN ZFLK00441 and above

SERVICE MANUAL

Part number 51523378

English
August 2018

CASE IH
AGRICULTURE

Link Product / Engine

Product	Market Product	Engine
Quantum® 100CL With cab [ZHLK05263 -]	Asia Pacific	F5DFL413K*C001
Quantum® 100CL With cab [ZHLK05263 -]	Europe	F5DFL413K*C001
Quantum® 100CL With cab [ZHLK05263 -]	Middle East Africa	F5DFL413K*C001
Quantum® 100CL Without cab [ZHLK05304 -]	Europe	F5DFL413K*C001
Quantum® 100CL Without cab [ZHLK05304 -]	Asia Pacific	F5DFL413K*C001
Quantum® 100CL Without cab [ZHLK05304 -]	Middle East Africa	F5DFL413K*C001
Quantum® 110CL With cab [ZGLK03974 -]	Europe	F5DFL413J*C002
Quantum® 110CL With cab [ZGLK03974 -]	Asia Pacific	F5DFL413J*C002
Quantum® 110CL With cab [ZGLK03974 -]	Middle East Africa	F5DFL413J*C002
Quantum® 110CL Without cab [ZHLK05256 -]	Middle East Africa	F5DFL413J*C002
Quantum® 110CL Without cab [ZHLK05256 -]	Asia Pacific	F5DFL413J*C002
Quantum® 110CL Without cab [ZHLK05256 -]	Europe	F5DFL413J*C002
Quantum® 80CL With cab [ZHLK07642 -]	Middle East Africa	F5DFL413B*H001
Quantum® 80CL With cab [ZHLK07642 -]	Asia Pacific	F5DFL413B*H001
Quantum® 80CL With cab [ZHLK07642 -]	Europe	F5DFL413B*H001
Quantum® 80CL Without cab [ZHLK07049 -]	Europe	F5DFL413B*H001
Quantum® 80CL Without cab [ZHLK07049 -]	Middle East Africa	F5DFL413B*H001
Quantum® 80CL Without cab [ZHLK07049 -]	Asia Pacific	F5DFL413B*H001
Quantum® 90CL With cab [ZHLK07094 -]	Asia Pacific	F5DFL413L*C001
Quantum® 90CL With cab [ZHLK07094 -]	Middle East Africa	F5DFL413L*C001
Quantum® 90CL With cab [ZHLK07094 -]	Europe	F5DFL413L*C001
Quantum® 90CL Without cab [ZHLK06238 -]	Asia Pacific	F5DFL413L*C001
Quantum® 90CL Without cab [ZHLK06238 -]	Middle East Africa	F5DFL413L*C001
Quantum® 90CL Without cab [ZHLK06238 -]	Europe	F5DFL413L*C001

Product	Market Product	Engine
Quantum® 100F With cab [ZHLK01675 -]	Europe	F5DFL413K*C001
Quantum® 100F With cab [ZHLK01675 -]	Asia Pacific	F5DFL413K*C001
Quantum® 100F With cab [ZHLK01675 -]	Middle East Africa	F5DFL413K*C001
Quantum® 100F Without cab [ZFLK00441 -]	Middle East Africa	F5DFL413K*C001
Quantum® 100F Without cab [ZFLK00441 -]	Europe	F5DFL413K*C001
Quantum® 100F Without cab [ZFLK00441 -]	Asia Pacific	F5DFL413K*C001
Quantum® 110F With cab [ZGLK02439 -]	Middle East Africa	F5DFL413J*C002
Quantum® 110F With cab [ZGLK02439 -]	Europe	F5DFL413J*C002
Quantum® 110F With cab [ZGLK02439 -]	Asia Pacific	F5DFL413J*C002
Quantum® 110F Without cab [ZHLK01638 -]	Europe	F5DFL413J*C002
Quantum® 110F Without cab [ZHLK01638 -]	Middle East Africa	F5DFL413J*C002
Quantum® 110F Without cab [ZHLK01638 -]	Asia Pacific	F5DFL413J*C002
Quantum® 80F With cab [ZHLK01644 -]	Middle East Africa	F5DFL413B*H001
Quantum® 80F With cab [ZHLK01644 -]	Europe	F5DFL413B*H001
Quantum® 80F With cab [ZHLK01644 -]	Asia Pacific	F5DFL413B*H001
Quantum® 80F Without cab [ZHLK02413 -]	Europe	F5DFL413B*H001
Quantum® 80F Without cab [ZHLK02413 -]	Asia Pacific	F5DFL413B*H001
Quantum® 80F Without cab [ZHLK02413 -]	Middle East Africa	F5DFL413B*H001
Quantum® 90F With cab [ZHLK02445 -]	Middle East Africa	F5DFL413L*C001
Quantum® 90F With cab [ZHLK02445 -]	Asia Pacific	F5DFL413L*C001
Quantum® 90F With cab [ZHLK02445 -]	Europe	F5DFL413L*C001
Quantum® 90F Without cab [ZFLK00985 -]	Asia Pacific	F5DFL413L*C001
Quantum® 90F Without cab [ZFLK00985 -]	Europe	F5DFL413L*C001
Quantum® 90F Without cab [ZFLK00985 -]	Middle East Africa	F5DFL413L*C001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.114] Pump drives	10.2
[10.216] Fuel tanks	10.3
[10.206] Fuel filters	10.4
[10.202] Air cleaners and lines	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
[10.310] Aftercooler.....	10.10
[10.304] Engine lubrication system.....	10.11
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components	18.3
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.100] Mechanical transmission hydraulic components.....	21.3
[21.140] Mechanical transmission internal components.....	21.4
[21.112] Power shuttle transmission.....	21.5
[21.134] Power shuttle transmission external controls	21.6
[21.104] Power shuttle transmission hydraulic components	21.7
[21.154] Power shuttle transmission internal components	21.8
[21.160] Creeper	21.9

[21.162] Reverser	21.10
[21.168] Hi-Lo unit.....	21.11
[21.109] Transmission cooler and lines.....	21.12
[21.118] Transmission/Rear drive	21.13
[21.182] Differential.....	21.14
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.304] Four-Wheel Drive (4WD) gearbox	23.2
[23.314] Drive shaft.....	23.3
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.310] Final drives	25.4
[25.400] Non-powered front axle	25.5
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.126] Spur gear and final drives.....	27.4
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.142] Front Power Take-Off (PTO) control	31.2
[31.146] Front Power Take-Off (PTO)	31.3
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2

[33.220] Trailer brake hydraulic control.....	33.3
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.204] Remote control valves	35.3
[35.100] Main lift system.....	35.4
[35.114] Three-point hitch control valve	35.5
[35.124] Three-point hitch hydraulic adjustment	35.6
[35.160] Front hitch controls and lines	35.7
[35.162] Front hitch cylinders and lines	35.8
Hitches, drawbars, and implement couplings.....	37
[37.120] Rear three-point hitch linkage.....	37.1
[37.162] Front hitch.....	37.2
[37.166] Front hitch linkage.....	37.3
[37.110] Rear three-point hitch	37.4
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50
[50.100] Heating.....	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
[50.300] Cab pressurizing system.....	50.4

Electrical systems	55
[55.100] Harnesses and connectors.....	55.1
[55.525] Cab engine controls.....	55.2
[55.015] Engine control system.....	55.3
[55.201] Engine starting system.....	55.4
[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.011] Fuel tank system	55.7
[55.010] Fuel injection system.....	55.8
[55.014] Engine intake and exhaust system.....	55.9
[55.989] Exhaust Gas Recirculation (EGR) electrical system	55.10
[55.640] Electronic modules	55.11
[55.513] Cab transmission controls.....	55.12
[55.024] Transmission control system	55.13
[55.021] Transmission pressure sensors and switches	55.14
[55.541] Cab Front-Wheel Drive (FWD) controls.....	55.15
[55.040] Four-Wheel Drive (4WD) control system.....	55.16
[55.542] Cab axle controls.....	55.17
[55.522] Cab Power Take-Off (PTO) controls	55.18
[55.048] Rear Power Take-Off (PTO) control system	55.19
[55.049] Front Power Take-Off (PTO) control system	55.20
[55.031] Parking brake electrical system.....	55.21
[55.032] Trailer brake electrical system	55.22
[55.512] Cab controls.....	55.23
[55.035] Remote control valve electric control	55.24
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.25
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.26
[55.523] Cab hitch controls	55.27

[55.130] Rear three-point hitch electronic control system	55.28
[55.518] Wiper and washer system.....	55.29
[55.404] External lighting	55.30
[55.405] External lighting switches and relays	55.31
[55.514] Cab lighting	55.32
[55.408] Warning indicators, alarms, and instruments	55.33
[55.DTC] FAULT CODES.....	55.34
Accessories	88
[88.100] Accessories	88.1
Platform, cab, bodywork, and decals	90
[90.150] Cab.....	90.1
[90.151] Cab interior.....	90.2
[90.160] Cab interior trim and panels.....	90.3
[90.154] Cab doors and hatches	90.4
[90.110] Operator platform less cab	90.5
[90.118] Protections and footboards.....	90.6
[90.114] Operator protections	90.7
[90.120] Mechanically-adjusted operator seat.....	90.8
[90.124] Pneumatically-adjusted operator seat.....	90.9
[90.100] Engine hood and panels	90.10

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com