

FARMALL® 90C
FARMALL® 100C
FARMALL® 110C
FARMALL® 120C
Tier 4B (final)
Tractor

PIN HLRFC120LHLF01896 and above

PIN ELRFC110VJLF50027 and above

SERVICE MANUAL

Part number 51543581

1st edition English

November 2018

CASE II
AGRICULTURE



SERVICE MANUAL

Farmall® 100C With cab, with Hi-Lo transmission [HLRFC100EHLF10099 -], Farmall® 100C With cab, with Mechanical transmission, Farmall® 100C With cab, with Power Shuttle transmission [ELRFC100TJLF50006 -], Farmall® 100C Without cab, with Hi-Lo transmission [HLRFC100AJLF03784 -], Farmall® 100C Without cab, with Mechanical transmission, Farmall® 100C Without cab, with Power Shuttle transmission [ELRFC100AJLF50127 -], Farmall® 110C With cab, with Hi-Lo transmission [HLRFC110JJLF01558 -], Farmall® 110C With cab, with Mechanical transmission, Farmall® 110C With cab, with Power Shuttle transmission [ELRFC110VJLF50013 -], Farmall® 110C Without cab, with Hi-Lo transmission [HLRFC110VJLF00235 -], Farmall® 110C Without cab, with Mechanical transmission, Farmall® 110C Without cab, with Power Shuttle transmission [ELRFC110JJLF50034 -], Farmall® 120C With cab, with Hi-Lo transmission [HLRFC120LHLF01896 -], Farmall® 120C With cab, with Mechanical transmission, Farmall® 120C With cab, with Power Shuttle transmission [ELRFC120EJLF50025 -], Farmall® 120C Without cab, with Hi-Lo transmission [HLRFC120CHLF10070 -], Farmall® 120C Without cab, with Mechanical transmission, Farmall® 120C Without cab, with Power Shuttle transmission, Farmall® 90C With cab, with Hi-Lo transmission [HLRFC090LJLF00494 -], Farmall® 90C With cab, with Mechanical transmission, Farmall® 90C With cab, with Power Shuttle transmission [ELRFC090CJLF50096 -], Farmall® 90C Without cab, with Hi-Lo transmission [HLRFC090VJLF05112 -], Farmall® 90C Without cab, with Mechanical transmission, Farmall® 90C Without cab, with Power Shuttle transmission [ELRFC090LJLF50126 -]

Link Product / Engine

Product	Market Product	Engine
Farmall® 100C Without cab, with Mechanical transmission	North America	F5GFL413H*C006
Farmall® 100C With cab, with Mechanical transmission	North America	F5GFL413H*C006
Farmall® 100C Without cab, with Power Shuttle transmission [ELRFC100AJLF50127 -]	North America	F5GFL413H*C006
Farmall® 100C With cab, with Power Shuttle transmission [ELRFC100TJLF50006 -]	North America	F5GFL413H*C006
Farmall® 100C Without cab, with Hi-Lo transmission [HLRFC100AJLF03784 -]	North America	F5GFL413H*C005
Farmall® 100C With cab, with Hi-Lo transmission [HLRFC100EHLF10099 -]	North America	F5GFL413H*C005
Farmall® 110C Without cab, with Mechanical transmission	North America	F5GFL413G*C006
Farmall® 110C With cab, with Mechanical transmission	North America	F5GFL413G*C006
Farmall® 110C Without cab, with Power Shuttle transmission [ELRFC110JJLF50034 -]	North America	F5GFL413G*C006
Farmall® 110C With cab, with Power Shuttle transmission [ELRFC110VJLF50013 -]	North America	F5GFL413G*C006
Farmall® 110C Without cab, with Hi-Lo transmission [HLRFC110VJLF00235 -]	North America	F5GFL413G*C006
Farmall® 110C With cab, with Hi-Lo transmission [HLRFC110JJLF01558 -]	North America	F5GFL413G*C006
Farmall® 120C Without cab, with Mechanical transmission	North America	F5GFL413F*C011
Farmall® 120C With cab, with Mechanical transmission	North America	F5GFL413F*C011
Farmall® 120C Without cab, with Power Shuttle transmission	North America	F5GFL413F*C011
Farmall® 120C With cab, with Power Shuttle transmission [ELRFC120EJLF50025 -]	North America	F5GFL413F*C011
Farmall® 120C Without cab, with Hi-Lo transmission [HLRFC120CHLF10070 -]	North America	F5GFL413F*C010
Farmall® 120C With cab, with Hi-Lo transmission [HLRFC120LHLF01896 -]	North America	F5GFL413F*C010
Farmall® 90C Without cab, with Mechanical transmission	North America	F5GFL413J*C006

Product	Market Product	Engine
Farmall® 90C With cab, with Mechanical transmission	North America	F5GFL413J*C006
Farmall® 90C Without cab, with Power Shuttle transmission [ELRFC090LJLF50126 -]	North America	F5GFL413J*C006
Farmall® 90C With cab, with Power Shuttle transmission [ELRFC090CJLF50096 -]	North America	F5GFL413J*C006
Farmall® 90C Without cab, with Hi-Lo transmission [HLRFC090VJLF05112 -]	North America	F5GFL413J*C005
Farmall® 90C With cab, with Hi-Lo transmission [HLRFC090LJLF00494 -]	North America	F5GFL413J*C005

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.206] Fuel filters	10.3
[10.202] Air cleaners and lines	10.4
[10.254] Intake and exhaust manifolds and muffler	10.5
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.6
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
[10.310] Aftercooler.....	10.10
[10.304] Engine lubrication system.....	10.11
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components	18.3
[18.112] Slip clutch or flywheel damper	18.4
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.100] Mechanical transmission hydraulic components.....	21.3
[21.112] Power shuttle transmission.....	21.4
[21.110] Master clutch housing	21.5
[21.134] Power shuttle transmission external controls	21.6
[21.104] Power shuttle transmission hydraulic components	21.7
[21.154] Power shuttle transmission internal components	21.8

[21.160] Creeper	21.9
[21.162] Reverser	21.10
[21.168] Hi-Lo unit.....	21.11
[21.109] Transmission cooler and lines.....	21.12
[21.118] Transmission/Rear drive	21.13
[21.148] Transmission/Rear drive internal components	21.14
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.400] Non-powered front axle	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.110] One-speed rear Power Take-Off (PTO)	31.3
[31.114] Two-speed rear Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.224] Trailer brake pneumatic control	33.3

Hydraulic systems	35
[35.304] Combination pump units	35.1
[35.204] Remote control valves	35.2
[35.100] Main lift system.....	35.3
[35.114] Three-point hitch control valve	35.4
[35.116] Three-point hitch cylinder	35.5
Hitches, drawbars, and implement couplings	37
[37.100] Drawbars and towing hitches	37.1
[37.108] Rear three-point hitch external controls.....	37.2
[37.110] Rear three-point hitch	37.3
[37.120] Rear three-point hitch linkage.....	37.4
Steering	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders	41.4
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50
[50.100] Heating.....	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.100] Harnesses and connectors.....	55.1
[55.525] Cab engine controls.....	55.2
[55.015] Engine control system.....	55.3
[55.201] Engine starting system.....	55.4

[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.202] Cold start aid	55.7
[55.011] Fuel tank system	55.8
[55.010] Fuel injection system.....	55.9
[55.014] Engine intake and exhaust system.....	55.10
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.11
[55.640] Electronic modules	55.12
[55.513] Cab transmission controls.....	55.13
[55.024] Transmission control system.....	55.14
[55.020] Transmission speed sensors	55.15
[55.022] Transmission temperature sensors	55.16
[55.048] Rear Power Take-Off (PTO) control system	55.17
[55.031] Parking brake electrical system	55.18
[55.512] Cab controls.....	55.19
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.20
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.21
[55.523] Cab hitch controls	55.22
[55.130] Rear three-point hitch electronic control system	55.23
[55.518] Wiper and washer system.....	55.24
[55.404] External lighting	55.25
[55.405] External lighting switches and relays	55.26
[55.408] Warning indicators, alarms, and instruments	55.27
[55.035] Remote control valve electric control	55.28
[55.DTC] FAULT CODES.....	55.29
Front loader and bucket.....	82
[82.100] Arm.....	82.1
Accessories	88

[88.100] Accessories	88.1
Platform, cab, bodywork, and decals	90
[90.150] Cab	90.1
[90.151] Cab interior	90.2
[90.160] Cab interior trim and panels	90.3
[90.154] Cab doors and hatches	90.4
[90.156] Cab windshield and windows	90.5
[90.110] Operator platform less cab	90.6
[90.118] Protections and footboards	90.7
[90.120] Mechanically-adjusted operator seat	90.8
[90.124] Pneumatically-adjusted operator seat	90.9
[90.100] Engine hood and panels	90.10
[90.102] Engine shields, hood latches, and trims	90.11
[90.116] Fenders and guards	90.12

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com