

**686G, 686GXR and 688G SERIES 2
TELESCOPIC HANDLERS
Service Manual
7-16041**

Table of Contents

Description	Section No.	Form No.
General		
	Tab 1	
Section Index - General		7-16070
Standard Torque Specification	1001	8-71601
Fluids and Lubricants	1002	7-16080
Safety and General Information	1003	7-16090
Loctite Product Chart		8-98902
Engine		
	Tab 2	
Section Index- Engine		7-90140
Diesel Engine Specifications	2000	7-16100
Engine and Transmission Removal and Installation	2001	7-89691
Engine Troubleshooting	2002	7-89701
Fuel System		
	Tab 3	
Section Index- Fuel System		7-16110
Electrical		
	Tab 4	
Section Index - Electrical		7-16700
Electrical System General	4000	7-16710
Electrical Schematics and Troubleshooting	4001	7-16720
Electrical Gauges and Senders	4005	7-89741
Alternator	4007	7-49250
Steering		
	Tab 5	
Section Index - Steering		7-90170
How It Works	5000	7-89751
Steering Specifications	5001	7-89760
Steering Troubleshooting	5002	7-89771
Steering Pump and Steering Column	5003	7-89781
Steering Selector Valve	5004	7-89791
Steering Priority Valve	5005	7-89800

Reprinted

**686G, 686GXR and 688G SERIES 2
TELESCOPIC HANDLERS
Service Manual
7-16041**

Table of Contents

Description	Section No.	Form No.
Power Train		Tab 6
Section Index - Power Train		7-90180
How It Works	6000	7-89820
Removal and Installation of Power Train Components	6001	7-16730
Transmission Specifications and Troubleshooting	6002	7-89841
Drive Axle	6004	7-16740
Brakes		Tab 7
Section Index - Brakes		7-90190
How It Works	7000	7-16750
Brake System Specifications	7001	7-89870
Brake System Troubleshooting	7002	7-89880
Brake System Removal and Installation of Components	7003	7-89891
Hydraulics		Tab 8
Section Index - Hydraulics		7-90201
How It Works	8000	7-16760
Hydraulic Specifications, Schematics and Troubleshooting	8001	7-17210
Hydraulic Specifications, Schematics and Troubleshooting 686GXR P.I.N. JFE0001848 and after, 688G P.I.N. JFE0003613 and after	8001	6-49340
Removal and Installation of Hydraulic Components	8002	7-90281
Hydraulic Cylinders	8006	7-16770
Hydraulic and Fuel Tanks	8007	7-89930
Mounted Equipment and Chassis		Tab 9
Section Index- Mounted Equipment and Chassis		7-90210
How It Works	9000	7-16780
Specifications, and Troubleshooting	9001	7-16790
Removal and Installation of Boom Components	9005	7-16800
Electrical Schematic and Hydraulic Schematic Foldout - 686G,686GXR, and 688G		7-17200
Electrical Schematic and Hydraulic Schematic Foldout - 686GXR Series 2 Machines P.I.N. JFE0001848 and After and 688G Series 2 Machines P.I.N. JFE0003613 and After		6-49430

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com