

MX80C, MX90C and MX100C Tractors

Service Manual Don 7-72626

Table of Contents

Binder 1 Contains Tabs 1 to 6
Binder 2 Contains Tabs 7 to 10

	Section	Pub. No.
1 GENERAL		
Loctite Product Chart		8-98902
Safety Rules, General Information and Torque Specifications.....	1001	8-86531
General Specifications and Torques	1002	7-72192
Special Tools	1005	7-72202
2 ENGINE		
Engine Removal	2001	7-72210
NOTE: For Service and Overhaul procedures refer to your Engine Service Manual Don 7-71721.		
3 FUEL SYSTEM		
Fuel Tank Removal and Servicing.....	3005	7-72220
NOTE: For Service and Overhaul procedures refer to your Engine Service Manual Don 7-71721.		
4 ELECTRICAL		
Electrical Schematics	4001	7-73860
Instrument Cluster Programming.....	4002	7-71332
Battery Servicing and Testing.....	4004	7-73210
5 STEERING		
How It Works	5	7-72230
Steering Column and Steering Hand Pump	5001	7-72241
Danfoss Steering Hand Pump	5002	7-73341
Eaton Steering Hand Pump.....	5002	7-73351
Rexroth Steering Hand Pump.....	5002	7-73960
6 TRANSMISSION		
How It Works	6	7-72260
Separating the Tractor (Engine and Speed Transmission) and Torque Dampener	6002	7-72270
Separating the Speed and Range Transmission	6003	7-72280
Servicing the Powershift Transmission	6006	7-72290
Range Transmission Servicing.....	6007	7-66111
Powershift Valve.....	6009	7-66131
Shuttle Valve	6010	7-66141

.....continued

NOTE: Information contained in this Manual may cover features that are not available in all markets worldwide.

CASE CORPORATION
 700 State Street
 Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
 3350 South Service Road
 Burlington, ON L7N 3M6 CANADA

Don 7-72636

Copyright © 2000 Case Corporation
 Printed in U.S.A.
 April 1998 (Revised October 2000)

Synchronizer Creep Transmission	6011	7-72780
Differential and Differential Lock	6012	7-66161
MFD Drive Shaft.....	6014	7-72330
MFD Output Shaft and Bearing.....	6015	7-72771
MFD Clutch	6017	7-72340
Rear Axles and Planetaries.....	6018	7-72350
PTO - Reversible and Shiftable.....	6019	7-66201
PTO Front Drive Shaft and Hydraulic Pump Drive Gear prior to Transmission Serial Number JKA475119.....	6023	7-66221
PTO Front Drive Shaft and Hydraulic Pump Drive Gear from Transmission Serial Number JKA475120.....	6023	7-72710
 7 BRAKES		
How It Works.....	7	7-72380
Parking Brake	7001	7-72720
Service Brakes	7002	7-72390
Hydraulic Trailer Brake.....	7004	7-67711
 8 HYDRAULICS		
How it Works	8	7-72320
How to Read Hydraulic Schematics	8000	8-94372
Hydraulic Troubleshooting and Schematic.....	8001	7-72660
Charge Pump/Transfer Pump	8003	7-66290
Hydraulic Valves	8006	7-66331
Hydraulic Schematic Poster		7-72820
 9 CHASSIS AND MOUNTED EQUIPMENT		
Pedal, Lever Adjustments	9001	7-72441
Air Conditioner Troubleshooting (Visual and Operating)	9002	7-73002
Air Conditioner Troubleshooting (Gauges and Testing)	9003	7-73010
Air Conditioner System Service (Refrigerant Recovery, System Evacuation and Recharging)	9004	7-72860
Air Conditioner System Components Servicing	9005	7-72460
Cab Removal and Tilting the Cab Roof.....	9006	7-72470
 10 CONTROLLER SYSTEMS		
Hitch/MFD/Differential Lock Controller Calibration, Error Codes and Schematics	10002	7-73562
PTO/FNR Controller and Powershift Configuration, Error Codes and Schematics.....	10006	7-73571
Programming the PTO/FNR Controller and Hitch/MFD/Differential Lock Controller	10010	7-74001

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com