

689G Telescopic Handler Service Manual 7-88730

Table of Contents

Description	Section No.	Form No.
General		
	Tab 1	
Section Index - General		7-90040
Safety, General Information	1001	7-88740
General Specifications and Torques	1002	7-88750
Engine		
	Tab 2	
Section Index-Engine		7-90050
Diesel Engine	2000	7-88760
Engine and Transmission Removal and Installation	2001	7-88770
Fuel System		
	Tab 3	
Section Index-Fuel System		7-90060
Fuel System and Filters	3410	7-88780
Electrical		
	Tab 4	
Section Index - Electrical		7-90070
Electrical General Information	4000	7-88790
Electrical Schematics and Troubleshooting	4001	7-88800
Electrical Gauges and Senders	4005	7-88810
Steering		
	Tab 5	
Section Index - Steering		7-90080
How It Works	5000	7-88820
Steering Specifications	5001	7-88830
Steering Troubleshooting	5002	7-88840
Steering Pump and Steering Column	5003	7-88850
Steering Selector Valve	5004	7-88860
Steering Cylinders	5005	7-88870
Power Train		
	Tab 6	
Section Index - Power Train		7-90090
How It Works	6000	7-88880
Removal and Installation of Power Train Components	6001	7-88890
Transmission Specifications, Pressure Checks and Troubleshooting	6002	7-88900
Drive Axle	6004	7-88910

689G Telescopic Handler Service Manual 7-88730

Table of Contents

Description	Section No.	Form No.
Brakes		
	Tab 7	
Section Index - Brakes		7-90100
How It Works	7000	7-88920
Brake System Checks, Adjustments and Specifications	7001	7-88930
Removal and Installation of Brake Components	7002	7-88940
Brake Troubleshooting	7003	7-88950
Parking Brake	7008	7-88960
Hydraulics		
	Tab 8	
Section Index - Hydraulics		7-90110
How It Works	8000	7-88970
Removal and Installation of Hydraulic Components	8001	7-88980
Hydraulic Troubleshooting, Checks/Adjustments and Specifications	8002	7-88990
Hydraulic Cylinders	8006	7-89000
Hydraulic and Fuel Tanks	8007	7-89010
Mounted Equipment And Chassis		
	Tab 9	
Section Index - Mounted Equipment and Chassis		7-90120
How It Works	9000	7-89020
Troubleshooting, Checks/Adjustments and Specifications	9001	7-89030
Removal and Installation of Boom Components	9005	7-89040
Removal of Hoods	9006	7-89050
Electrical Schematic and Hydraulic Schematic Foldout - 689G		7-15440

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com