

**Maxxum 135
Maxxum 150
Maxxum 165
Maxxum 180
Tractors**

Service Manual

Print No. 73403962
1st Edition
English 05/09





MAXXUM 135-150-165-180 TRACTORS REPAIR MANUAL

VOLUME 1

GENERAL INSTRUCTIONS	00
ENGINE	10
CLUTCH	18
TRANSMISSION	21
TRANSMISSION SHAFTS	23
FRONT MECHANICAL SHAFT	25
MECHANICAL REAR WHEEL DRIVE	27
POWER TAKE-OFF	31
BRAKE SYSTEM.....	33

VOLUME 2

HYDRAULIC SYSTEM	35
STEERING	41
AUXILIARY UNITS	50
ELECTRICAL SYSTEM.....	55
CAB	90

S E R V I C E

TABLE OF CONTENTS

	Page		Page
00 – SPECIFICATIONS		Adjusting the clearance of the transmission drive shaft end	46
General instructions.....	1	Adjusting the driven gear bearings.....	47
Safety norms	3	Adjusting the conical bearing on the output shaft and the drive shaft.....	48
Refuelling.....	6	Control valve group for the semi-powershift reducer (Disassembling – Installing)	50
10 – ENGINE		Control valve group for the semi-powershift reducer (Disassembling – Installing)	53
General specifications	3	Control solenoid for the semi-powershift reducer (Disassembling – Installing)	56
Assembly dimensions.....	4	Control valve group for the semi-powershift transmission (Disassembling – Installing)	58
Tightening torques.....	7	Semi-powershift transmission solenoid (Replacement)....	60
Special tools	11	CHAPTER 2 – Range command transmission (semi-powershift) calibration, troubleshooting, testing the pressure and creeper	
Engine cold start.....	11	Introduction.....	2
Cooling system.....	12	Error codes – Range command (Remi-powershift) logic for the error display	3
Lubrication system.....	13	Error Codes	6
Fault diagnosis	14	Transmission diagnostic procedure	9
Removing and installing the engine in the tractor.....	17	Pressure Test.....	23
Disassembling the engine	22	H1 – Calibrations.....	26
Assembling the engine	37	H2 – Viewing the turning angle calibration	27
Checking and measuring.....	59	CHAPTER 3 – Mechanical Transmission 15x12 (“Synchro Command”)	
Valve clearance adjustment.....	78	Specifications	1
Rotary injection pump removal, installation and synchronization	79	Tightening Torques	4
18 – CLUTCH		Special Tools	7
Specifications	1	Transmission Views and Sections.....	10
Tightening torques.....	2	Description and Operation.....	15
Sections.....	3	Power Flow Diagrams	16
Special tools	4	Troubleshooting	19
Description and operation.....	4	Transmission Removal and Assembly.....	20
Troubleshooting.....	4	Transmission Disassembly and Assembly	40
LUK Clutch (Removal – Installation).....	7	CHAPTER 4 – Mechanical Transmission 16x16	
Hydraulic Clutch Control (Removal – Installation).....	15	Specifications	1
Hydraulic Clutch Control (Disassembly – Assembly)....	19	Tightening torques.....	4
21 – TRANSMISSION		Special tools	6
CHAPTER 1 – Semi-powershift (range command) transmission		Longitudinal Sections	9
Specifications	1	Description and Operation.....	13
Tightening torques.....	3	Troubleshooting	13
Special tools	5	Mechanical transmission housing Removal – Installation	14
Sections.....	10		
Description and operation.....	12		
Semi-Powershift transmission housing (Disassembling – Installing)	15		
Semi-Powershift transmission (Disassembling – Reassembling).....	30		

	Page		Page
23 – TRANSMISSION SHAFTS			
Specifications	1	Rear Axle Housing (Replacement)	36
Tightening Torques	2	Sprocket Gear And Pinion Adjustments.....	46
Special Tools	2	Adjusting The Hydraulic Pump Intermediate Pinion	56
Sections.....	4	Hydraulic Lock Differential Set (Disassembling – Installing)	58
Troubleshooting.....	5	Rear Differential Lock Set (Disassembling – Installing) ...	62
Description and Operation.....	5	Final Drive Housing (Left Or Right Hand Side) (Disassembling – Installing)	64
Hydraulic Flow Charts	6	Flywheel Shaft (Disassembling – Installing).....	67
Transmission and Bearing Shaft (Disassembling – Installing)	8	Epicyclical Reducer Set (Disassembling – Installing)....	71
Transmission Box Shaft oil Seal (Replacing with the transmission box shaft removed from the tractor).....	9	31 – POWER TAKE OFF	
Electro-Hydraulic Clutch Transfer Box (Disassembling – Installing)	10	Specifications	1
25 – FRONT MECHANICAL SHAFT			
Specifications	1	Tightening torques.....	3
Tightening Torques	3	Special tools	3
Special Tools	4	Section Views	4
Sections.....	5	Description and operation.....	5
Description and Operation.....	6	Troubleshooting	13
Troubleshooting – Hydraulic Differential Lock.....	8	Power Take Off (Pto) (Removal – Installation)	15
Mechanical Shaft Set (Disassembling – Installing).....	9	33 – BRAKES	
Planetary Gear Set (Disassembly – Installation).....	12	CHAPTER 1 – Tractor Brakes	
Wheel Hub and Articulated Pins Set (Disassembling – Installing)	16	Specifications	1
Steering Angle Potentiometer (Replacement).....	19	Tightening torque.....	2
Sprocket Gear/ Differential Transporter (Installing – Disassembling)	20	Section views.....	2
Front Clutch Differential Lock (Servicing).....	24	Special tools	4
Pinion Of The Front Shaft And Sprocket Gear (Servicing).....	27	Description and operation.....	5
Adjusting The Pinion And Sprocket Gear	30	Troubleshooting	5
Front Shaft Differential Set (Servicing).....	37	Brakes, Right Or Left (Disassembling – Installing).....	7
Articulated Pins and Bearings (Replacement).....	38	Main Hydraulic Brake Cylinder (Disassembling – Installing)	11
Front Wheel Toe-in Test	39	Hydraulic brake system	13
Front Clutch Differential Lock (Servicing).....	40	Parking Brake Set (Disassembling – Installing).....	15
27 – MECHANICAL REAR-WHEEL DRIVE			
Specifications	1	Manual brake control.....	20
Tightening torques.....	3	35 – HYDRAULIC SYSTEM	
Special tools	5	CHAPTER 1 – Hydraulic circuits	
Sections.....	8	Introduction and circuit identification	2
Description and operation.....	10	Center Closed High Pressure Hydraulic Circuit with Load Sensor	4
Troubleshooting	12	Hydraulic circuit schematics	5
Rear Axle Housing (Disassembling – Installing).....	14	Operation of The Low Pressure Circuit Tractors with Semi Powershift Transmission.....	9
		Low Pressure and Steering Lubrication Circuit Tractors with Semi Powershift Transmission.....	11

	Page		Page
CHAPTER 2 – Variable flow hydraulic pump		Description and operation.....	3
Special tools	2	Oil flow in neutral	8
Specifications	3	Oil flow in raise (Extend cylinder)	10
Tightening torques	4	Oil flow in lower (Retract cylinder)	12
Description and operation.....	5	Oil flow in float	14
Operation of the hydraulic circuit	11	Lock pressure regulator valve operation	16
Troubleshooting	21	Troubleshooting and pressure test	18
Pressure test and pump yield	28	Reconditioning.....	19
Service.....	38	Disassembling and assembling the remote valve	23
Disassembling the pump	42	Adjusting the cables	31
Installation	44		
CHAPTER 3 – Fixed displacement gear pumps		CHAPTER 7 – Open center remote control valves	
Specifications	1	Specifications	1
Tightening torques	3	Tightening torques.....	1
Special tools	4	Special tools	1
Sections.....	5	Sections	2
Description and operation.....	5	Description and operation.....	4
Hydraulic lift system oil pump (Disassembling – Installing)	6	Remote control valves (Disassembling – Installing)	8
Assembling the power steering and hydraulic lift pump control	8	Remote control valves (Removed) (Disassembly – Assembly)	10
		Adjusting the automatic release pressure	12
		Flow control calibrator (Disassembly – Assembly)	13
		Flow control calibrator (Adjusting the flow rate – on the tractor)	14
CHAPTER 4 – Electronic effort control		CHAPTER 8 – Trailer Brake Auxiliary Valve	
Specifications	2	Sections.....	1
Special tools	2	Description and operation.....	1
Tightening torques.....	3	Troubleshooting and trailer brake valve pressure test...	10
Description and operation.....	4		
Components	7	CHAPTER 9 – Auxiliary Cylinder	
Range Command	10	Specifications	1
Effort control operation	14	Sections.....	1
Hydraulic operation of the lift control valve.....	18	Description and Operation.....	1
Troubleshooting and calibration	29	Auxiliary cylinder (Disassembling – Installing).....	2
Servicing diagnostic test routines	32	Auxiliary cylinder (Disassembling – Installing).....	2
Range command tractors electronic effort control error codes	41		
Calibrating the EDC valve	44	41 – STEERING	
Servicing.....	47	Specifications	2
Installation	48	Special tools	3
Replacing the load sensor pin	49	Description and operation.....	4
Reconditioning the hydraulic lift cover.....	50	Troubleshooting	7
Hydraulic lift troubleshooting table.....	57	System tests.....	8
Reconditioning the electronic effort control valve	65	Hydraulic steering distributor (Service).....	11
		Disassembling and installing the steering rod	19
		Four-wheel drive vehicles steering cylinder – Disassembling and Installing	20
CHAPTER 6 – Closed center remote control valves			
Special tools	2		
Specifications	2		
Tightening torques.....	2		

	Page		Page
50 – AUXILIARY UNITS			
Specifications	1	Disassembling and installing the starter motor	6
Torques	1	Removing and installing the starter motor	7
Special tools	2	Bench testing	9
Safety measures	2	CHAPTER 7 – Charge System	
Principles of the air conditioner	3	Specifications	1
System components – Description and operation	7	Tightening torques	1
Troubleshooting and testing		Description and operation	2
the air conditioning system	14	Testing the system and troubleshooting	4
Performance test diagnostic	17	Servicing the alternator and testing the components	10
Testing for leaks, discharging		Inspection and Repair	15
and reloading, washing the system	31	Reassembly	16
Servicing the components (excluding the compressor) ...	36	Installation	16
Compressor – Servicing		CHAPTER 8 – Battery	
(Disassembling the compressor)	43	Specifications	1
Servicing the cylinder head	52	Description and operation	1
55 – ELECTRICAL SYSTEM			
CHAPTER 1 – Introduction			
Electrical system and fuses	2	Disassembly and installation	2
Electronic/electrical system protection during		Maintaining and testing the battery	3
recharge or welding	11	Recharging the Battery	4
Controls and instruments – Location and function	12	Common Causes of Battery Faults	7
Disassembling and replacing the switches	21	CHAPTER 9 – Electric Schematics	
Testing the components and specifications	24	Symbology	2
CHAPTER 3 – Electronic instrument cluster			
Introduction	1	MAXXUM 135, 150, 165 and 180 with	
Transmitters, sensors and switches	9	Platform and Mechanical Transmission (15x12)	3
Next service warning setup	15	MAXXUM 135, 150, 165 and 180 with	
Installing the tractor performance monitor	17	Cab and Mechanical Transmission (15x12)	25
EIC assistance	19	MAXXUM 135, 150, 165 and 180 with	
Diagnostic memory	20	Cab and SPS Transmission (18x6)	59
Instrument panel byte levels	21	CHAPTER 11 – “H” menu diagnostic routines	
CHAPTER 4 – Analog/Electronic instrument panel			
Introduction	1	Introduction	2
Transmitters, Sensors & Switches	5	Clutches and synchronizers calibration	2
EIC assistance	11	Transmission – Programmable Functions	6
CHAPTER 6 – Starting System			
Specifications	1	Electronic Draft Control	7
Tightening torques	1	Electronic Management Unit – XCM	10
Operation	2	“H” Menus and Calibrations	11
Troubleshooting	3	Electronic Management Unit – XCM	17
Testing the starter motor system on the tractor	4	Electronic instrument cluster (EIC) (Optional)	18
		“H” Menus for Transmission	23
		“H” Menus for Hydraulic Lift Test (LH)	36
		Transmission Error Codes	44
		Hydraulic Lift (LH) System Error Codes	46
		Electronic Management Unit Error Codes	47
		Menu H9 test – Hydraulic Lift	48

Page

90 – CAB

CHAPTER 1 – Replacing the Glass

Removal – Intact glass 1
Removal – Broken glass..... 2
Replacement – New glass..... 3
Replacement – Placed glass 4

CHAPTER 2 – Internal Cab Components

Disassembling and Installing the Floor of the Vehicle 1
Disassembling and Installing
the Heater Device Fan Motor 4
Disassembling and Installing the
Windscreen Wiper Device Motors 5

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com