

Table of Contents

6000 AND 6500 WINDROWERS

SERIES	SECTION	DESCRIPTION	FORM NUMBER
10		GENERAL	
	1-1	Tractor Specifications	8-27950
	1-2	Draper Header and Conditioner Specifications	8-27950
	1-3	Auger Header and Conditioner Specifications	8-27950
	1-4	Tools	8-27950
	1-5	Torque Chart	8-27950
	1-6	Hydraulic Fitting Chart	8-27950
	1024	Diesel Engine Specifications	8-24161
20		ENGINE	
	2-1	Engine Removal	8-27950
		Gasoline	
	2A-1	General Specifications	8-27950
	2A-2	Tune-Up Specifications	8-27950
	2A-3	Engine Removal	8-27950
	2A-4	Basic Engine	8-27950
	2A-5	Cylinder Head, Valves and Timing Chain	8-27950
	2A-6	Block, Pistons and Connecting Rods	8-27950
	2A-7	Crankshaft, Main Journals and Bearings	8-27950
	2A-8	Lubrication System	8-27950
	2A-9	Cooling System	8-27950
	2A-10	Air Intake System	8-27950
		Diesel	
	2415	Cylinder Head and Valve Train	8-24171
	2425	Cylinder Block, Crankshaft, Pistons, Rods, Bearings and Camshaft	8-24181
	2445	Lubrication System - Oil Pan, Oil Pump, Oil Cooler and Filter Housing ...	8-24191
	2455	Cooling System - Thermostat, Water Pump, Fan Pulley and Belt Tensioner ..	8-24201
30		FUEL SYSTEM - Gasoline Engines	
	3-1	Fuel Injectors	8-27950
	3-2	Carburetor	8-27950
	3-3	Governor and Throttle Linkage	8-27950
		FUEL SYSTEM - Diesel Engines	
	3-4	System Layout	8-27950
	3-5	Throttle Linkage	8-27950
	3-6	Troubleshooting	8-27950
	3410	Fuel System and Filters	8-24211
	3412	Fuel Injection Pump	8-27080
	3413	Fuel Injectors	8-24231
40		ELECTRICAL	
	4-1	Component Specifications	8-27950
	4-2	Wiring Diagram	8-27950
	4-3	Alternator - Gasoline Engines	8-27950
	4-4	Neutral Switch Adjustment	8-27950
	4-5	Circuit Breaker and Gauges	8-27950
	4-6	Sending Switches	8-27950
	4-7	Starter Motor - Gasoline Engine	8-27950
	4-8	Ignition System - Gasoline Engine	8-27950
	4-9	Sending Switches - Gasoline Engine	8-27950
	4-10	Troubleshooting	8-27950
	4006	Starting Motor - Diesel Engine	8-44340
	4240	Alternator - Diesel Engine	8-25690

Table of Contents

6000 AND 6500 WINDROWERS

SERIES	SECTION	DESCRIPTION	FORM NUMBER
50		SEERING	
	5	Steering Linkage	8-27950
	5	Ground Speed	8-27950
60		POWER TRAIN	
	6-1	Tractor	8-27950
	6-2	Draper Header	8-27950
	6-3	Common Components	8-27950
	6-4	Draper Header - 36 foot	8-27950
	6-5	Auger Header	8-27950
70		BRAKES	
	7-2	Brake Shoes	8-27950
	7-3	Parking Brake Adjustments	8-27950
80		HYDRAULIC	
	8-1	Tractor	8-27950
	8-2	Draper Header	8-27950
	8-3	Auger Header	8-27950
90		CHASSIS	
	9-1	Tractor	8-27950
	9-2	Draper Header	8-27950
	9-3	Draper Header - 36 foot	8-27950
	9-4	Auger Header	8-27950
	9-0	Air Conditioning and Heating	8-27950

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com