

1835B UNI-LOADER

TABLE OF CONTENTS

DIVISION/SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Safety Rules, Service Manual Introduction, and Torque Specifications	1001	8-42080
Maintenance and Lubrication	1002	8-42080
General Engine Specifications - 188 Diesel Engine	1010	8-24290
Detailed Engine Specifications - 188 Diesel Engine	1027	9-78675
General Engine Specifications - 148 Spark Ignition Engine	1110	8-24300
Detailed Engine Specifications - 148 Spark Ignition Engine	1129	9-79086
2 ENGINES		
Engine Removal and Installation, Engine Accessories (Air Cleaner, Muffler, Ether Injection System, Radiator)	2000	8-42080
188 DIESEL ENGINE		
Engine Diagnosis	2001	9-78875
Engine Tune-Up	2002	9-78825
Cylinder Head, Valve Train, and Camshaft	2015	9-78836
Cylinder Block, Sleeves, Pistons, and Rods	2025	9-78855
Crankshaft, Bearings, Flywheel, and Oil Seals	2035	9-78866
Oil Pump	2045	9-78885
Cooling System	2055	9-78816
Engine Lubrication	See Section 2555	
148 SPARK IGNITION ENGINE		
Engine Tune-Up	2102	8-22800
Cylinder Head, Valve Train, and Camshaft	2115	8-22810
Cylinder Block, Sleeves, Pistons, and Rods	2125	8-22820
Crankshaft, Bearings, Flywheel, and Oil Seals	2135	8-22830
Oil Pump	2145	8-22840
Cooling System	2155	8-22850
Engine Lubrication - 188 Diesel Engine	2555	9-78985
3 FUEL SYSTEM		
Engine Controls, Fuel Line, Fuel Tank, and Hand Primer Pump .	3001	8-42080
Fuel Filters - 188 Diesel Engine	3010	8-22771
Fuel Injection Pump - 188 Diesel Engine	3012	9-78795
Fuel Injectors - 188 Diesel Engine	3013	9-78807
Carburetor - 148 Spark Ignition Engine	3112	8-22871
4 ELECTRICAL		
Electrical System Troubleshooting	4002	8-42080
Wiring Diagrams	4003	8-42080
Fuel Gauge and Warning Lamps	4004	8-41760
Battery	4005	8-41760
Starter	4006	8-41760
Alternator	4007	8-41760
Distributor Ignition System	4008	8-41760

DIVISION/SECTION	SECTION NO.	FORM NO.
6 POWER TRAIN		
Hydrostatic System Troubleshooting	6002	8-42080
Hydrostatic System Diagrams and Operation	6003	8-42080
Piston Pump	6004	8-42080
Hydrostatic Motor	6005	8-42080
Hydrostatic Controls	6006	8-42080
Drive Sprockets, Chains, and Axle Housings	6007	8-42080
Drive Coupling	6010	8-42080
Wheels and Tires	6011	8-42080
7 BRAKES		
Parking Latch	7001	8-42080
8 HYDRAULICS		
Hydraulic System Specifications, Diagrams, Troubleshooting, Pressure Checks, Flowmeter Tests	8002	8-42080
Cleaning the Hydraulic System	8003	8-42080
Equipment and Charge Pump	8004	8-42080
Loader Control Valve	8005	8-42080
Auxiliary Control Valve	8006	8-42080
Backhoe Control Valve	8007	8-42080
Cylinders	8009	8-42080
9 MOUNTED EQUIPMENT		
Loader	9001	8-42080
Backhoe	9002	8-42080
ROPS Canopy, Operators Seat	9003	8-42080
Decals, Painting, and Noise Control	9005	8-42080

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com