

1187/1187B FELLER BUNCHER TABLE OF CONTENTS

DIVISION/SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Safety Rules, Service Manual Introduction, and Torque Specifications	1001	8-42210
Maintenance and Lubrication	1002	8-42211
General Engine Specifications (Case Engine)	1010	8-25770
General Cleaning Instructions	1055	8-38240
Detailed Engine Specifications (Case Engine)	1320	8-20040
2 ENGINE		
Engine Removal and Installation	2000	8-42210
Engine Accessories (Air Cleaner, Ether Injection System, Turbocharger, Mufflers)	2001	8-42210
Engine Tune-Up	2002	9-76379
Cylinder Head, Valve Train, and Camshaft	2015	8-22560
Cylinder Block, Sleeves, Pistons, and Rods	2025	9-76176
Crankshaft, Main Bearings, Flywheel, and Oil Seal Replacement	2035	9-76187
Lubrication System	2046	8-22780
Pump Drive Plate	2053	8-42210
Cooling System	2055	9-76337
Engine Troubleshooting	2201	8-20110
Reconditioning Large Bore Case Engine Blocks	2290	8-21170
Detroit Diesel Engine Manual - Series 71		6-SE-250
3 FUEL SYSTEM		
Fuel Lines, Fuel Tank, and Engine Controls	3001	8-42210
Fuel System and Filters	3010	9-75297
Robert Bosch Fuel Injection Pumps	3012	9-74937
Roosa Master Fuel Injectors	3213	8-20240
4 ELECTRICAL		
Electrical System Specifications and Troubleshooting	4002	8-42211
Wiring Diagrams and Sealed Connector Repair	4003	8-42211
Battery	4005	8-44360
Starter	4006	8-41430
Alternator	4007	8-42680
5 TRACK AND SUSPENSION		
Troubleshooting	5502	8-38240
Track Chain and Shoes, 1187	5503	8-42211
Track Chain and Shoes, 1187B	5504	8-42210
Track Rollers, Carriers, Idler, and Sprocket	5506	8-42211
6 POWER TRAIN		
Troubleshooting	6302	8-38240
Drive Motor Circuit and Lines	6311	8-42210
Drive Motor	6312	8-42210
Final Drive Transmission - 1187	6317	8-42201
Final Drive Transmission - 1187B	6318	8-42201

DIVISION/SECTION	SECTION NO.	FORM NO.
7 BRAKES		
Swing Brake	7011	8-42210
Track Brake	7012	8-42210
8 HYDRAULICS		
Maintenance and Service	8201	8-42210
Hydraulic System Specifications, Schematics, Troubleshooting, and Pressure Checks	8202	8-42211
Hydraulic Pump	8205	8-42210
Control Valves	8207	8-42210
Swing Hydraulic Circuit, Swing Motor, and Swing Relief Valve	8210	8-42210
Boom Hydraulic Circuit	8211	8-42210
Dipper Hydraulic Circuit	8212	8-42210
Rotary Cutter or Tree Shear Hydraulic Circuit	8213	8-42210
Leveler Hydraulic Circuit	8215	8-42211
Hydraulic Swivel	8218	8-42681
Pilot Control System	8220	8-42210
Cylinders	8290	8-42210
9 MOUNTED EQUIPMENT		
Troubleshooting the Swing Mechanism	9202	8-42210
Swing Gearbox	9210	8-42680
Boom and Dipper	9211	8-42210
Tree Shear	9212	8-42210
Rotary Cutter	9213	8-42210
Leveler	9215	8-42210
Turntable Bearing	9216	8-42210
Decals, Painting, and Noise Control	9221	8-42211

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com