

1085B AND 1086B CRUZ-AIR TABLE OF CONTENTS

SERIES/SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Safety Rules, Service Manual Introduction, and Torque Specifications	1001	8-44360
Maintenance and Lubrication	1002	8-44630
General Engine Specifications	1010	8-26390
Detailed Engine Specifications	1024	8-26061
2 ENGINES		
Engine and Radiator Removal and Installation	2000	8-44630
Engine Accessories (Air cleaner, Cold Start System, Muffler)	2001	8-44630
Cylinder Head and Valve Train	2415	8-26071
Cylinder Block, Pistons, Rods, Camshaft Main Bearings, Oil Seals, and Flywheel	2425	8-26081
Lubrication System	2445	8-26091
Cooling System	2455	8-26101
Turbocharger	2465	8-26110
Turbocharger Failure Analysis	2565	9-78235
3 FUEL SYSTEM		
Fuel Lines, Fuel Tank, and Engine Controls	3001	8-44630
Fuel System and Filters	3410	8-26131
Bosch Fuel Injection Pump, Drive Gear, and Timing	3412	8-26141
Fuel Injectors	3413	8-26150
4 ELECTRICAL		
Removal and Installation of Starter and Alternator	4001	8-44630
Electrical System Specifications and Troubleshooting	4002	8-44630
Wiring Diagrams	In Pocket at Rear of Manual	
Batteries	4005	8-44630
Starter	4006	8-42240
Alternator	4007	8-42240
Collector Ring	4016	8-38470
5 STEERING		
Steering System Troubleshooting	5002	8-44630
Steering Control Valves	5007	8-44630
Steering Relief Valve and Steering Reversal Valve	5011	8-44630
Steering Axle and Tie Rod	5021	8-38470
Auxiliary Steering	5022	8-38480
6 POWER TRAIN		
Troubleshooting and Pressure Checks	6102	8-44630
Torque Converter	6110	8-44630
Transmission	6116	8-38220
Transmission Controls	6118	8-44630
Drive Shafts	6122	8-44630
Axle Differential	6126	8-38220
Axle Planetaries	6127	8-38220
Axle Removal and and Installation	6128	8-44630
Wheels and Tires	6129	8-44630

7 BRAKES

Troubleshooting and Air System Schematic	7102	8-44630
Air Compressor and Governor	7103	8-44630
Air Reservoir and Relief Valve	7104	8-44630
Brake Valve, Relay Valve, and Pressure Reducing Valve	7105	8-44630
Brake Actuator, Digging Brake Control Valve, and Double Check Valve	7106	8-44630
Parking Brake Actuator, Parking Brake Valve, and Quick Release Valve	7107	8-44630
Solenoid Valves and Air Cylinders for Transmission Range, Outriggers, and Fast Crowd	7108	8-44630
Air Swivel	7110	8-44630
Alcohol Evaporator	7111	8-44630
Brake Shoes and Wheel Cylinders	7121	8-38470
Swing Brake	See Section 9210	

8 HYDRAULICS

Removal and Installation of Hydraulic Components	8201	8-44630
Hydraulic System Specifications and Troubleshooting	8202	8-44630
Hydraulic Pump for Steering and Outside Control Valve	8205	8-44630
Hydraulic Pump for Outrigger and Inside Control Valve	8206	8-44630
Inside and Outside Control Valves	8207	8-44630
Outrigger Control Valve	8209	8-44630
Swing Motor	8210	8-44630
Boom Hydraulic Circuit	8211	8-44630
Arm Hydraulic Circuit	8212	8-44630
Tool Hydraulic Circuit	8213	8-44630
Hydraulic Swivel	8218	8-38470
Power Sensing Valve	8221	8-38240
Cylinders	8290	8-44630

9 MOUNTED EQUIPMENT

Controls and Linkages	9206	8-44630
Outriggers	9209	8-38220
Swing Geabox and Swing Brake	9210	8-44630
"E" Boom	9211	8-38220
"Y" Boom	9212	8-38220
Attachments	9213	8-44630
Turntable, Bearing, and Related Parts	9216	8-44630

REAR POCKET

Electrical Schematic	850804
Hydraulic Schematic	850926

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com