

1825 Uni-Loader

Table of Contents

DIVISION/SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Safety Rules, Service Manual Introduction, and Torque Specifications	1001	8-68110
Fluids and Lubricants	1002	8-17680
Gasoline Engine Specifications	1010	8-58790
Diesel Engine Specifications.....	1024	8-58760
General Machine Specifications	1210	8-68140
2 ENGINES		
Engine Removal and Installation and Radiator Removal and Installation	2000	8-68480
Engine Accessories.....	2001	8-68490
Cylinder Head and Valve Train - Gasoline Engine	2015	8-58040
Cylinder Head and Valve Train - Diesel Engine	2015	8-58120
Camshafts - Diesel Engine	2020	8-58820
Cylinder Block, Pistons, Rods, Camshaft, Main Bearings, Oil Seals, and Flywheel - Gasoline Engine.....	2025	8-58050
Cylinder Block, Pistons, Rods, Main Bearings, Oil Seals, and Flywheel - Diesel Engine.....	2025	8-58130
Crankshaft - Gasoline Engine	2035	8-58060
Crankshaft - Diesel Engine	2035	8-58140
Lubrication System - Gasoline Engine	2045	8-58070
Lubrication System - Diesel Engine.....	2045	8-58150
Cooling System - Gasoline Engine.....	2055	8-58080
Cooling System - Diesel Engine	2055	8-58160
Ignition System.....	2065	8-58720
Engine Lubrication System - Gasoline Engine.....	2555	8-58090
Engine Lubrication System - Diesel Engine	2555	8-58170
3 FUEL SYSTEM		
Carburetor	3002	8-58730
Fuel Injection Pump	3312	8-58840
Fuel Injectors and Glow Plugs.....	3313	8-58830
4 ELECTRICAL		
Removal and Installation of Electrical Components.....	4000	8-68690
Electrical Specifications, Troubleshooting, and Schematics.....	4002	8-17690
Instruments and Gauges	4004	8-68720
Battery	4005	8-44360
Starter - Gasoline Engine.....	4006	8-58100
Starter - Diesel Engine	4006	8-58180
Alternator - Gasoline Engine.....	4007	8-58110
Alternator - Diesel Engine	4007	8-58190

DIVISION/SECTION	SECTION NO.	FORM NO.
6 POWER TRAIN		
Removal and Installation of Power Train Components	6000	8-70080
Maintenance	6001	8-70090
Hydrostatic System Troubleshooting	6002	8-17700
Piston Pump	6004	8-70110
Motor	6005	8-70120
Sprockets, Chains and Axles	6007	8-70140
Wheels and Tires	6011	8-68310
8 HYDRAULICS		
Removal and Installation of Hydraulic Components	8000	8-70180
Maintenance	8001	8-70190
Hydraulic Schematics, Specifications, and Troubleshooting	8002	8-17710
Cleaning the Hydraulic System and Hydrostatic System	8003	8-68360
Hydraulic Pump	8004	8-70210
Loader Control Valve	8005	8-68380
Auxiliary Control Valve	8006	8-68390
Cylinders	8090	8-68400
9 MOUNTED EQUIPMENT		
Pedals and Levers	9000	8-17720
Loader	9001	8-70230
ROPS Canopy, Seat, Seat Belts, and Operators Compartment	9003	8-70240
Auxiliary Hydraulic Installation	9004	8-70250

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com