

Magnum 235
Magnum 260
Magnum 290
Magnum 315
Magnum 340
Tractor

SERVICE MANUAL

Part number 84417606

English
March 2014



Link Product / Engine

Product	Market Product	Engine
null 18x6, with cab [HC-CZM235TDCM00391 -]	Latin America	F2CFA613P*A010
null 18x6, with cab [ZBCM40980 -]	Latin America	F2CFA613P*A010
null 18x6, with cab [HC-CZM260TDCM00391 -]	Latin America	F2CFA613N*A010
null 18x6, with cab [ZBCM40980 -]	Latin America	F2CFA613N*A010
null 18x6, with cab [HC-CZM290TDCM00391 -]	Latin America	F2CFA613J*A010
null 18x6, with cab [ZBCM40980 -]	Latin America	F2CFA613J*A010
null 18x6, with cab [HC-CZM315TDCM00391 -]	Latin America	F2CFA613F*A010
null 18x6, with cab [ZBCM40980 -]	Latin America	F2CFA613F*A010
null 18x6, with cab [HC-CZM340TDCM00391 -]	Latin America	F2CFA613C*A010
null 18x6, with cab [ZBCM40980 -]	Latin America	F2CFA613C*A010

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.101] Cylinder heads	10.2
[10.114] Pump drives	10.3
[10.202] Air cleaners and lines	10.4
[10.216] Fuel tanks	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.310] Aftercooler.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
Power coupling.....	19
[19.100] Drive shaft.....	19.1
Transmission.....	21
[21.105] Powershift transmission lubrication system	21.1
[21.113] Powershift transmission	21.2
[21.135] Powershift transmission external controls.....	21.3
[21.155] Powershift transmission internal components.....	21.4
[21.200] Dropbox	21.5
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3

Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.114] Two-speed rear Power Take-Off (PTO)	31.3
[31.146] Front Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.106] Variable displacement pump	35.3
[35.114] Three-point hitch control valve	35.4
[35.204] Remote control valves	35.5
[35.300] Reservoir, cooler, and filters.....	35.6
[35.304] Combination pump units	35.7
Pneumatic system	36
[36.100] Pneumatic system.....	36.1
Hitches, drawbars, and implement couplings	37
[37.110] Rear three-point hitch	37.1
Steering	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump.....	41.3

Cab climate control	50
[50.100] Heating	50.1
[50.200] Air conditioning	50.2
[50.300] Cab pressurizing system	50.3
Electrical systems	55
[55.012] Engine cooling system	55.1
[55.015] Engine control system	55.2
[55.024] Transmission control system	55.3
[55.045] Front axle control system	55.4
[55.046] Rear axle control system	55.5
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.6
[55.100] Harnesses and connectors	55.7
[55.130] Rear three-point hitch electronic control system	55.8
[55.201] Engine starting system	55.9
[55.302] Battery	55.10
[55.640] Electronic modules	55.11
[55.DTC] FAULT CODES	55.12
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.102] Engine shields, hood latches, and trims	90.2
[90.124] Pneumatically-adjusted operator seat	90.3
[90.150] Cab	90.4
[90.151] Cab interior	90.5
[90.160] Cab interior trim and panels	90.6

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com