

TABLE OF CONTENTS

1270 TRACTORS PRIOR TO SN8736001

1370 TRACTOR PRIOR TO SN8727601

SERIES	SECTION	DESCRIPTION	FORM
	11	General Specifications 1270 and 1370 Tractors	9-74055
	12	Detailed Specifications 1270 and 1370 Tractors	9-74065
	13	Lubrication 1270 and 1370 Tractors	9-74075
20		ENGINES	
	22	Cylinder Head and Valves, 451BD & 451BDT, 1270 Tractors	9-79632
	22	Cylinder Head and Valves, 504BD & 504BDT, 1370 Tractors	9-78613
	23	Engine Block Assemblies, 451BD & 451BDT, 1270 Tractors	9-79842
	2011	Engine Block Assemblies, 504BD & 504BDT, 1370 Tractors	9-75225
	24	Air Intake System	9-74285
	2013	Cooling System - Engine Oil Filter	9-78894
	2165	Turbocharger System	9-78435
	2565	Turbocharger Failure Analysis	9-78235
30		FUEL SYSTEM	
	3010	Fuel System	9-75297
	3012	Robert Bosch Fuel Injection Pumps	9-74937
	3013	Roosa Master Fuel Injectors	9-74959
	3015	Repairing Polyethylene Fuel Tank	9-76305
	3016	Repairing Nylon Fuel Tank	9-79753
40		HYDRAULICS	
	4005	Testing Tractor Hydraulic System	9-45851
	42	Hydraulic Oil Filters	9-75155
	4011	Hydraulic Charging Pump	9-76285
	4012	Hydraulic 4 Gear Dual Pump	9-76345
	4013	Hydraulic 2 Gear Single Pump	9-76355
	4014	Remote Hydraulic Valves	9-76635
	44	Variable Volume Flow Divider Valve	9-74255
	4017	Draft-O-Matic Hydraulic System	9-74277
	4019	Break-Away Couplings and Hydraulic Cylinders	9-74197
50		STEERING	
	5005	Testing Tractor Steering and Power Break System	9-45911
	5010	Steering Column and Steering Pump	9-74267
	55	Steering Axle and Steering Cylinders	9-74035
60		POWER TRAIN	
	6001	Trouble Shooting RPS-34 Power Shift	9-76037
	62	Power Shift and Four Speed Transmission	9-74115
	63	Differential, Differential Lock, Parking Brake, Brake Cylinders, Planetaries and Axles	9-74105
	64	Hydraulic Pump Drives	9-74335
	6005	Testing RPS-34 Power Shift and PTO	9-45841
	65	Hydraulic PTO	9-74085
	66	Torque Limiter Clutch	9-74345
	6012	Dual, Single and Charging Pump Drive	9-74337
70		BRAKES	
	73	Power Assist Unit and Pedals	9-74095
	7011	Parking Brake, External Linkage	9-74297
	7012	Power Assist Brake Valve and Assembly	9-45871

80	ELECTRICAL	
8010	Wiring Diagrams	9-77106
8011	Cab Wiring Diagram (Starting w/Cab SN 7814176)	9-77698
8011	Cab Wiring Diagram (Prior to Cab SN 7814176)	9-77125
8012	Starting or Cranking Motors	9-75366
8013	Battery Servicing and Testing	9-75377
8014	Prestolite Alternator Systems	9-75399
90	ACCESSORIES & MISC.	
92a	Cab Sealing and Recirculation	9-75915
9005	Trouble Shooting -Air Conditioning System	9-78895
9015	Gauging and Testing - Air Conditioning System	9-78995
9025	Compressor Isolation, Removal, Installation and Evacuation - System Discharging, Evacuation and Charging	9-79015
9035	Servicing Air Conditioning Components	9-78705
9050	Operator's Seat Adjustment	9-79755
100	HOW IT WORKS - TROUBLE SHOOTING	
10012	PTO Control Valve, RH Dual Pump, LH Single Pump	9-76465
14014	Remote Hydraulic Valve	9-76556
14015	Variable Volume Flow Divider Valve	9-79615
141	Draft-O-Matic Hydraulic System	9-74415
141	Differential Lock	9-74435
151	Steering Hand Pump and Valve	9-74385
10019	Power Take Off	9-76595
16030	Power Shift	9-76496
17010	Power Brakes	9-76506
19010	Air Conditioning	9-78615

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com