

730, 830, 930 Series Tractors

Service Manual

9-75861

Reprinted



TABLE OF CONTENTS

730-830 CK DRAFT-O-MATIC TRACTORS

Description	Group	Section	Page
Specifications, General (engine wear limits, torque specifications)	I	C	C-1 thru C-8
Specifications, Electrical (generator, regulator, starters)	I	F- 9-75871	F-1 thru F-26
Wiring Diagrams	I	Form 9-75791	Supplement # 1
Diesel Engine Cylinder Head Assembly (rocker arms, manifold, valves)	II	K	K-1 thru K-16
Spark Ignition Cylinder Head Assembly (rocker arms, manifolds, valves)	II	L	L-1 thru L-13
Assemblies in the Engine Block (oil pump, pistons, connecting rods, sleeves, rings, crankshaft, camshaft, lifters, injection pump drive)	II	M	M-1 thru M-48
Engine Counter Balancer	II	M & Supp #1	M-108 thru M-124
Water Pump	II	M & Supp #1	M-125 thru M-132
Spark Ignition Governor	II	M & Supp #2	M-1 thru M-8
Checking Spark Ign. Governor Linkage	II & III	Form 9-75711	
Gasoline Carburetors	III	N	N-1 thru N-27
Gas Fuel Shut-Off (Grove)	III	4N	4N-1 thru 4N-3
LP Gas Carburetor & Regulators	III	6N	6N-1 thru 6N-12
Diesel Fuel Injector	III	I	I-1 thru I-25
Case Diesel Powrcel	III	I	I-26 thru I-32
Diesel Fuel Injection Pump (adjustments, timing)	II	I	I-33 thru I-43
Hydraulic Cylinders	IV	A & Supp #1	A-1 thru A-8 A-1 thru A-4
Hydraulic Pump	IV	DD	DD-1 thru DD-7
Auxiliary Hydraulic Valve (pressure check, relief valve)	IV	D	D-1 thru D-11
Draft-O-Matic Hydraulic System	IV	R	R-1 thru R-31
Steering System (mechanical, hydraulic, toe-in, gear hsg. cyl.)	V	O	O-1 thru O-60

TABLE OF CONTENTS (CONTINUED) **730-830 CK DRAFT-O-MATIC TRACTORS**

Description	Group	Section	Page
Power Steering Pump (pressure check, relief valve)	V	P	P-1 thru P-23
Transmission (brake linings, speedometer drive, and differential)	VI	S	S-1 thru S-60
Traction Clutch (hand and foot)	VI	SS	SS-1 thru SS-12
PTO Clutch	VI	3S	3S-1 thru 3S-15
Case-O-Matic Drive (torque converter, valve, pump, pressure check, relief valves)	VI	X	X-1 thru X-28

TABLE OF CONTENTS

930 CK DRAFT-O-MATIC TRACTORS

Description	Group	Section	Page
Specifications, General (engine wear limits, torque specifications)	I	CC	CC-1 thru CC-8
Specifications, Electrical	I	Form 9-75701 . .	F-1 thru F-26
Wiring Diagrams	I	Form 9-75701 . .	Supplement # 1
Diesel Engine Cylinder Head Assembly (rocker arms, manifolds, valve)	I	K	K-1 thru K-16
Spark Ignition Cylinder Head Assembly (rocker arms, manifolds, valves)	I	L	L-1 thru L-13
Assemblies in Engine Block (oil pump, pistons, connecting rod, sleeves, rings, crankshaft, camshaft, lifters, injection pump drive)	II	M	M-1 thru M-48
Water Pump	II	M Supp #1 . .	M-125 thru M-132
Spark Ignition Governor	II	M Supp #2 . .	M-1 thru M-8
Checking Spark Ign. Governor Linkage	II & III	Form 9-75711	
Gasoline Carburetor	III	NN	NN-1 thru NN-16
Gasoline Fuel Shut-Off (Electric)	III	4N	4N-1 thru 4N-3
Gasoline Fuel Pump (Electric)	III	3N	3N-1 thru 3N-3
LP Gas Carburetor & Regulator	III	5N	5N-1 thru 5N-8
Diesel Fuel Injectors	III	I	I-1 thru I-25
Case Diesel Powrcel	III	I	I-36 thru I-32
Diesel Fuel Injection Pump (adjustments timing)	II	I	I-33 thru I-43
Hydraulic Cylinders	IV	A & Supp #1 . .	A-1 thru A-8 A-1 thru A-4
Hydraulic Pump	IV	DD	DD-1 thru DD-7
Auxiliary Hydraulic Valve (pressure relief check, relief valve)	IV	D	D-1 thru D-11
Draft-O-Matic System	IV	R	R-1 thru R-31
Steering System (mechanical, hydraulic, toe- in, gear hsg., cylinders)	V	O	O-1 thru O-60

TABLE OF CONTENTS (CONTINUED) **930 CK DRAFT-O-MATIC TRACTORS**

Description	Group	Section	Page
Power Steering Pump (pressure check, relief valve)	V	P	P-1 thru P-23
Transmission (brake linings, speedometer drive, and differential)	VI	S	S-1 thru S-60
Traction Clutch	VI	4S	4S-1 thru 4S-8
PTO Clutch	VI	3S	3S-1 thru 3S-15

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com