

4


4

0

B



Service Manual

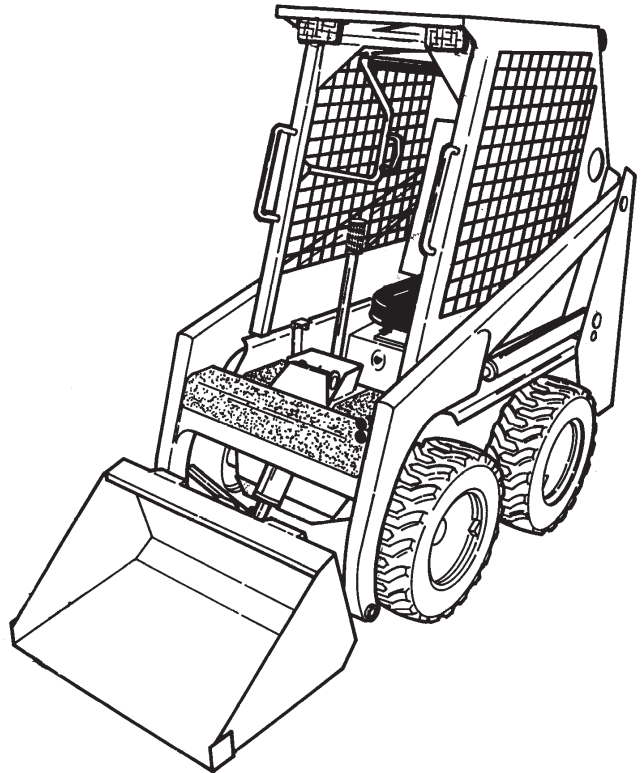

FOREWORD

This manual gives the owner/operator necessary operating, servicing and adjustment of the Bobcat loader and overhaul instructions of the drive system, loader hydraulic/hydrostatic system and general main frame parts.

Refer to the Operator's Manual for operating instructions (Starting Procedure, Daily Checks, Bucket Operation, etc.)

A general inspection of the following items must be made whenever the loader has had service or repair:

1. Check hydraulic fluid level, engine oil level and fuel supply.
2. Inspect for any sign of fuel, oil or hydraulic fluid leaks.
3. Lubricate the loader.
4. Check the condition of the battery and cables.
5. Inspect air cleaner for damage or leaks. Check element and replace as needed.
6. Check electrical charging system.
7. Check tires for wear and pressure.
8. Inspect Operator Cab, Seat Belt, Seat Bar, Safety Treads, Lights, Horn, Safety Signs (Decals), Brake etc.
9. Inspect for loose or broken parts or connections.
10. Operate the loader and check all functions.
11. Inform the Owner/Operator of any items that need service.

**PREVENTIVE
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

**MAIN
FRAME**

**ELECTRICAL
SYSTEM**

**ENGINE
SERVICE**

**TECHNICAL
DATA**

CONTENTS

SAFETY INSTRUCTIONS	i
FIRE PREVENTION	ii
SERIAL NUMBER LOCATIONS	iii
DELIVERY REPORT	iii
BOBCAT LOADER IDENTIFICATION	iv
PREVENTIVE MAINTENANCE	1
HYDRAULIC SYSTEM	2
HYDROSTATIC SYSTEM	3
DRIVE SYSTEM	4
MAIN FRAME	5
ELECTRICAL SYSTEM	6
ENGINE SERVICE	7
TECHNICAL DATA	8

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com