

# **1150M**

## **Tier 4A (interim)**

### **Crawler Dozer**

*PIN NCDC11500 and above; PIN NDDC11000 and above;  
PIN NEDC11000 and above; PIN NFDC11000 and above;  
PIN NFC105000 and above*

## **SERVICE MANUAL**

**Part number 51418567**

2<sup>nd</sup> edition English

November 2017

Replaces part number 47907865

**CASE**  
CONSTRUCTION



## **SERVICE MANUAL**

**1150M Long Track (LT) - Tier 4A (interim) and Stage IIIB [NFC105000 - ], 1150M Long Track (LT) [NCDC11500 - ], 1150M Long Track (LT) [NDDC11000 - ], 1150M Long Track (LT) [NEDC11000 - ], 1150M Long Track (LT) [NFDC11000 - ], 1150M Wide Track (WT) / Low Ground Pressure (LGP) [NCDC11500 - ], 1150M Wide Track (WT) / Low Ground Pressure (LGP) [NDDC11000 - ], 1150M Wide Track (WT) / Low Ground Pressure (LGP) [NEDC11000 - ], 1150M Wide Track (WT) / Low Ground Pressure (LGP) [NFDC11000 - ], 1150M Wide Track (WT) / Low Ground Pressure (LGP) - Tier 4A (interim) and Stage IIIB [NFC105000 - ]**

# Link Product / Engine

Product	Market Product	Engine
1150M Long Track (LT) - Tier 4A (interim) and Stage IIIB [NFC105000 - ]	North America	F4HFE613F*A002
1150M Wide Track (WT) / Low Ground Pressure (LGP) - Tier 4A (interim) and Stage IIIB [NFC105000 - ]	North America	F4HFE613F*A002
1150M Long Track (LT) [NCDC11500 - ]	North America	F4HFE613F*A002
1150M Long Track (LT) [NDDC11000 - ]	North America	F4HFE613F*A002
1150M Long Track (LT) [NEDC11000 - ]	North America	F4HFE613F*A002
1150M Long Track (LT) [NFDC11000 - ]	North America	F4HFE613F*A002
1150M Wide Track (WT) / Low Ground Pressure (LGP) [NCDC11500 - ]	North America	F4HFE613F*A002
1150M Wide Track (WT) / Low Ground Pressure (LGP) [NDDC11000 - ]	North America	F4HFE613F*A002
1150M Wide Track (WT) / Low Ground Pressure (LGP) [NEDC11000 - ]	North America	F4HFE613F*A002
1150M Wide Track (WT) / Low Ground Pressure (LGP) [NFDC11000 - ]	North America	F4HFE613F*A002

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.202] Air cleaners and lines .....	10.2
[10.206] Fuel filters .....	10.3
[10.216] Fuel tanks .....	10.4
[10.304] Engine lubrication system.....	10.5
[10.310] Aftercooler.....	10.6
[10.400] Engine cooling system .....	10.7
[10.414] Fan and drive .....	10.8
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.9
<b>Hydrostatic drive</b> .....	<b>29</b>
[29.218] Pump and motor components.....	29.1
<b>Brakes and controls</b> .....	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
[33.202] Hydraulic service brakes .....	33.2
<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.105] Charge pump.....	35.4
[35.359] Main control valve.....	35.5
[35.741] Dozer blade cylinders .....	35.6
<b>Tracks and track suspension</b> .....	<b>48</b>
[48.130] Track frame and driving wheels.....	48.1
[48.100] Tracks .....	48.2

[48.134] Track tension units .....	48.3
[48.138] Track rollers .....	48.4
[48.140] Dropbox and final drive .....	48.5
[48.AAA] Tracks and track suspension generic sub-group .....	48.6
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning .....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.011] Fuel tank system .....	55.2
[55.014] Engine intake and exhaust system.....	55.3
[55.015] Engine control system.....	55.4
[55.030] Service brake electrical system .....	55.5
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.6
[55.100] Harnesses and connectors.....	55.7
[55.201] Engine starting system .....	55.8
[55.202] Cold start aid .....	55.9
[55.301] Alternator.....	55.10
[55.302] Battery.....	55.11
[55.408] Warning indicators, alarms, and instruments .....	55.12
[55.512] Cab controls.....	55.13
[55.518] Wiper and washer system.....	55.14
[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.15
[55.DTC] FAULT CODES.....	55.16
<b>Dozer blade and arm.....</b>	<b>86</b>
[86.110] Dozer blade .....	86.1
[86.124] Dozer pushbeams and struts .....	86.2

Platform, cab, bodywork, and decals .....	90
[90.150] Cab .....	90.1
[90.160] Cab interior trim and panels .....	90.2
[90.120] Mechanically-adjusted operator seat .....	90.3
[90.124] Pneumatically-adjusted operator seat .....	90.4
[90.100] Engine hood and panels .....	90.5

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)