

I 650M **Stage IIIB** **Crawler Dozer**

*PIN NCDC16500 and above; PIN NDDC16500 and above;
PIN NEDC16000 and above; PIN NFDC16000 and above*

SERVICE MANUAL

Part number 47907869

2nd edition English

October 2015

Replaces part number 47619918

CASE
CONSTRUCTION



SERVICE MANUAL

1650M Extra Long Track (XLT), Bulldozer (BD) Blade [NCDC16500 -], 1650M Extra Long Track (XLT), Bulldozer (BD) Blade [NDDC16500 -], 1650M Extra Long Track (XLT), Bulldozer (BD) Blade [NEDC16000 -], 1650M Extra Long Track (XLT), Bulldozer (BD) Blade [NFDC16000 -], 1650M Extra Long Track (XLT), Power Angle Tilt (PAT) Blade [NCDC16500 -], 1650M Extra Long Track (XLT), Power Angle Tilt (PAT) Blade [NDDC16500 -], 1650M Extra Long Track (XLT), Power Angle Tilt (PAT) Blade [NEDC16000 -], 1650M Extra Long Track (XLT), Power Angle Tilt (PAT) Blade [NFDC16000 -], 1650M Wide Track (WT) / Low Ground Pressure (LGP), Power Angle Tilt (PAT) Blade [NCDC16500 -], 1650M Wide Track (WT) / Low Ground Pressure (LGP), Power Angle Tilt (PAT) Blade [NDDC16500 -], 1650M Wide Track (WT) / Low Ground Pressure (LGP), Power Angle Tilt (PAT) Blade [NEDC16000 -], 1650M Wide Track (WT) / Low Ground Pressure (LGP), Power Angle Tilt (PAT) Blade [NFDC16000 -]

Link Product / Engine

Product	Market Product	Engine
1650M Extra Long Track (XLT), Bulldozer (BD) Blade [NCDC16500 -]	Europe	F4HFE6132*A004
1650M Extra Long Track (XLT), Bulldozer (BD) Blade [NDDC16500 -]	Europe	F4HFE6132*A004
1650M Extra Long Track (XLT), Bulldozer (BD) Blade [NEDC16000 -]	Europe	F4HFE6132*A004
1650M Extra Long Track (XLT), Bulldozer (BD) Blade [NFDC16000 -]	Europe	F4HFE6132*A004
1650M Extra Long Track (XLT), Power Angle Tilt (PAT) Blade [NCDC16500 -]	Europe	F4HFE6132*A004
1650M Extra Long Track (XLT), Power Angle Tilt (PAT) Blade [NDDC16500 -]	Europe	F4HFE6132*A004
1650M Extra Long Track (XLT), Power Angle Tilt (PAT) Blade [NEDC16000 -]	Europe	F4HFE6132*A004
1650M Extra Long Track (XLT), Power Angle Tilt (PAT) Blade [NFDC16000 -]	Europe	F4HFE6132*A004
1650M Wide Track (WT) / Low Ground Pressure (LGP), Power Angle Tilt (PAT) Blade [NCDC16500 -]	Europe	F4HFE6132*A004
1650M Wide Track (WT) / Low Ground Pressure (LGP), Power Angle Tilt (PAT) Blade [NDDC16500 -]	Europe	F4HFE6132*A004
1650M Wide Track (WT) / Low Ground Pressure (LGP), Power Angle Tilt (PAT) Blade [NEDC16000 -]	Europe	F4HFE6132*A004
1650M Wide Track (WT) / Low Ground Pressure (LGP), Power Angle Tilt (PAT) Blade [NFDC16000 -]	Europe	F4HFE6132*A004

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.206] Fuel filters	10.3
[10.216] Fuel tanks	10.4
[10.304] Engine lubrication system.....	10.5
[10.310] Aftercooler.....	10.6
[10.400] Engine cooling system	10.7
[10.414] Fan and drive	10.8
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.9
Hydrostatic drive	29
[29.218] Pump and motor components.....	29.1
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.105] Charge pump.....	35.4
[35.359] Main control valve	35.5
[35.741] Dozer blade cylinders	35.6
Tracks and track suspension	48
[48.130] Track frame and driving wheels.....	48.1
[48.100] Tracks	48.2

[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
[48.140] Dropbox and final drive	48.5
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.011] Fuel tank system	55.2
[55.014] Engine intake and exhaust system.....	55.3
[55.015] Engine control system.....	55.4
[55.030] Service brake electrical system	55.5
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.6
[55.100] Harnesses and connectors.....	55.7
[55.201] Engine starting system	55.8
[55.202] Cold start aid	55.9
[55.301] Alternator	55.10
[55.302] Battery.....	55.11
[55.408] Warning indicators, alarms, and instruments	55.12
[55.512] Cab controls.....	55.13
[55.518] Wiper and washer system.....	55.14
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.15
[55.DTC] FAULT CODES.....	55.16
Dozer blade and arm.....	86
[86.110] Dozer blade	86.1
[86.124] Dozer pushbeams and struts	86.2
Tools	89
[89.128] Ripper assembly	89.1

Platform, cab, bodywork, and decals	90
[90.150] Cab	90.1
[90.160] Cab interior trim and panels	90.2
[90.124] Pneumatically-adjusted operator seat	90.3
[90.100] Engine hood and panels	90.4

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com