

I 650M
Stage IIIB
Crawler Dozer

PIN NGC107000 and above

SERVICE MANUAL

Part number 48048567

1st edition English

April 2017

CASE
CONSTRUCTION



SERVICE MANUAL

1650M Extra Long Track (XLT), Bulldozer (BD) Blade - Tier 4B (final) and Stage IIIB [NGC107000 -]

1650M Extra Long Track (XLT), Power Angle Tilt (PAT) Blade - Tier 4B (final) and Stage IIIB [NGC107000 -]

1650M Wide Track (WT) / Low Ground Pressure (LGP), Power Angle Tilt (PAT) Blade - Tier 4B (final) and Stage IIIB [NGC107000 -]

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.206] Fuel filters	10.3
[10.216] Fuel tanks	10.4
[10.304] Engine lubrication system.....	10.5
[10.310] Aftercooler.....	10.6
[10.400] Engine cooling system	10.7
[10.414] Fan and drive	10.8
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.9
Hydrostatic drive	29
[29.218] Pump and motor components.....	29.1
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.105] Charge pump.....	35.4
[35.359] Main control valve	35.5
[35.741] Dozer blade cylinders	35.6
Tracks and track suspension	48
[48.130] Track frame and driving wheels	48.1
[48.100] Tracks	48.2

[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
[48.140] Dropbox and final drive	48.5
[48.AAA] Tracks and track suspension generic sub-group	48.6
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.011] Fuel tank system	55.2
[55.014] Engine intake and exhaust system.....	55.3
[55.015] Engine control system.....	55.4
[55.030] Service brake electrical system	55.5
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.6
[55.100] Harnesses and connectors.....	55.7
[55.201] Engine starting system	55.8
[55.202] Cold start aid	55.9
[55.301] Alternator.....	55.10
[55.302] Battery.....	55.11
[55.408] Warning indicators, alarms, and instruments	55.12
[55.512] Cab controls.....	55.13
[55.518] Wiper and washer system.....	55.14
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.15
[55.DTC] FAULT CODES.....	55.16
Dozer blade and arm.....	86
[86.110] Dozer blade	86.1
[86.124] Dozer pushbeams and struts	86.2
Tools	89

[89.128] Ripper assembly	89.1
Platform, cab, bodywork, and decals	90
[90.150] Cab	90.1
[90.160] Cab interior trim and panels	90.2
[90.124] Pneumatically-adjusted operator seat	90.3
[90.100] Engine hood and panels	90.4

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com