

I650M
Tier 2
Crawler Dozer
PIN NGC107000 and above

SERVICE MANUAL

Part number 48048568
1st edition English
April 2017





SERVICE MANUAL

- 1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Tier 2 [NGC107000 -]**
- 1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Tier 2
[NGC107000 -]**
- 1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Tier 2
[NGC107000 -]**

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.206] Fuel filters	10.3
[10.304] Engine lubrication system.....	10.4
[10.310] Aftercooler.....	10.5
[10.400] Engine cooling system	10.6
[10.414] Fan and drive	10.7
Hydrostatic drive.....	29
[29.218] Pump and motor components.....	29.1
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.105] Charge pump.....	35.4
[35.359] Main control valve.....	35.5
[35.741] Dozer blade cylinders	35.6
Tracks and track suspension	48
[48.130] Track frame and driving wheels	48.1
[48.100] Tracks	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4

[48.140] Dropbox and final drive	48.5
[48.AAA] Tracks and track suspension generic sub-group	48.6
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.011] Fuel tank system	55.2
[55.014] Engine intake and exhaust system	55.3
[55.015] Engine control system	55.4
[55.030] Service brake electrical system	55.5
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.6
[55.100] Harnesses and connectors	55.7
[55.201] Engine starting system	55.8
[55.202] Cold start aid	55.9
[55.301] Alternator	55.10
[55.302] Battery	55.11
[55.408] Warning indicators, alarms, and instruments	55.12
[55.512] Cab controls	55.13
[55.518] Wiper and washer system	55.14
[55.DTC] FAULT CODES	55.15
Dozer blade and arm	86
[86.110] Dozer blade	86.1
[86.124] Dozer pushbeams and struts	86.2
Tools	89
[89.128] Ripper assembly	89.1
Platform, cab, bodywork, and decals	90

[90.160] Cab interior trim and panels..... 90.1
[90.124] Pneumatically-adjusted operator seat..... 90.2
[90.100] Engine hood and panels 90.3

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com