

# 1816, 1816B, AND 1816C UNI-LOADERS

## TABLE OF CONTENTS

DIVISION/SECTION	SECTION NO.	FORM NO.
<b>1 GENERAL</b>		
Safety Rules, Service Manual Introduction, and Torque Specifications .....	1001	8-41040
Maintenance and Lubrication .....	1002	8-41040
Engine Specifications - 1816C .....	1003	8-41040
<b>2 ENGINES</b>		
Troubleshooting a Hard Starting Engine and D61880 Starter (Square Housing) - 1816 and 1816B .....	2001	8-41040
Engine Troubleshooting .....	2002	8-41040
Engine Removal and Installation - 1816 and 1816B and Drive Belts - 1816 .....	2003	8-41040
Engine Removal Installation, 1816C .....	2004	8-41040
Tecumseh Engines Mechanic's Handbook - 1816 and 1816B .....		691462A
Onan Engine - 1816C .....	2006	8-41040
Engine Accessories .....	2007	8-41040
<b>3 FUEL SYSTEM</b>		
Engine Controls, Fuel Lines, Fuel Filter, Electric Fuel Pump .....	3001	8-41040
Carburetor - 1816C .....	3002	8-41040
<b>4 ELECTRICAL</b>		
Electrical System Troubleshooting .....	4002	8-41040
Wiring Diagrams .....	4003	8-41040
Gauges .....	4004	8-41040
Battery .....	4005	8-41040
Starter .....	4006	8-41040
<b>NOTE:</b> Also see the following sections:		
Starter - 1816 and 1816B .....	Sections 2001 and 2005	
Alternator - 1816, 1816B .....	Sections 2001 and 2005	
Alternator - 1816C .....	Sections 2006 and 4002	
Spark Ignition System - 1816, 1816B .....	Sections 2001 and 2005	
Spark Ignition System - 1816C .....	Sections 2006 and 4002	
<b>6 POWER TRAIN</b>		
Hydrostatic Troubleshooting, Testing, and Adjustment for Machines with Vickers Piston Pumps .....	6001	8-41040
Hydrostatic Troubleshooting, Testing, and Adjustment for Machines with Sundstrand Piston Pumps .....	6002	8-41040
Hydrostatic System Diagrams and Operation for Machines with Vickers Piston Pumps .....	6003	8-41040
Hydrostatic System Diagrams and Operation for Machines with Sundstrand Piston Pumps .....	6004	8-41040
Vickers Piston Pump .....	6005	8-41040
Sundstrand Piston Pump .....	6006	8-41040
Hydrostatic Motor .....	6007	8-41040

Reprinted

DIVISION/SECTION	SECTION NO.	FORM NO.
6 POWER TRAIN (CONT'D)		
Hydrostatic Controls for Machines with Vickers Piston Pumps . . .	6008	8-41040
Hydrostatic Controls for Machines with Sunstrand Piston Pumps .	6009	8-41040
Centrifugal Clutch - 1816 . . . . .	6010	8-41040
Electric Clutch - 1816 . . . . .	6011	8-41040
Belt Clutch . . . . .	6012	8-41040
Drive Chains, Drive Axles, and Hubs . . . . .	6013	8-41040
Wheels and Tires . . . . .	6014	8-41040
7 BRAKES		
Parking Brake . . . . .	7001	8-41040
8 HYDRAULICS		
Hydraulic Diagrams, Maintenance, and Troubleshooting . . . . .	8002	8-41040
Cleaning the Hydraulic System . . . . .	8003	8-41040
Equipment Pump . . . . .	8005	8-41040
Equipment Control Valve . . . . .	8007	8-41040
Auxiliary Control Valve . . . . .	8031	8-41040
Cylinders . . . . .	8090	8-41040
9 MOUNTED EQUIPMENT/CHASSIS		
Loader . . . . .	9001	8-41040
Pallet Fork, Manure Fork, and Grapple . . . . .	9002	8-41040
ROPS . . . . .	9003	8-41040
Decals and Painting . . . . .	9004	8-41040
Noise Control . . . . .	9005	8-41040

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)