

1835 UNI-LOADER TABLE OF CONTENTS AND SERVICE MANUAL INTRODUCTION

Table of Contents

SERIES/SECTION	SECTION NO.	FORM NO.
10 SERIES - GENERAL		
General Engine Specifications -		
188D Diesel	1010	8-22720
Decals and Painting	1012	9-68700
Detailed Engine Specifications - 188D Diesel	1027	9-78675
Maintenance and Lubrication	1050	9-68700
Torque Charts	1051	9-68700
Noise Control	1052	9-68700
General Engine Specifications - 148G Spark Ignition	1110	8-22790
Detailed Engine Specifications - 148G Spark Ignition	1129	9-79086
20 SERIES - ENGINE		
Engine Diagnosis	2001	9-78875
Engine Tune-Up - 188D Diesel	2002	9-78825
Cylinder Head, Valve Train and Camshaft - 188D Diesel	2015	9-78836
Cylinder Block, Sleeves, Pistons and Rods - 188D Diesel	2025	9-78855
Crankshaft, Bearings, Flywheel and Oil Seals - 188D Diesel	2035	9-78866
Oil Pump - 188D Diesel	2045	9-78885
General Engine Information	2050	9-68700
Air Cleaner and Muffler	2051	9-68700
Ether Injection	2053	9-68700
Cooling System - 188D Diesel	2055	9-78816
Engine Tune-Up - 148G Spark Ignition	2102	8-22800
Cylinder Head, Valve Train and Camshaft - 148G Spark Ignition	2115	8-22810
Cylinder Block, Sleeves, Pistons and Rods - 148G Spark Ignition	2125	8-22820
Crankshaft, Bearings, Flywheel and Oil Seals - 148G		
Spark Ignition	2135	8-22830
Oil Pump - 148G Spark Ignition	2145	8-22840
Cooling System - 148G Spark Ignition	2155	8-22850
Engine Lubrication - 188D Diesel	2555	9-78985
30 SERIES - FUEL SYSTEM		
Fuel Filters - 188D Diesel	3010	8-22770
Fuel Injection Pump	3012	9-78795
Fuel Injectors	3013	9-78806
Engine Controls, Fuel Lines, and Fuel Tank	3052	9-68700
Carburetor	3112	8-22870
40 SERIES - ELECTRICAL SYSTEM		
Electrical System Specifications and Troubleshooting	4002	9-68700
Wiring Diagram	4003	9-68700
Gauges	4004	9-68700
Battery	4005	9-68700
Starter and Solenoid	4006	9-68700
Alternator	4007	9-68700
Spark Ignition System	4008	9-68700
Electrical Accessories	4015	9-68700

SERIES/SECTION	SECTION NO.	FORM NO.	
60	SERIES - POWER TRAIN		
	Hydrostatic Troubleshooting, Testing, and Adjustments	6302	9-68700
	Hydrostatic System Diagrams and Operation	6304	9-68700
	Piston Pumps	6305	9-68700
	Hydrostatic Motor	6312	9-68700
	Hydrostatic Controls	6318	9-68700
	Drive Sprockets and Chains	6515	9-68700
	Drive Axles and Hubs	6527	9-68700
	Wheels and Tires	6529	9-68700
70	SERIES - BRAKES		
	Parking Latch	7124	9-68700
80	SERIES - HYDRAULIC SYSTEM		
	Hydraulic Diagrams, Maintenance and Troubleshooting	8002	9-68700
	Dual Gear Pump	8005	9-68700
	Equipment Control Valve	8007	9-68700
	Auxiliary Control Valve	8031	9-68700
	Cylinders	8090	9-68700
90	SERIES - MOUNTED EQUIPMENT		
	Loader	9010	9-68700
	Auxiliary Hydraulic Installations	9012	9-68700
	ROPS Canopy	9061	9-68700

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com