

1838 Uni-Loader
Service Manual

Table of Contents

	Description	Section No.	Form No.
General			
		Tab 1	
	Loctite Product Chart		8-98900
	Torque Specifications	1001	8-71601
	Fluids and Lubricants	1002	7-60550
Engine			
		Tab 2	
	Removal and Installation and Radiator Removal and Installation	2001	7-61400
	Specification Details	2002	7-60560
	Special Service Tools	2003	7-61670
	Kubota Workshop Manual V2203-D1-B		97897-01082
Fuel System			
		Tab 3	
	Fuel System and Filters	3410	7-61640
	Injection Pump Timing	3412	7-61650
Electrical			
		Tab 4	
	Removal and Installation of Electrical Components	4001	7-61410
	Electrical Specifications, Troubleshooting and Schematics	4002	7-60570
	Battery	4003	8-11361
Power Train			
		Tab 6	
	Removal and Installation of Power Train Components	6001	7-61420
	Hydrostatic System Troubleshooting	6002	7-60580
	Piston Pumps	6004	7-61430
	Drive Motors	6005	7-61530
	Pump Drive Coupling	6006	7-61590
	Sprockets Chains and Axles	6007	7-61630
	Wheels and Tires	6008	8-11461
Hydraulics			
		Tab 8	
	Remove and Installation of Hydraulic Components	8001	7-61600
	Hydraulic Schematics, Specifications and Troubleshooting	8002	7-60591
	Cleaning the Hydraulic system and Hydrostatic System	8003	8-11521
	Gear Pump	8004	7-61490
	Loader Control Valve	8005	7-61500
	Auxiliary Control Valve	8006	7-61510
	Self-Leveling Control Valve	8007	7-61520
	Backhoe Control Valve - D100 Backhoe	8008	7-61610
	Cylinders	8009	7-61330
Mounted Equipment			
		Tab 9	
	Control Linkages, Pedals, Levers and Chains	9001	7-60600
	Loader	9002	7-61340
	ROPS Canopy, Seat, Seat Belts and Operators Compartment	9003	7-61350
	Backhoe - D100 Backhoe	9005	7-61680

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com