

# 40 CRAWLER Series E

## TABLE OF CONTENTS

SERIES/SECTION	SECTION NO.	FORM NO.
<b>1 GENERAL</b>		
General Specifications .....	1010	8-38230
Detailed Engine Specifications* .....	1020	8-22760
Maintenance and Lubrication .....	1050	8-38240
Torque Charts .....	1051	8-38230
Noise Control .....	1052	8-38240
General Cleaning Instructions .....	1055	8-38240
Safety Rules .....	1056	8-38240
<b>2 ENGINE</b>		
Engine Tune-Up* .....	2002	9-76379
Exhaust System and Muffler .....	2009	8-38240
Cylinder Head, Valve Train and Camshaft* .....	2015	9-76166
Cylinder Block, Sleeves, Piston and Rods* .....	2025	9-76176
Crankshaft, Main Bearings, Flywheel and Oil Seals* .....	2035	9-76187
Lubrication System* .....	2045	9-78046
Air Cleaner .....	2051	8-38230
Pump Drive Plate .....	2053	8-38240
Cooling System* .....	2055	9-76337
Engine Troubleshooting* .....	2201	8-20110
Reconditioning Engine Cylinder Block* .....	2290	8-21170
Turbocharger Failure Analysis .....	2565	9-78235
DETROIT DIESEL ENGINE MANUAL .....	Series 71	6-SE-250
<b>3 FUEL SYSTEM</b>		
Fuel System and Filters* .....	3010	9-75297
Fuel Injection Pump* .....	3012	9-74937
Fuel Tank, Fuel Lines, Fuel Storage and Engine Controls .....	3052	8-38240
Fuel Injectors* .....	3013	9-74959
<b>4 ELECTRICAL SYSTEM</b>		
Diagnosis, Tests and Checks .....	4002	8-38240
Wiring Harness .....	4003	8-38240
Battery Servicing and Testing .....	4005	8-38240
Starter and Starter Solenoid .....	4006	8-38240
Alternator .....	4007	8-38240
<b>5 CRAWLER UNDERCARRIAGE</b>		
Troubleshooting .....	5502	8-38240
Track Chain and Shoes .....	5503	8-38230
Track Rollers, Carrier Rollers, Idlers and Sprockets .....	5506	8-38230

\*Case 504BDT Engine

<b>SERIES/SYSTEM</b>	<b>SECTION NO.</b>	<b>FORM NO.</b>
<b>6 POWER TRAIN</b>		
Troubleshooting .....	6302	8-38240
Drive Motor Circuit and Lines .....	6311	8-38230
Drive Motor — Dual Speed .....	6312	8-38240
Drive Motor — Single Speed .....	6313	8-38230
Final Drive Transmission .....	6317	8-38240
<b>7 BRAKE SYSTEMS</b>		
House Brake .....	7011	8-38240
Track Digging Brake .....	7012	8-38240
<b>8 HYDRAULIC SYSTEM</b>		
Maintenance Service .....	8201	8-38240
Diagnostic Tests and Checks .....	8202	8-38230
Equipment Hydraulic Pump .....	8205	8-38240
Excavator Control Valves .....	8207	8-38230
Swing Motor Hydraulic Circuit, Swing Motor and Cross-Over Relief Valve ..	8210	8-38230
Hoist Hydraulic Circuit .....	8211	8-38230
Crowd Hydraulic Circuit .....	8212	8-38230
Tool Hydraulic Circuit .....	8213	8-38230
Leveler Hydraulic Circuit .....	8215	8-38230
Hydraulic Swivel .....	8218	8-38240
Power Sensing Valve .....	8221	8-38240
Hydraulic Cylinders .....	8290	8-38230
<b>9 CHASSIS/MOUNTED EQUIPMENT</b>		
Troubleshooting .....	9202	8-38240
Controls and Linkages .....	9206	8-38230
Swing Gear Box .....	9210	8-38240
“E” Boom .....	9211	8-38230
“Y” Boom .....	9212	8-38230
Attachments .....	9213	8-38240
Turntable Leveler Assembly .....	9215	8-38230
Turntable, Bearing and Related Parts .....	9216	8-38240

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)