

480C LOADER BACKHOE SERVICE MANUAL

TABLE OF CONTENTS

SERIES/SECTION	SECTION NO.	FORM NO.
1 GENERAL		
General Engine Specifications - 188D Engine	1010	9-79385
Detailed Engine Specifications - 188D Engine	1027	9-78675
Maintenance and Lubrication	1050	9-66025
Torque Charts	1051	9-66025
2 ENGINE		
Engine Diagnosis	2001	9-78875
Engine Tune-Up	2002	9-78825
Cylinder Head, Valve Train and Camshaft	2015	9-78836
Cylinder Block, Sleeves, Pistons and Rods	2025	9-78855
Crankshaft, Bearings, Flywheel and Oil Seals	2035	9-78866
Oil Pump	2045	9-78885
Engine Removal and Installation and Radiator	2050	7-43660
Air Cleaner and Spark Arresting Muffler	2051	9-66025
Engine Stall Tests with Power Shuttle	2052	7-44320
Ether Injection	2053	9-66025
Cooling System	2055	9-78816
Engine Lubrication	2555	9-78985
3 FUEL SYSTEM		
Fuel Filters	3010	9-78785
Fuel Injection Pump	3012	9-78795
Fuel Injectors	3013	9-78806
Engine Controls, Fuel Lines and Fuel Tank	3052	9-66025
4 HYDRAULIC SYSTEM		
Hydraulic Diagrams, Maintenance, Troubleshooting and Pressure Checks	4002	9-66025
Hydraulic Pump	4005	7-43670
Loader Control Valve	4007	7-43680
Three Point Hitch Control Valve	4034	9-66015
Check Valve (Pitch Circuit)	4044	7-43690
Cylinders	4090	7-43700
Backhoe Control Valve	4107	9-66025
Dipper Extension Control Valve	4114	9-66025
Boom Lock System	4121	9-66025
Two Stage Main Relief Valve and Pump Protection Valve	4306	7-43710
Selector Valve	4307	9-66025
PTO Motor	4312	7-43720
5 STEERING SYSTEM		
Hydraulic Diagram, Troubleshooting and Pressure Check	5002	7-43730
Steering Pump	5005	9-66015
Steering Control Valve	5007	7-44310
Steering Cylinders	5010	9-66015
Front Axle	5021	9-66015

SERIES/SECTION	SECTION NO.	FORM NO.
6 POWER TRAIN		
Troubleshooting for Power Shuttle.....	6202	7-43740
Power Shuttle	6210	7-43750
Shuttle Controls.....	6211	7-43760
Transaxle Removal and Installation.....	6212	9-66025
Transaxle and Differential Lock.....	6214	9-79236
Drive Shaft.....	6222	9-66025
Wheels and Tires	6229	9-66025
Clutch and Pressure Plate	6406	9-66015
Two Speed Mechanical Shuttle	6410	9-79116
7 BRAKES		
Brakes (Pedals To Transaxle).....	7106	7-43770
Self-Adjusting Differential Brakes.....	7122	9-79245
8 ELECTRICAL		
Specifications and Troubleshooting	8002	7-43780
Wiring Diagrams.....	8003	7-43790
Instrument Panel and Instrument Cluster	8004	9-66025
Battery	8005	7-43800
Starter and Starter Solenoid.....	8006	9-66015
Alternator	8007	7-43810
Electrical Accessories	8015	9-66016
9 MOUNTED EQUIPMENT		
Loader	9010	7-43820
Three Point Hitch.....	9033	7-43830
ROPS Cab and Canopy.....	9061	7-43840
Backhoe	9100	9-66025

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com