

480D and 480LL TABLE OF CONTENTS

DIVISION/SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Safety Rules, Service Manual Introduction, and Torque Specifications	1001	9-69260
Maintenance and Lubrication	1002	9-69260
General Engine Specifications	1010	8-23060
Detailed Engine Specifications	1027	9-78675
2 ENGINES		
Engine Diagnosis	2001	9-78875
Engine Tune-Up	2002	9-78825
Engine Stall Tests	2003	9-69260
Engine Removal and Installation	2004	9-69260
Engine Accessories	2005	9-69260
Cylinder Head, Valve Train and Camshaft	2015	9-78836
Cylinder Block, Sleeves, Pistons and Rods	2025	9-78855
Crankshaft, Bearings, Flywheel and Oil Seals	2035	9-78866
Oil Pump	2045	9-78885
Cooling System	2055	9-78816
Engine Lubrication	2555	9-78985
3 FUEL SYSTEM		
Fuel Filters	3010	8-22771
Fuel Injection Pump	3012	9-78795
Fuel Injectors	3013	9-78807
Fuel Lines, Fuel Tank, and Engine Controls	3052	9-69260
4 ELECTRICAL		
Electrical System Troubleshooting	4002	9-69260
Wiring Diagrams	4003	9-69260
Batteries	4005	9-69260
Starter	4006	9-69260
Alternator	4007	9-69260
Instrument Cluster and Instrument Panel	4009	9-69270
5 STEERING		
Steering System Troubleshooting	5002	9-69260
Steering Pump	5005	9-69270
Steering Control Valve and Steering Column	5007	9-69260
Steering Cylinders	5010	9-69260
Front Axle	5021	9-69270
6 POWER TRAIN		
Power Shuttle Troubleshooting	6202	9-69260
Power Shuttle and Torque Converter	6210	9-69260
Power Shuttle Controls	6211	9-69260
Transaxle Removal and Installation	6212	9-69260
Transaxle and Differential Lock	6214	9-79237
Driveshaft	6222	9-69270
Wheels and Tires	6229	9-69260

DIVISION/SECTION	SECTION NO.	FORM NO.	
7	BRAKES		
	Brake Pedals and Linkage, Master Cylinder and Parking Brake	7106	9-69260
	Self Adjusting Differential Brakes	7122	9-79246
8	HYDRAULIC SYSTEM		
	Hydraulic System Troubleshooting	8002	9-69260
	Removing Contamination With The Case Portable Filter	8003	9-69260
	Hydraulic Pump	8005	9-69260
	Loader Control Valves	8007	9-69260
	Remote Relief Valve Couplings	8008	9-69260
	Three Point Hitch Control Valves	8009	9-69260
	Cylinders	8090	9-69260
	Backhoe Control Valve	8107	9-69270
	Stabilizer Control Valve	8109	9-69260
	Boom Lock System	8121	9-69260
9	MOUNTED EQUIPMENT/CHASSIS		
	Loader	9010	9-69260
	Three Point Hitch	9033	9-69260
	Cab and Canopy	9061	9-69260
	Operators Seats, Seat Belts, and Supports	9064	9-69260
	26 Backhoe	9100	9-69260
	Decals and Painting	9201	9-69260
	Noise Control	9203	9-69270

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com