



1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

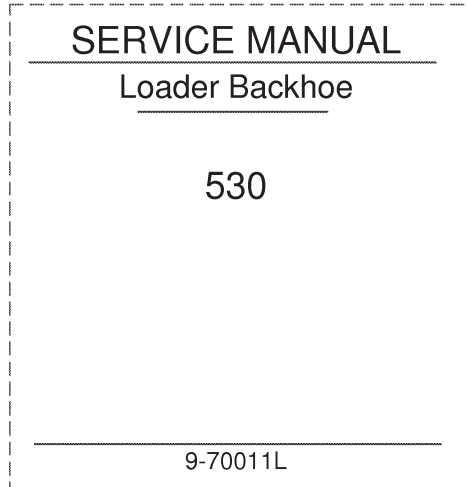


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

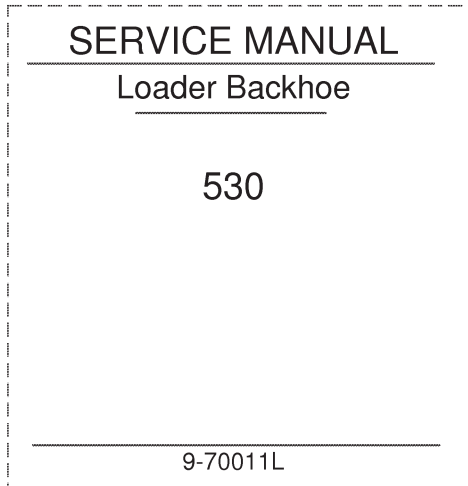

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

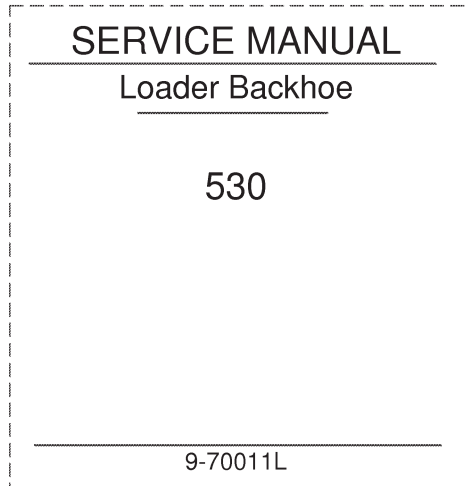

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.


TYPE 1-4

# SECTION IX

## MODEL "530" CONSTRUCTION KING LOADER AND BACKHOE

### TABLE OF CONTENTS

	PAGE
GROUP A — MODEL 530 CONSTRUCTION KING LOADER . . . . .	IX-1
1. LOADER SPECIFICATIONS . . . . .	IX-1
2. LOADER SERIAL NUMBER LOCATION . . . . .	IX-2
3. LOADER LUBRICATION . . . . .	IX-2
4. LOADER-BACKHOE HYDRAULIC SYSTEM . . . . .	IX-3
5. HYDRAULIC PUMP . . . . .	IX-7
6. FLOWMETER . . . . .	IX-12
7. LOADER CONTROL VALVE . . . . .	IX-17
8. HYDRA-LEVELING CIRCUIT . . . . .	IX-31
9. CHECKING AND ADJUSTING LOADER MAIN RELIEF VALVE PRESSURE . . . . .	IX-32
10. CHECKING AND ADJUSTING SECONDARY (KNOCKOUT) RELIEF VALVE PRESSURE . . . . .	IX-32
11. LOADER HYDRAULIC CYLINDERS . . . . .	IX-35
12. SERVICING LOADER . . . . .	IX-39
 GROUP B — MODEL 530 CONSTRUCTION KING BACKHOE . . . . .	 IX-43
1. BACKHOE SPECIFICATIONS . . . . .	IX-43
2. BACKHOE SERIAL NUMBER LOCATION . . . . .	IX-44
3. BACKHOE LUBRICATION . . . . .	IX-44
4. LOADER-BACKHOE HYDRAULIC SYSTEM . . . . .	IX-3, IX-45
5. BACKHOE HYDRAULIC CONTROL VALVE . . . . .	IX-46
6. CHECKING AND ADJUSTING BACKHOE MAIN RELIEF VALVE . . . . .	IX-59
7. BACKHOE SECONDARY (LOAD) RELIEF VALVES . . . . .	IX-60
8. BOOM DROP CONTROL (FLOW RESTRICTOR) . . . . .	IX-65
9. HYDRAULIC CYLINDERS . . . . .	IX-65
10. SERVICING BACKHOE . . . . .	IX-72
 GROUP C — SCHEMATIC ILLUSTRATIONS . . . . .	 IX-77
 GROUP D — HYDRAULIC SYSTEM TROUBLE SHOOTING CHART . . . . .	 IX-79
 GROUP E — TORQUE CHARTS . . . . .	 IX-85

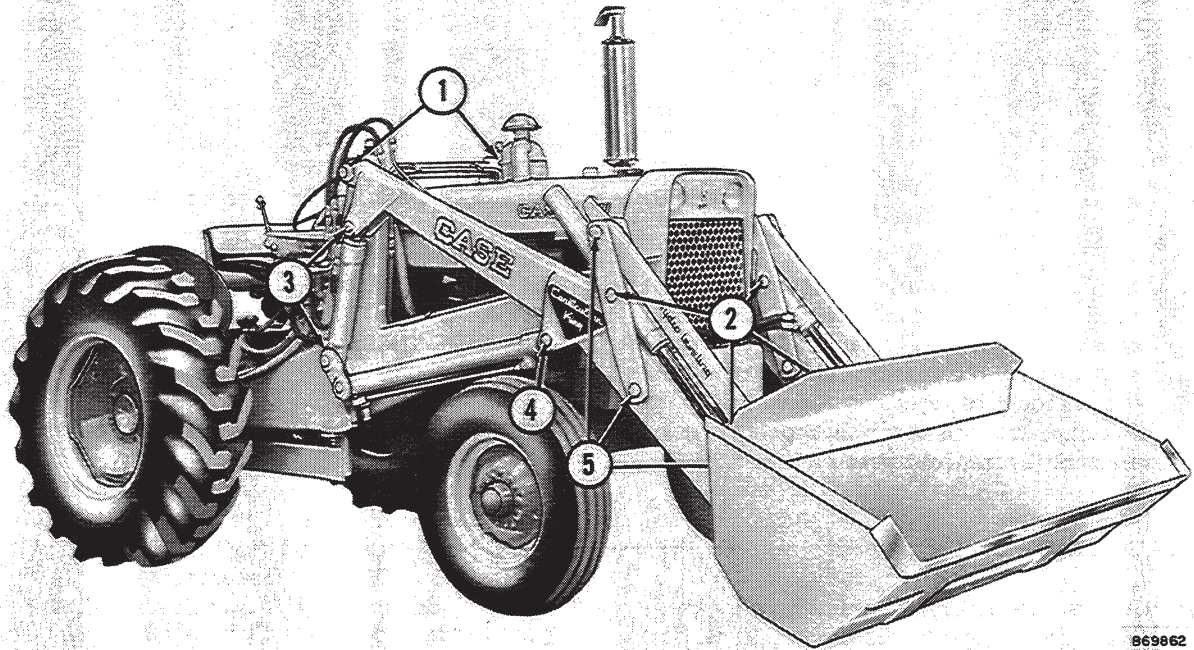

869862

Figure 3 - Loader Pressure Fittings

LOCATION

NO. OF FITTINGS


TIME INTERVAL

1. Cross Shaft	1 on each side	10 Hours
2. Dump Cylinder Pins	1 front, 2 trunnion each side	10 Hours
3. Hydra-Leveling Cylinder	1 each end	10 Hours
4. Lift Cylinder	1 front, 1 rear each side	10 Hours
5. Dump Linkage	3 on each side	10 Hours

## 4. LOADER-BACKHOE HYDRAULIC SYSTEM

### RESERVOIRS

On the Model 530 Construction King Loader or Backhoe, the Loader subframes serve as reservoirs for the hydraulic oil.

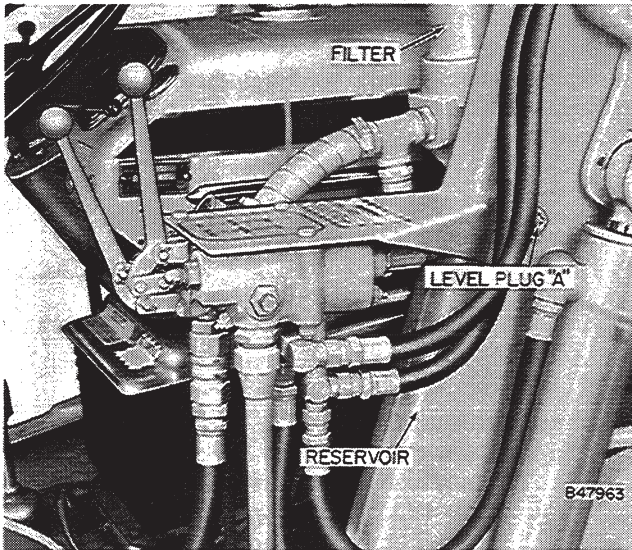


847963

Figure 4 - Hydraulic Reservoir (Loader Only)

### CHECKING HYDRAULIC OIL LEVEL

To check the hydraulic oil level, proceed as follows:

If the Tractor is equipped with a Loader only, the right hand reservoir contains hydraulic oil, see Figure 4. If Tractor is equipped with both a Loader and Backhoe, both the right hand and left hand reservoirs contain hydraulic oil, see Figure 5.

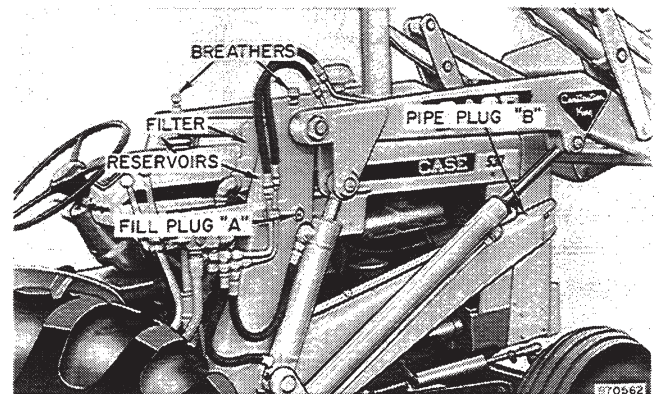

870962

Figure 5 - Hydraulic Reservoir (Loader and Backhoe)

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)