

550E Crawler  
Service Manual

Table of Contents

Description	Section No.	Form No.
<b>General</b>	<b>Tab 1</b>	
Section Index - General		8-13600
Standard Torque Specifications	1001	8-71601
Fluids and Lubricants	1002	7-44000
Loctite Product Chart		8-98900
<b>Engine</b>	<b>Tab 2</b>	
Section Index - Engine		8-14440
Engine Stall Tests	2000	7-44010
Engine Removal and Installation and Radiator Removal and Installation	2001	7-44040
Specification Details	2402	8-24163
Cylinder Head and Valve Train	2415	8-24173
Cylinder Block	2425	8-24183
Lubrication System	2445	8-24193
Cooling System	2455	8-24203
Turbocharger	2465	8-25550
Turbocharger Failure Analysis	2565	9-78235
<b>Fuel System</b>	<b>Tab 3</b>	
Section Index - Fuel System		8-18990
Fuel System and Filters	3410	8-24212
Fuel Injectors	3413	8-24233
CAV Injection Pump (4-390)	3414	7-37131
Bosch Injection Pump (4T-390)	3415	7-37141
<b>Electrical</b>	<b>Tab 4</b>	
Section Index - Electrical		8-19000
Removal and Installation of Electrical Components	4001	8-13650
Electrical Specifications, Troubleshooting and Schematic	4002	8-19010
Batteries	4003	8-11361
Instrument Panel and Gauges	4004	7-44050
Starter and Starter Solenoid 4006		8-72280
Alternator	4007	8-15670
<b>Track</b>	<b>Tab 5</b>	
Section Index - Track		8-14520
Uundercarriage Fundamentals	5001	8-99830
Inspection of Track System Components	5501	7-44140
Case Lubricated Track	5504	8-99720
Sealed Track and Track Frame	5506	8-13703
RubberTrack	5507	7-44060
Idler, Track Adjuster and Recoil Housing	5508	8-13710
Sprocket	5509	7-44070
Carrier Roller	5510	8-13730
Track Roller	5511	8-13740

Reprinted

Description	Section No.	Form No.
<b>Power Train</b>	<b>Tab 6</b>	
<b>Section Index - Power Train</b>		<b>8-14590</b>
Specifications, Schematic and Troubleshooting	6002	8-19030
<b>Torque Converter and Torque Converter Housing</b>	<b>6006</b>	<b>8-14610</b>
Transmissin Control Valve	6007	8-19040
<b>Modulator Valve</b>	<b>6008</b>	<b>8-19050</b>
Transmission	6016	8-19060
<b>Final Drive</b>	<b>6017</b>	<b>8-72652</b>
<b>Brakes</b>	<b>Tab 7</b>	
<b>Section Index - Brakes</b>		<b>8-19070</b>
Removal and Installation of Brake Valve, and Removing Air from the Brake System	7001	8-19080
<b>Brake Valve</b>	<b>7002</b>	<b>8-19090</b>
Brakes	7003	8-19100
<b>Hydraulics</b>	<b>Tab 8</b>	
<b>Section Index - Hydraulics</b>		<b>8-14690</b>
Removal and Installation of Hydraulic Components	8001	7-44080
<b>Specifications, Troubleshooting and Schematics</b>	<b>8002</b>	<b>7-44020</b>
Cleaning the Hydraulic System	8003	8-14710
<b>Equipment Pump</b>	<b>8005</b>	<b>7-44160</b>
Dozer Control Valve	8007	8-19300
<b>Cylinders</b>	<b>8008</b>	<b>7-44091</b>
<b>Mounted Equipment</b>	<b>Tab 9</b>	
<b>Section Index - Mounted Equipment</b>		<b>7-44100</b>
Pedals and Levers	9000	7-44150
<b>AngleTilt Blade</b>	<b>9002</b>	<b>7-44110</b>
Ripper	9031	8-72750
<b>ROPS Cab and Canopy</b>	<b>9061</b>	<b>7-44120</b>
Suspension Seat	9063	7-43910

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)