

570LXT Series 2 Loader Landscaper Service Manual 7-10411

Table of Contents

| Description | Section No. | Form No. |
|--|--------------|----------|
| General | Tab 1 | |
| Section Index - General | | 7-16450 |
| Standard Torque Specifications | 1001 | 8-71601 |
| Fluids and Lubricants | 1002 | 7-10071 |
| Loctite Product Chart | | 8-98900 |
| Engines | Tab 2 | |
| Section Index - Engine | | 7-14661 |
| Engine and Radiator Removal and Installation | 2000 | 7-49651 |
| Stall Tests | 2002 | 7-10081 |
| For Engine Repair, See the Engine Service Manual | | |
| Fuel System | Tab 3 | |
| For Fuel System Repair, See the Engine Service Manual | | |
| Electrical | Tab 4 | |
| Section Index - Electrical | | 7-14670 |
| Removal and Installation of Electrical Components | 4000 | 7-14491 |
| Electrical Specifications and Troubleshooting - 570LXT Series 2 | 4001 | 7-15420 |
| Batteries | 4002 | 7-49441 |
| Starter Motor - Denso | 4003 | 7-11450 |
| Instrument Cluster | 4005 | 7-49560 |
| Alternator | 4007 | 7-49250 |
| Steering | Tab 5 | |
| Section Index - Steering | | 7-14680 |
| Removal and Installation of Steering Components | 5000 | 7-14500 |
| 570LXT Series 2 - Steering Specifications, Pressure Checks and Troubleshooting | 5001 | 7-10100 |
| Steering Control Valve | 5002 | 7-11920 |
| Steering Cylinders | 5003 | 7-11930 |
| Front Axle - Two Wheel Drive | 5005 | 7-10471 |

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
3350 SOUTH SERVICE ROAD
BURLINGTON, ON L7N 3M6 CANADA

Reprinted

Bur 7-14641

© 2000 Case Corporation
Printed in U.S.A.
March, 1999 (Revised March, 2000)

570LXT Series 2 Loader Landscaper Service Manual 7-10411

Table of Contents

| Description | Section No. | Form No. |
|--|--------------|----------|
| Front Axle - Four Wheel Drive - 570LXT Series 2 | 5006 | 7-14690 |
| Power Train | Tab 6 | |
| Section Index - Power Train | | 7-14701 |
| Removal and Installation of Power Train Components | 6000 | 7-14710 |
| Standard Transmission Specifications, Pressure Checks and Troubleshooting | 6002 | 7-54971 |
| Wheels and Tires | 6003 | 7-15410 |
| Rear Axle and Planetaries - 570LXT | 6004 | 7-14721 |
| Standard (Carraro) Transmission | 6007 | 7-10431 |
| Brakes | Tab 7 | |
| Section Index - Brakes | | 7-14730 |
| Removal and Installation of Brake Components | 7000 | 7-14530 |
| Master Cylinder | 7003 | 7-49490 |
| NOTE: <i>For parking brake and brake pedal adjustments, see Section 9001.</i> | | |
| Hydraulics | Tab 8 | |
| Section Index - Hydraulics | | 7-14740 |
| Removal and Installation of Hydraulic Components | 8001 | 7-14750 |
| Hydraulic Specifications, Troubleshooting, and Pressure Checks | 8002 | 7-10111 |
| Cleaning the Hydraulic System | 8003 | 7-49640 |
| Hydraulic Pump - 570LXT | 8004 | 7-14760 |
| Loader Control Valve | 8005 | 7-11220 |
| Cylinders | 8006 | 7-50880 |
| Three Point Hitch Control Valve | 8007 | 7-50891 |
| Auxiliary Control Valve | 8008 | 7-51671 |
| Accumulator for Machines with Optional Ride Control | 8009 | 7-52450 |
| Solenoid Valve for Machines with Optional Ride Control | 8010 | 7-14560 |
| Mounted Equipment | Tab 9 | |
| Section Index - Mounted Equipment | | 7-14780 |

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com