

570NXT
Tier 4
Tractor Loader
from PIN NCC570600

SERVICE MANUAL

Part number 47441594
1st edition English
September 2012



Contents

INTRODUCTION

Engine.....	10
Engine and crankcase.....	10.001
Fuel tanks	10.216
Engine cooling system	10.400
Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment ..	10.501
Transmission.....	21
Power Shuttle transmission	21.112
Power Shuttle transmission external controls	21.134
Power Shuttle transmission internal components	21.154
Front axle system	25
Powered front axle	25.100
Front bevel gear set and differential.....	25.102
Final drive hub, steering knuckles, and shafts	25.108
Non-powered front axle.....	25.400
Rear axle system.....	27
Powered rear axle	27.100
Rear bevel gear set and differential	27.106
Planetary and final drives.....	27.120
Brakes and controls	33
Parking brake / Parking lock.....	33.110
Hydraulic service brakes	33.202
Hydraulic systems.....	35
Hydraulic systems	35.000
Pump control valves	35.102
Fixed displacement pump	35.104
Three-point hitch control valve	35.114

Three-point hitch cylinder.....	35.116
Remote control valves.....	35.204
Reservoir, cooler, and filters.....	35.300
Safety and main relief valves.....	35.350
Front loader bucket hydraulic system.....	35.723
Tool quick coupler hydraulic system.....	35.734
Hitches, drawbars, and implement couplings.....	37
Rear three-point hitch external controls.....	37.108
Frames and ballasting.....	39
Frame.....	39.100
Ballasts and supports.....	39.140
Steering.....	41
Steering control.....	41.101
Hydraulic control components.....	41.200
Cylinders.....	41.216
Wheels.....	44
Front wheels.....	44.511
Rear wheels.....	44.520
Cab climate control.....	50
Air conditioning.....	50.200
Electrical systems.....	55
Electrical system.....	55.000
Harnesses and connectors.....	55.100
Engine starting system.....	55.201
Alternator.....	55.301
Battery.....	55.302
External lighting.....	55.404
Warning indicators, alarms, and instruments.....	55.408

Cab/Platform harnesses and connectors.....	55.510
Cab engine controls	55.525
FAULT CODES	55.DTC
Front loader and bucket.....	82
Arm	82.100
Bucket	82.300
Platform, cab, bodywork, and decals	90
Machine shields and guards.....	90.105
Protections - ROPS and FOPS.....	90.114
Cab	90.150

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com