

“L” Series Loader Backhoe Family Service Manual

Table of Contents

Description	Section No.	Form No.
General		
	Tab 1	
Section Index - General		7-48860
Standard Torque Specifications	1001	8-71601
Fluids and Lubricants	1002	7-48632
Loctite Product Chart		8-98900
Engines		
	Tab 2	
Section Index - Engines		7-48870
Engine and Radiator Removal and Installation	2000	7-49650
Stall Tests	2002	7-49320
Specification Details	2402	8-24164
Aftercooler	2411	7-43511
Cylinder Head and Valve Train	2415	8-24174
Cylinder Block	2425	8-24184
Lubrication System	2445	8-24194
Cooling System	2455	8-24204
Turbocharger	2465	8-25551
Turbocharger Failure Analysis	2565	9-78235
Fuel System		
	Tab 3	
Section Index - Fuel System		7-48880
Fuel System and Filters	3410	8-24212
Fuel Injectors	3413	8-24234
CAV Fuel Injection Pump	3414	7-37132
Bosch Fuel Injection Pump	3415	8-37142
Electrical		
	Tab 4	
Section Index - Electrical		7-48890
Removal and Installation of Electrical Components	4000	7-49430
Electrical Specifications and Troubleshooting	4001	7-48642
Batteries	4003	8-49440
Starter and Starter Solenoid	4004	7-48740
Instrument Cluster	4005	7-49560
Alternator	4007	7-49250

CASE CORPORATION
700 STATE STREET
RACINE, WI 53404 U.S.A.

CASE CANADA CORPORATION
3350 SOUTH SERVICE ROAD
BURLINGTON, ON L7N 3M6 CANADA

Bur 7-48854

Reprinted

Copyright © 1996 Case Corporation
Printed in U.S.A.
Issued October 1996

“L” Series Loader Backhoe Family Service Manual

Table of Contents

Description	Section No.	Form No.
Steering		Tab 5
Section Index - Steering		7-48902
Removal and Installation of Steering Components	5000	7-49450
580L - Steering Specifications, Pressure Checks and Troubleshooting	5001	7-48650
580 Super L and 590 Super L - Steering Specifications, Pressure Checks and Troubleshooting	5001	7-49000
Steering Control Valve	5002	7-49461
Steering Cylinders	5003	7-49470
Front Axle - Two Wheel Drive	5005	7-48770
Front Axle - Four Wheel Drive - 580L and 580 Super L	5006	7-49570
Front Axle - Four Wheel Drive - 590 Super L	5006	7-51060
Power Train		Tab 6
Section Index - Power Train		7-48912
Removal and Installation of Power Train Components	6000	7-49580
Transmission Specifications, Pressure Checks and Troubleshooting	6002	7-48660
Wheels and Tires	6003	7-49590
Rear Axle and Planetaries - 580L and 580 Super L	6004	7-48780
Rear Axle and Planetaries - 590 Super L	6004	7-51130
Transmission	6007	7-48790
Brakes		Tab 7
Section Index - Brakes		7-48921
Removal and Installation of Brake Components	7000	7-49600
Master Cylinder	7003	7-49490
Hydraulics		Tab 8
Section Index - Hydraulics		7-48933
Removal and Installation of Hydraulic Components	8001	7-49630
580L - Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	7-49011
580 Super L and 590 Super L Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	7-48672
Cleaning the Hydraulic System	8003	7-49640
Hydraulic Pump - 580L	8004	7-49170
Hydraulic Pump - 580 Super L and 590 Super L	8004	7-49180
Loader Control Valve	8005	7-49191
Cylinders	8006	7-49200
Backhoe Control Valve - 580L	8007	7-50760
Backhoe Control Valve - 580 Super L and 590 Super L	8007	7-49210
Auxiliary Control Valve	8008	7-51670
Accumulator for Machines with Optional Ride Control	8009	7-52450
Solenoid Valve for Machines with Optional Ride Control	8010	7-52460

"L" Series Loader Backhoe Family Service Manual

Table of Contents

Description	Section No.	Form No.
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		7-48942
Pedals and Levers	9001	7-48680
Air Conditioning Troubleshooting For Systems With R-134a Refrigerant	9002	7-50091
Air Conditioning System Gauges and Testing For Systems With R-134a Refrigerant	9003	7-50901
Air Conditioning System Service For Systems With R-134a Refrigerant	9004	7-51030
Air Conditioning Components Service For Systems With R-134a Refrigerant	9005	7-51050
Loader	9006	7-49510
ROPS Cab and Canopy	9007	7-49520
Backhoe	9008	7-49530
Seat and Seat Belts	9009	7-49540
Hydraulic and Electrical Schematic Foldout (580L)	In Rear Pocket	7-48712
Hydraulic and Electrical Schematic Foldout (580 Super L and 590 Super L)	In Rear Pocket	7-48722

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com