

M SERIES 2 LOADER/BACKHOE

Service Manual

Bur 6-74432

Table of Contents

Description	Section Number	Publication Form Number
General		Tab 1
Section Index - General		6-74450
Standard Torque Specifications	1001	8-71603
Fluids and Lubricants	1002	6-74461
Metric Conversion Chart	1003	7-52950
Engine		Tab 2
Section Index - Engine		6-74470
Engine and Radiator Removal and Installation	2000	6-74481
Stall Test	2002	6-74492
In Vehicle Injector Pump Removal and Installation	2445	6-79380
Counter Balance Removal and Installation	2447	6-74700
Engine Service Manual		6-74500
Fuel System		Tab 3
Section Index - Fuel System		6-74510
<i>NOTE: For Fuel System Repair See Engine Service Manual.</i>		
Electrical		Tab 4
Section Index - Electrical		6-74520
Removal and Installation of Electrical Components	4000	6-74530
Electrical Specifications and Troubleshooting	4001	6-74541
Batteries	4003	6-74550
Starter and Starter Solenoid	4004	6-74560
Instrument Cluster	4005	6-74570

Reprinted

M SERIES 2 LOADER/BACKHOE

Service Manual

Bur 6-74432

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Steering		Tab 5
Section Index - Steering		6-74590
Removal and Installation of Steering Components	5000	6-74600
Steering Specification, Pressure Checks and Troubleshooting	5001	6-74610
Steering Control Valve	5002	6-74621
Steering Cylinders	5003	6-74630
Front Axle - Two Wheel Drive	5005	6-74640
Front Axle - Four Wheel Drive 580M, 580SM, and 580SM+	5006	6-74650
Front Axle - Four Wheel Drive 590SM	5006	6-74670
Power Train		Tab 6
Section Index - Power Train		6-74680
Removal and Installation of Power Train Components	6000	6-74690
Standard Transmission Specifications, Pressure Checks, and Troubleshooting	6002	6-74710
Power Shift Transmission Specifications, Pressure Checks, and Troubleshooting	6002	6-74720
Wheels and Tires	6003	6-74730
Rear Axle and Planetaries - 580M, 580SM, and 580SM+	6004	6-74751
Rear Axle and Planetaries - 590SM	6004	6-74770
Standard Transmission	6007	6-74782
Power Shift Transmission	6007	6-74790
Brakes		Tab 7
Section Index - Brakes		6-74800
Removal and Installation of Brake Components	7000	6-74810
Hydraulic Brake Troubleshooting	7002	6-74820
Master Cylinder	7003	6-74830
Hydraulics		Tab 8
Section Index - Hydraulics		6-74842
Removal and Installation of Hydraulic Components	8001	6-74850
Removal and Installation of Hydraulic Components 590SM With Pilot Controls	8001	6-74761
Hydraulic System Specifications and Troubleshooting With Mechanical Controls	8002	6-74862
Hydraulic System Specifications and Troubleshooting 580M, 580SM, and 580SM+ With Pilot Controls	8002	6-74872
Hydraulic System Specifications and Troubleshooting 590SM With Pilot Controls	8002	6-74741
Cleaning the Hydraulic System	8003	6-74880
Hydraulic Pump 580SM, 580SM+ (all versions), and 590SM With Mechanical Controls	8004	6-74900

M SERIES 2 LOADER/BACKHOE Service Manual Bur 6-74432

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Hydraulics (Cont)		Tab 8
Hydraulic Pump 590SM With Pilot Controls	8004	6-80010
Loader Control Valve 580M, 580SM 580SM+ (all versrions), and 590SM With Mechanical Controls	8005	6-74912
Loader Control Valve 590SM With Pilot Controls	8005	6-79930
Cylinders	8006	6-74920
Backhoe Control Valve With Mechanical Controls	8007	6-74931
Backhoe Control Valve With Pilot Controls 580M, 580SM and 580SM+	8007	6-74941
Backhoe Control Valve With Pilot Controls 590SM	8007	6-79940
Accumulator for Machines With Ride Control and Pilot Control Accumulator	8009	6-74960
Solenoid Valve for Machines with Optional Ride Control	8010	6-74970
Boom Lock Solenoid Valve	8011	6-74980
Quick Coupler	8012	6-74990
Swing Dampening Valve	8013	6-75000
Pilot Control Unit	8014	6-79950
Proportional Pilot Pressure Control	8015	6-79960
Mounted Equipment		Tab 9
Section Index - Mounted Equipment		6-75011
Pedals and Levers	9001	6-75020
Air Conditioning Troubleshooting	9002	6-75031
Air Conditioning System Service	9004	6-75051
Air Conditioning Components Service	9005	6-75061
Loader	9006	6-75070
ROPS Cab and Canopy	9007	6-75080
Backhoe	9008	6-75090
Standard and Mechanical Suspension Seat	9009	6-75100
Sears Mechanical and Standard Suspension Seat	9009	6-80000
Air Suspension Seat	9010	6-75111
Rear Window Replacement	9012	6-75040
Schematic Set		
Hydraulic and Electrical Schematics	In Rear Pocket	6-75122

NOTE: CNH Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com