

**836C**  
**836C AWD**  
**856C**  
**856C AWD**  
**Stage IV**  
Motor Grader

**SERVICE MANUAL**

Part number 47829048B

English

June 2016

**CASE**  
CONSTRUCTION

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
836C	Europe	F4HFE6133*B003
836C AWD	Europe	F4HFE6133*B003
856C	Europe	F4HFE613Y*B003
856C AWD	Europe	F4HFE613Y*B003

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.2
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.3
[10.400] Engine cooling system .....	10.4
[10.304] Engine lubrication system.....	10.5
<b>Transmission</b> .....	<b>21</b>
[21.113] Powershift transmission .....	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.105] Powershift transmission lubrication system.....	21.3
[21.155] Powershift transmission internal components.....	21.4
[21.700] Torque converter .....	21.5
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.108] Final drive hub, steering knuckles, and shafts .....	25.2
<b>Rear axle system</b> .....	<b>27</b>
[27.106] Rear bevel gear set and differential .....	27.1
[27.120] Planetary and final drives .....	27.2
[27.600] Tandem axle.....	27.3
[27.650] Chain drive system.....	27.4
<b>Hydrostatic drive</b> .....	<b>29</b>
[29.204] Reservoir, cooler, and lines .....	29.1
[29.218] Pump and motor components.....	29.2
<b>Brakes and controls</b> .....	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1

[33.110] Parking brake or parking lock .....	33.2
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.102] Pump control valves.....	35.4
[35.105] Charge pump.....	35.5
[35.204] Remote control valves .....	35.6
[35.354] Hydraulic central joint .....	35.7
[35.739] Swing arm hydraulic system .....	35.8
[35.741] Dozer blade cylinders .....	35.9
[35.742] Ripper hydraulic system.....	35.10
[35.310] Distributor and lines .....	35.11
<b>Frames and ballasting .....</b>	<b>39</b>
[39.100] Frame .....	39.1
<b>Steering.....</b>	<b>41</b>
[41.200] Hydraulic control components.....	41.1
[41.206] Pump .....	41.2
[41.216] Cylinders .....	41.3
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating.....	50.1
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors.....	55.2

[55.302] Battery.....	55.3
[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.4
[55.989] Exhaust Gas Recirculation (EGR) electrical system .....	55.5
[55.640] Electronic modules .....	55.6
[55.512] Cab controls .....	55.7
[55.530] Camera.....	55.8
[55.408] Warning indicators, alarms, and instruments .....	55.9
[55.DTC] FAULT CODES.....	55.10
<b>Dozer blade and arm.....</b>	<b>86</b>
[86.110] Dozer blade .....	86.1
[86.112] Moldboard blade .....	86.2
<b>Tools .....</b>	<b>89</b>
[89.128] Ripper assembly .....	89.1
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.150] Cab.....	90.1
[90.120] Mechanically-adjusted operator seat.....	90.2
[90.100] Engine hood and panels .....	90.3

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)