

REPAIR MANUAL
GRADER
845DHP
865VHP/865AWD
885/885AWD
TIER 3

## 845DHP 865VHP & 865VHP(AWD) 885 & 885(AWD) GRADER Repair Manual 71114197

## **Table of Contents**

Description	Section Number	Publication Form Number
General	Tab 1	
Section Index - General		6-46520
Standard Torque Specifications	1001	6-46530
Fluids and Lubricants 845DHP, 865VHP, 865VHP/AWD, 885, 885AWD	1002	6-46540
Metric Conversion Chart	1003	6-46550
Service Tools	1005	6-46560
Loctite Product Chart		8-98902
Engine	Tab 2	
Section Index – Engines TIER 3		6-46441
For Engine Repair, See the Engine Service Manual	2000	6-46551
Charge Air Cooler	2001	6-46560
Fuel System	Tab 3	
Section Index - Fuel System	3001	6-46590

Electrical	Tab 4	
Section Index - Electrical		6-42221
Removal and Installation of Starter and Alternator	4001	6-42321
Electrical Diagram Only models w / o traction	4002	6-46621
Electrical Diagram Only AWD models	4003	6-42331
Battery	4004	6-42330
Alternator 80 Ampere	4008	6-42361

Steering			
Section Index - Steering		6-46660	
Front Wheel, Axle and Wheel Lean	5002	6-46681	
Steering Control Valve(845DHP, 865VHP, 865VHP/AWD, 885, 885AWD)	5003	6-46691	
Steering Priority Valve(845DHP,865VHP,865VHP/AWD, 885, 885AWD)	5004	6-46701	

Power Train	Tab 6	
Section Index - Power Train		6-46741
Transmission Specifications, Pressure Checks and Troubleshooting ((845DHP - 865VHP - 865VHP AWD - 885 - 885AWD)	6002	6-46751
Transmission (845DHP - 865VHP - 865VHP AWD - 885 - 885AWD)	6003	6-75350
Front Drive Axle (865VHP/AWD and 885 AWD)	6007	6-46760
Transmission Gear Box (Wheel Reductor) for Front Drive Axle (865VHP/AWD and 885 AWD)	6008	6-46770
Front Axle (845DHP/ 865VHP/ 885)	6009	6-46780
Rear Axle GRAZIANO 845DHP(OPT)(865VHP and 865VHP/AWD)	6010	6- 46781
Rear Axle GRAZIANO (885 and 885 AWD)	6011	6-46790
Rear Axle GRAZIANO (845DHP)	6012	6-46791
Tandem for rear axle Graziano (845DHP, 865VHP, 865VHP/AWD, 885, 885AWD)	6013	6-46795
Tandem Flange Adjustments (845DHP, 865VHP, 865VHP/AWD, 885, 885AWD)	6014	6-46800

Brakes	Tab 7	Tah 7	
Section Index – Brakes	Tub i	6-46810	
Hydraulic Brake Troubleshooting	7002	6-46831	
Brake Pedal Valve System	7003	6-46841	

Tab 8	
	6-46813
8001	6-46872
8003	6-46880
8004	6-46870
	8001 8003

Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		6-96940
Air Conditioning Troubleshooting and system, check for systems with HFC 134A Refrigerant	9002	6-46950
Air Conditioner System Service	9003	6-46960
Removal and Installation of Air Conditioning Components for Systems with HFC 134A Refrigerant	9004	6-46971
Rear Ripper	9007	6-47011
Frame, Articulation Joint, Circle and Scarifier	9008	6-47001
Front Blade and Counterweight	9009	6-47021
ROPS Cab	9010	6-47031
Cab Glass Installation	9011	6-47041

CNH Latin America Ltda, reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously solds.

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com