

**CX130B**  
**CX130B Forestry Machine**  
Crawler Excavator

**SERVICE MANUAL**

Part number 47915915

English

July 2015

**CASE**  
CONSTRUCTION

# CRAWLER EXCAVATOR CX130B

## CRAWLER EXCAVATOR CX130B Forestry Machine

### SERVICE MANUAL

#### TABLE OF CONTENTS

DIVISION/SECTION	SECTION N°
<b>1 GENERAL INFORMATION</b>	
Safety, general information and standard torque data.....	1001
General specifications and special torque setting .....	1002
General specifications and special torque setting (Forestry Machine).....	1002
<b>2 ENGINE</b>	
Removal and installation of the engine.....	2000
Removal and installation of the fuel cooler, engine inter-cooler, radiator and oil cooler.....	2001
Removal and installation of the turbo charger.....	2004
Removal and installation of EGR cooler and EGR valve.....	2005
Removal and installation of the engine hood.....	2006
Engine specifications.....	*
Disassembly and assembly of the engine .....	*
<b>3 FUEL SYSTEM</b>	
Removal and installation of the fuel tank.....	3001
Removal and installation of the supply pump and common rail .....	3004
Removal and installation of the injectors .....	3005
Fuel engine system .....	*
<b>4 ELECTRICAL SYSTEM</b>	
Electrical and engine functions and service support .....	4001
Removal and installation of the starter motor.....	4004
Removal and installation of the alternator .....	4005
Electrical equipment and electrical circuit diagrams.....	4020
Electrical equipment and electrical circuit diagrams (Forestry Machine).....	4020
Engine error code (DTC) .....	4021
Main body error code (DTC).....	4022
Troubleshooting, 4JJ1 engine.....	4023
<b>5 UNDERCARRIAGE</b>	
Removal and installation of tracks .....	5001
Removal and installation of tracks (Forestry Machine).....	5001
Rollers .....	5003
Rollers (Forestry Machine).....	5003
Take-up roller .....	5005
Take-up roller (Forestry Machine).....	5005
<b>6 DRIVE TRAIN</b>	
Removal and installation of the drive motor and final drive transmission.....	6001
Disassembly and assembly of the drive motor and final drive transmission.....	6002
Disassembly and assembly of the drive motor and final drive transmission (Forestry Machine).....	6002
Removal and installation of the swing motor and swing reduction gear .....	6003
Disassembly and assembly of the swing reduction gear.....	6004
<b>7 UNDERCARRIAGE HYDRAULICS</b>	

\* Consult the Engine Service Manual

**8 UPPERSTRUCTURE HYDRAULICS**

Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components.....	8000
Specifications, troubleshooting, checks and hydraulic pressure settings.....	8001
Specifications, troubleshooting, checks and hydraulic pressure settings (Forestry Machine).....	8001
Removal and installation of the hydraulic reservoir .....	8002
Removal and installation of the main hydraulic pump.....	8003
Removal and installation of the main hydraulic control valve.....	8004
Removal and installation of the attachment cylinders.....	8005
Removal and installation of the hydraulic swivel.....	8006
Removal and installation of the pilot blocs.....	8007
Disassembly and assembly of the main hydraulic pump .....	8010
Disassembly and assembly of the main hydraulic pump (Forestry Machine).....	8010
Disassembly and assembly of the main hydraulic control valve .....	8011
Disassembly and assembly of the attachment cylinders .....	8012
Disassembly and assembly of the attachment cylinders (Forestry Machine).....	8012
Disassembly and assembly of the hand control levers .....	8013
Disassembly and assembly of the foot control levers .....	8014
Disassembly and assembly of the cushion valve.....	8016
Removal and installation of the safety valve .....	8017
Disassembly and assembly of the swing motor .....	8019
Hydraulic functions .....	8020
Hydraulic functions (Forestry Machine).....	8020
Hydraulic component functions.....	8030
Hydraulic component functions (Forestry Machine).....	8030

**9 UPPERSTRUCTURE**

Removal and installation of the counterweight .....	9002
Removal and installation of the boom, dipper and bucket .....	9003
Removal and installation of the seat.....	9004
Removal and installation of the cab and cab equipment .....	9005
Air conditioner functions and troubleshooting.....	9006
Air conditioning unit .....	9007
Air conditioning components.....	9009
Large size hydraulic schematics.....	Pocket
Large size hydraulic schematics (2PC).....	Pocket
Large size electrical schematics.....	Pocket

NOTE: CNH Industrial reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)