

**CX130C**  
Crawler Excavator

**SERVICE MANUAL**

Part number 47795402

English

January 2016

**CASE**  
CONSTRUCTION

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.102] Pan and covers .....	10.2
[10.101] Cylinder heads .....	10.3
[10.103] Crankshaft and flywheel.....	10.4
[10.216] Fuel tanks .....	10.5
[10.206] Fuel filters .....	10.6
[10.218] Fuel injection system.....	10.7
[10.250] Turbocharger and lines.....	10.8
[10.254] Intake and exhaust manifolds and muffler .....	10.9
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.10
[10.400] Engine cooling system .....	10.11
[10.414] Fan and drive .....	10.12
[10.310] Aftercooler.....	10.13
[10.304] Engine lubrication system.....	10.14
[10.408] Oil cooler and lines.....	10.15
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump .....	35.3
[35.102] Pump control valves.....	35.4
[35.304] Combination pump units .....	35.5
[35.359] Main control valve.....	35.6
[35.357] Pilot system .....	35.7
[35.525] Auxiliary hydraulic valves and lines .....	35.8
[35.355] Hydraulic hand control .....	35.9

[35.356] Hydraulic foot control.....	35.10
[35.352] Hydraulic swing system .....	35.11
[35.353] Hydraulic travel system .....	35.12
[35.354] Hydraulic central joint .....	35.13
[35.736] Boom hydraulic system .....	35.14
[35.737] Dipper hydraulic system.....	35.15
[35.738] Excavator and backhoe bucket hydraulic system.....	35.16
[35.734] Tool quick coupler hydraulic system .....	35.17
[35.741] Dozer blade cylinders .....	35.18
<b>Frames and ballasting .....</b>	<b>39</b>
[39.140] Ballasts and supports .....	39.1
<b>Tracks and track suspension .....</b>	<b>48</b>
[48.130] Track frame and driving wheels .....	48.1
[48.100] Tracks .....	48.2
[48.134] Track tension units .....	48.3
[48.138] Track rollers .....	48.4
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.200] Air conditioning.....	50.2
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.015] Engine control system.....	55.3
[55.201] Engine starting system .....	55.4
[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.202] Cold start aid .....	55.7
[55.010] Fuel injection system.....	55.8

[55.014] Engine intake and exhaust system.....	55.9
[55.989] Exhaust Gas Recirculation (EGR) electrical system .....	55.10
[55.012] Engine cooling system .....	55.11
[55.013] Engine oil system .....	55.12
[55.640] Electronic modules.....	55.13
[55.512] Cab controls.....	55.14
[55.036] Hydraulic system control .....	55.15
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.16
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.17
[55.524] Cab controls (Lift arm, Boom, Dipper, Bucket).....	55.18
[55.416] Swing control system .....	55.19
[55.417] Travel control system .....	55.20
[55.950] Hammer electric system .....	55.21
[55.530] Camera.....	55.22
[55.518] Wiper and washer system.....	55.23
[55.404] External lighting .....	55.24
[55.514] Cab lighting .....	55.25
[55.408] Warning indicators, alarms, and instruments .....	55.26
[55.992] Anti-theft system .....	55.27
[55.DTC] FAULT CODES.....	55.28
<b>Booms, dippers, and buckets .....</b>	<b>84</b>
[84.910] Boom.....	84.1
[84.912] Dipper arm .....	84.2
[84.100] Bucket.....	84.3
<b>Dozer blade and arm.....</b>	<b>86</b>
[86.110] Dozer blade .....	86.1
<b>Platform, cab, bodywork, and decals.....</b>	<b>90</b>
[90.150] Cab.....	90.1

[90.156] Cab glazing .....	90.2
[90.120] Mechanically-adjusted operator seat.....	90.3
[90.100] Engine hood and panels .....	90.4

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)