

CX210 - CX230 - CX240 Crawler Excavators Table of Contents

SECTION N°

REFERENCE N°

DIVISION/SECTION

DIV	ISION/SECTION	SECTIONIN	HEI EHENGE N
1	GENERAL INFORMATION Safety, general information and standard torque data		7-27690GB
•	General specifications and special torque setting ENGINE	1002	7-29361GB
2	—···	0000	7 00000 OD
	Removal and installation of the engine		7-28230GB
	Radiator and oil-cooler Engine specifications		7-28050GB
	Disassembly and assembly of the engine	*	
3	FUEL SYSTEM		
	Fuel tank Fuel engine system		7-27970GB
4	ELECTRICAL SYSTEM		
7	Electrical system, electrical and electronic troubleshooting	4001	7-27724GB
	Inspection and maintenance of batteries and connecting a booster be		7-27921GB
	Main and engine electronic control boxes		7-27933GB
5	UNDERCARRIAGE		7 27300GB
Ū	Removal and installation of tracks	5001	7-27750GB
	Rollers		7-27772GB
	Sprocket		7-27781GB
	Idler wheel and tension shock absorber		7-27803GB
6	DRIVE TRAIN		7 27000 GB
O	Drive motor and final drive transmission removal and installation	6001	7-27841GB
	Drive motor and final drive transmission disassembly and assembly.		7-28090GB
	Swing reduction gear, removal and installation		7-20030GB 7-27820GB
	Swing reduction gear, disassembly and assembly (CX210 - CX230).		7-27020GB 7-28371GB
	Swing reduction gear, disassembly and assembly (CX210 - CX230).		7-28391GB
7	UNDERCARRIAGE HYDRAULICS		
8	UPPERSTRUCTURE HYDRAULICS		
•	Depressurising and decontaminating the hydraulic system, use of the	9	
	vacuum pump and bleeding the components		7-27952GB
	Specifications, troubleshooting, checks and hydraulic pressure setting		7-27704GB
	Hydraulic reservoir removal and installation		7-27990GB
	Main and pilot pumps, removal and installation		7-27860GB
	Main hydraulic control valve, removal and installation		7-27890GB
	Attachment cylinders, removal and installation		7-27791GB
	Hydraulic swivel, removal and installation		7-27811GB
	Pilot blocs, removal and installation		7-28130GB
	Swing motor, removal and installation (CX210 - CX230)		7-28071GB
	Swing motor, removal and installation (CX210 - GX230)		7-2007 TGB
	Main hydraulic pump, disassembly and assembly		7-35490GB
	Main hydraulic control valve, disassembly and assembly		9-36270GB
	Attachment cylinders, disassembly and assembly		7-27902GB
	Hand control levers, disassembly and assembly		7-28110GB
	Foot control levers, disassembly and assembly		7-28210GB
	Six-solenoid valves, disassembly and assembly		7-27911GB
	Caution valve, disassembly and assembly		7-27942GB
	Safety valve		7-29631GB
	Hydraulic swivel, disassembly and assembly		7-28080GB
	Swing motor, disassembly and assembly (CX210 - CX230)		7-28011GB
	Swing motor, disassembly and assembly (CX240)		7-29760GB
	Hydraulic functions	8020	7-28490GB
		O = · · · · · · · · ·	+ @ 000F ONLL F O A

DIVISION/SECTION	SECTION N°	REFERENCE N°
9 UPPERSTRUCTURE		
Quick coupler	9000	9-93630GB
Upperstructure, turntable and counterweight	9002	7-27982GB
Boom, dipper and bucket	9003	7-27963GB
Seat and seat belt	9004	7-28120GB
Cab and cab equipment	9005	7-28022GB
Air conditioning troubleshooting	9006	9-88730GB
Air conditioning unit disassembly and assembly	9007	
Air conditioning servicing	9008	
Air conditioning components	9009	
Articulated boom supplement (CX210 - CX230)	9010	9-93770GB
Large format hydraulic and electrical schematics	Pocket	7-27623

^{*} Consult the Engine Service Manual

Sections to be distributed at a later date

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

Cre 9-93541GB Issued 07-05

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com