

CX250D Crawler Excavator

SERVICE MANUAL

Part number 47928442

English

September 2015

© 2015 CNH Industrial Italia S.p.A. All Rights Reserved.

CASE
CONSTRUCTION



SERVICE MANUAL

CX250D Crawler excavators LC version (TIER4 FINAL) - EU Market
CX250D Crawler excavators NLC version (TIER4 FINAL) - EU Market

Contents

INTRODUCTION

| | |
|---|-------|
| Engine..... | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.102] Pan and covers | 10.2 |
| [10.106] Valve drive and gears | 10.3 |
| [10.101] Cylinder heads | 10.4 |
| [10.105] Connecting rods and pistons..... | 10.5 |
| [10.103] Crankshaft and flywheel..... | 10.6 |
| [10.216] Fuel tanks | 10.7 |
| [10.206] Fuel filters | 10.8 |
| [10.218] Fuel injection system..... | 10.9 |
| [10.202] Air cleaners and lines | 10.10 |
| [10.250] Turbocharger and lines..... | 10.11 |
| [10.254] Intake and exhaust manifolds and muffler | 10.12 |
| [10.500] Selective Catalytic Reduction (SCR) exhaust treatment..... | 10.13 |
| [10.501] Exhaust Gas Recirculation (EGR) exhaust treatment..... | 10.14 |
| [10.400] Engine cooling system | 10.15 |
| [10.414] Fan and drive | 10.16 |
| [10.310] Aftercooler..... | 10.17 |
| [10.304] Engine lubrication system..... | 10.18 |
| Hydraulic systems..... | 35 |
| [35.000] Hydraulic systems..... | 35.1 |
| [35.300] Reservoir, cooler, and filters..... | 35.2 |
| [35.106] Variable displacement pump | 35.3 |
| [35.102] Pump control valves..... | 35.4 |
| [35.359] Main control valve..... | 35.5 |
| [35.357] Pilot system | 35.6 |

| | |
|---|-----------|
| [35.355] Hydraulic hand control | 35.7 |
| [35.356] Hydraulic foot control..... | 35.8 |
| [35.352] Hydraulic swing system | 35.9 |
| [35.353] Hydraulic travel system | 35.10 |
| [35.354] Hydraulic central joint | 35.11 |
| [35.736] Boom hydraulic system | 35.12 |
| [35.737] Dipper hydraulic system..... | 35.13 |
| [35.738] Excavator and backhoe bucket hydraulic system..... | 35.14 |
| [35.360] Hammer and rotating bucket hydraulic system | 35.15 |
| Frames and ballasting | 39 |
| [39.140] Ballasts and supports | 39.1 |
| Tracks and track suspension | 48 |
| [48.130] Track frame and driving wheels..... | 48.1 |
| [48.100] Tracks | 48.2 |
| [48.134] Track tension units | 48.3 |
| [48.138] Track rollers | 48.4 |
| Cab climate control | 50 |
| [50.100] Heating | 50.1 |
| [50.200] Air conditioning..... | 50.2 |
| Electrical systems | 55 |
| [55.000] Electrical system | 55.1 |
| [55.100] Harnesses and connectors..... | 55.2 |
| [55.525] Cab engine controls..... | 55.3 |
| [55.015] Engine control system..... | 55.4 |
| [55.201] Engine starting system | 55.5 |
| [55.301] Alternator..... | 55.6 |
| [55.302] Battery..... | 55.7 |
| [55.202] Cold start aid | 55.8 |

| | |
|--|-----------|
| [55.011] Fuel tank system | 55.9 |
| [55.010] Fuel injection system | 55.10 |
| [55.014] Engine intake and exhaust system..... | 55.11 |
| [55.988] Selective Catalytic Reduction (SCR) electrical system | 55.12 |
| [55.989] Exhaust Gas Recirculation (EGR) electrical system | 55.13 |
| [55.012] Engine cooling system | 55.14 |
| [55.013] Engine oil system | 55.15 |
| [55.640] Electronic modules | 55.16 |
| [55.512] Cab controls..... | 55.17 |
| [55.036] Hydraulic system control | 55.18 |
| [55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls..... | 55.19 |
| [55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system..... | 55.20 |
| [55.524] Cab controls (Lift arm, Boom, Dipper, Bucket)..... | 55.21 |
| [55.416] Swing control system | 55.22 |
| [55.417] Travel control system | 55.23 |
| [55.530] Camera..... | 55.24 |
| [55.518] Wiper and washer system..... | 55.25 |
| [55.404] External lighting | 55.26 |
| [55.514] Cab lighting | 55.27 |
| [55.408] Warning indicators, alarms, and instruments | 55.28 |
| [55.992] Anti-theft system | 55.29 |
| [55.DTC] FAULT CODES..... | 55.30 |
| Booms, dippers, and buckets | 84 |
| [84.910] Boom | 84.1 |
| [84.912] Dipper arm | 84.2 |
| [84.100] Bucket..... | 84.3 |
| Platform, cab, bodywork, and decals | 90 |
| [90.150] Cab..... | 90.1 |

| | |
|---|------|
| [90.156] Cab glazing | 90.2 |
| [90.118] Protections and footboards..... | 90.3 |
| [90.114] Operator protections | 90.4 |
| [90.120] Mechanically-adjusted operator seat..... | 90.5 |
| [90.100] Engine hood and panels | 90.6 |
| [90.116] Fenders and guards..... | 90.7 |

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com