

CX26C
Mini Excavator

SERVICE MANUAL

Part number 51422576

English
January 2018

CASE
CONSTRUCTION

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.101] Cylinder heads	10.2
[10.102] Pan and covers	10.3
[10.103] Crankshaft and flywheel.....	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.106] Valve drive and gears	10.6
[10.304] Engine lubrication system.....	10.7
[10.400] Engine cooling system	10.8
[10.216] Fuel tanks	10.9
[10.202] Air cleaners and lines	10.10
[10.206] Fuel filters	10.11
[10.218] Fuel injection system.....	10.12
[10.220] Throttle linkage.....	10.13
[10.254] Intake and exhaust manifolds and muffler	10.14
[10.414] Fan and drive	10.15
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.106] Variable displacement pump	35.2
[35.300] Reservoir, cooler, and filters.....	35.3
[35.359] Main control valve.....	35.4
[35.355] Hydraulic hand control	35.5
[35.352] Hydraulic swing system	35.6
[35.353] Hydraulic travel system	35.7
[35.354] Hydraulic central joint	35.8
[35.356] Hydraulic foot control.....	35.9

[35.357] Pilot system	35.10
[35.360] Hammer and rotating bucket hydraulic system	35.11
[35.736] Boom hydraulic system	35.12
[35.737] Dipper hydraulic system.....	35.13
[35.738] Excavator and backhoe bucket hydraulic system.....	35.14
[35.734] Tool quick coupler hydraulic system	35.15
[35.739] Swing arm hydraulic system	35.16
[35.741] Dozer blade cylinders	35.17
Frames and ballasting	39
[39.103] Swing ring assembly	39.1
[39.140] Ballasts and supports	39.2
Tracks and track suspension.....	48
[48.100] Tracks	48.1
[48.130] Track frame and driving wheels.....	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
Electrical systems	55
[55.000] Electrical system	55.1
[55.011] Fuel tank system	55.2
[55.012] Engine cooling system	55.3
[55.013] Engine oil system	55.4
[55.014] Engine intake and exhaust system.....	55.5
[55.100] Harnesses and connectors.....	55.6
[55.302] Battery.....	55.7
[55.201] Engine starting system	55.8
[55.202] Cold start aid	55.9
[55.301] Alternator.....	55.10
[55.404] External lighting	55.11

[55.405] External lighting switches and relays	55.12
[55.408] Warning indicators, alarms, and instruments	55.13
[55.512] Cab controls.....	55.14
[55.514] Cab lighting	55.15
[55.518] Wiper and washer system.....	55.16
[55.524] Cab controls (Lift arm, Boom, Dipper, Bucket).....	55.17
[55.525] Cab engine controls.....	55.18
Booms, dippers, and buckets	84
[84.100] Bucket.....	84.1
[84.114] Boom pivoting support	84.2
[84.912] Dipper arm	84.3
[84.910] Boom.....	84.4
Dozer blade and arm.....	86
[86.110] Dozer blade	86.1
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.118] Protections and footboards.....	90.2
[90.120] Mechanically-adjusted operator seat.....	90.3
[90.150] Cab.....	90.4
[90.160] Cab interior trim and panels.....	90.5
[90.105] Machine shields and guards	90.6

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com