



1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

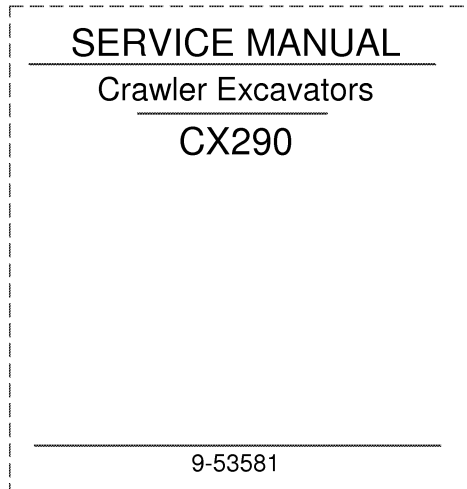


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

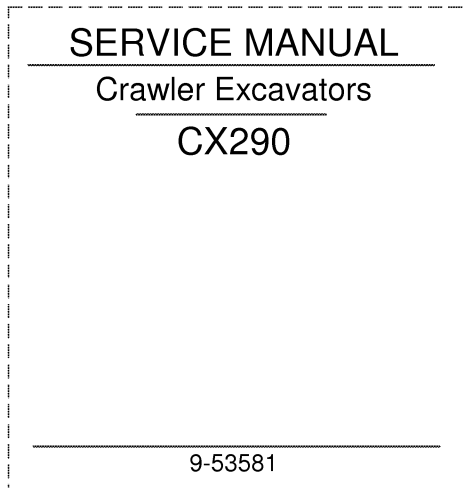

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

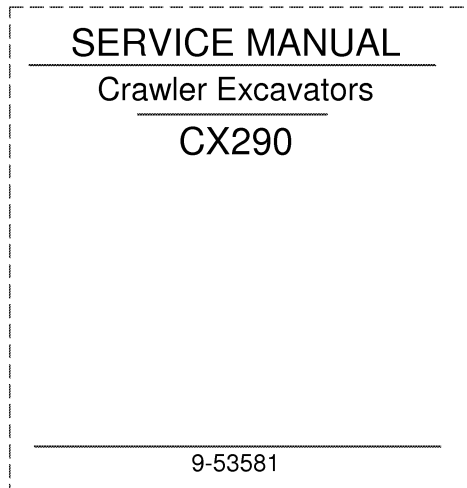

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

CX290 Crawler Excavators

Table of contents

| DIVISION/SECTION | SECTION No. | REFERENCE No. |
|---|-------------|---------------|
| 1 GENERAL INFORMATION | | |
| Safety, general information and standard torque data | 1001 | 9-53360 |
| General specifications and special torque setting..... | 1002 | 9-53220 |
| 2 ENGINE | | |
| Removal and installation of the engine | 2000 | 9-43820GB |
| Radiator and oil-cooler | 2001 | 9-44490GB |
| Engine specifications | | * |
| Disassembly and assembly of the engine..... | | * |
| 3 FUEL SYSTEM | | |
| Fuel tank | 3001 | 7-27970GB |
| Fuel engine system..... | | * |
| 4 ELECTRICAL SYSTEM | | |
| Electrical system, electrical and electronic troubleshooting..... | 4001 | 9-53380 |
| Inspection and maintenance of batteries and connecting a booster battery.... | 4002 | 9-43460GB |
| Main and engine electronic control boxes..... | 4003 | 9-43450GB |
| 5 UNDERCARRIAGE | | |
| Removal and installation of tracks | 5001 | 7-27750GB |
| Rollers..... | 5003 | 9-42920GB |
| Sprocket..... | 5004 | 9-36890GB |
| Idler wheel and tension shock absorber | 5005 | 9-43000GB |
| 6 DRIVE TRAIN | | |
| Drive motor and final drive transmission removal and installation | 6001 | 9-43140GB |
| Swing reduction gear, removal and installation..... | 6003 | 9-44010GB |
| Swing reduction gear, disassembly and assembly..... | 6004 | 9-43220GB |
| Travel reduction gear assembly and disassembly..... | 6005 | 9-43150GB |
| 7 UNDERCARRIAGE HYDRAULICS | | |
| 8 UPPERSTRUCTURE HYDRAULICS | | |
| Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components | 8000 | 9-44030GB |
| Specifications, troubleshooting, checks and hydraulic pressure settings..... | 8001 | 9-53390 |
| Hydraulic reservoir removal and installation | 8002 | 7-27990GB |
| Main and pilot pumps, removal and installation | 8003 | 9-44050GB |
| Main hydraulic control valve, removal and installation | 8004 | 9-44410GB |
| Attachment cylinders, removal and installation | 8005 | 7-27791GB |
| Hydraulic swivel, removal and installation..... | 8006 | 7-27811GB |
| Pilot blocs, removal and installation | 8007 | 9-35590 |
| Swing motor, removal and installation..... | 8008 | 9-44020GB |
| Free swing disassembly and assembly..... | 8009 | 9-35530 |
| Main hydraulic pump, disassembly and assembly | 8010 | 9-35491GB |
| Main hydraulic control valve, disassembly and assembly | 8011 | 9-43550GB |
| Attachment cylinders, disassembly and assembly..... | 8012 | 9-44420GB |
| Hand control levers, disassembly and assembly | 8013 | 7-28110GB |
| Foot control levers, disassembly and assembly..... | 8014 | 7-28210GB |
| Six-solenoid valves, disassembly and assembly..... | 8015 | 9-43360GB |
| Caution valve, disassembly and assembly..... | 8016 | 7-27942GB |
| Safety valve..... | 8017 | 7-29631GB |
| Hydraulic swivel, disassembly and assembly..... | 8018 | 7-28080GB |
| Swing motor, disassembly and assembly | 8019 | 9-43440GB |
| Hydraulic functions..... | 8020 | 9-53400 |
| Travel hydraulic motor, disassembly and assembly..... | 8021 | 9-43160GB |

| DIVISION/SECTION | SECTION No. | REFERENCE No. |
|---|-------------|---------------|
| 9 UPPERSTRUCTURE | | |
| Upperstructure, turntable and counterweight..... | 9002 | 9-43760GB |
| Boom, dipper and bucket | 9003 | 7-27961GB |
| Seat and seat belt | 9004 | 9-40960GB |
| Cab and cab equipment..... | 9005 | 9-43750GB |
| Air conditioner troubleshooting and system checks | 9006 | 9-88730GB |
| Air conditioning unit disassembly and assembly | 9007 | ██████████ |
| Air conditioning servicing | 9008 | ██████████ |
| Air conditioning components..... | 9009 | ██████████ |
| Attachment reinforcement procedures | 9012 | 9-43910 |
| Large format hydraulic and electrical schematics | Pocket | 9-42670 |

* Consult the Engine Service Manual

██████████ Sections to be distributed at a later date

NOTE: Case Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com