

**CX30C**  
Mini Excavator

**SERVICE MANUAL**

**Part number 48175013**  
English  
October 2017





## **SERVICE MANUAL**

**CX30C Cab - TIER 4 final engine**  
**CX30C Canopy - TIER 4 final engine**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.102] Pan and covers .....	10.2
[10.106] Valve drive and gears .....	10.3
[10.101] Cylinder heads .....	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.103] Crankshaft and flywheel.....	10.6
[10.216] Fuel tanks .....	10.7
[10.206] Fuel filters .....	10.8
[10.220] Throttle linkage.....	10.9
[10.218] Fuel injection system.....	10.10
[10.202] Air cleaners and lines .....	10.11
[10.254] Intake and exhaust manifolds and muffler .....	10.12
[10.400] Engine cooling system .....	10.13
[10.414] Fan and drive .....	10.14
[10.304] Engine lubrication system.....	10.15
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump .....	35.3
[35.359] Main control valve.....	35.4
[35.357] Pilot system .....	35.5
[35.355] Hydraulic hand control .....	35.6
[35.356] Hydraulic foot control.....	35.7
[35.352] Hydraulic swing system .....	35.8
[35.353] Hydraulic travel system .....	35.9

[35.354] Hydraulic central joint .....	35.10
[35.736] Boom hydraulic system .....	35.11
[35.737] Dipper hydraulic system.....	35.12
[35.738] Excavator and backhoe bucket hydraulic system.....	35.13
[35.734] Tool quick coupler hydraulic system .....	35.14
[35.360] Hammer and rotating bucket hydraulic system .....	35.15
[35.739] Swing arm hydraulic system .....	35.16
[35.741] Dozer blade cylinders .....	35.17
<b>Frames and ballasting .....</b>	<b>39</b>
[39.103] Swing ring assembly .....	39.1
[39.140] Ballasts and supports .....	39.2
<b>Tracks and track suspension.....</b>	<b>48</b>
[48.130] Track frame and driving wheels.....	48.1
[48.100] Tracks .....	48.2
[48.134] Track tension units .....	48.3
[48.138] Track rollers .....	48.4
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.525] Cab engine controls.....	55.3
[55.201] Engine starting system .....	55.4
[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.202] Cold start aid .....	55.7
[55.011] Fuel tank system .....	55.8
[55.014] Engine intake and exhaust system.....	55.9
[55.012] Engine cooling system .....	55.10
[55.013] Engine oil system .....	55.11

[55.512] Cab controls.....	55.12
[55.524] Cab controls (Lift arm, Boom, Dipper, Bucket).....	55.13
[55.518] Wiper and washer system.....	55.14
[55.404] External lighting .....	55.15
[55.405] External lighting switches and relays .....	55.16
[55.514] Cab lighting .....	55.17
[55.408] Warning indicators, alarms, and instruments .....	55.18
<b>Booms, dippers, and buckets .....</b>	<b>84</b>
[84.114] Boom pivoting support .....	84.1
[84.910] Boom.....	84.2
[84.912] Dipper arm .....	84.3
[84.100] Bucket.....	84.4
<b>Dozer blade and arm.....</b>	<b>86</b>
[86.110] Dozer blade .....	86.1
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.150] Cab.....	90.1
[90.160] Cab interior trim and panels.....	90.2
[90.118] Protections and footboards.....	90.3
[90.120] Mechanically-adjusted operator seat.....	90.4
[90.100] Engine hood and panels .....	90.5
[90.105] Machine shields and guards .....	90.6

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)