

CX330 and CX350 Crawler Excavators Table of Contents

DIVISION/SECTION	SECTION N°	REFERENCE N°
1 GENERAL INFORMATION		
Safety, general information and standard torque data	1001	7-27690GB
General specifications and special torque setting.....	1002	9-36450GB
2 ENGINE		
Removal and installation of the engine	2000	9-43540GB
Radiator and oil-cooler.....	2001	9-43480GB
Engine specifications	*	
Disassembly and assembly of the engine.....	*	
3 FUEL SYSTEM		
Fuel tank	3001	9-43470GB
Fuel engine system.....	*	
4 ELECTRICAL SYSTEM		
Electrical system, electrical and electronic troubleshooting.....	4001	9-40950GB
Inspection and maintenance of batteries and connecting a booster battery ...	4002	9-43460GB
Main and engine electronic control boxes.....	4003	9-43450GB
5 UNDERCARRIAGE		
Removal and installation of tracks	5001	9-42910GB
Rollers.....	5003	9-42920GB
Sprocket.....	5004	9-36890GB
Idler wheel and tension shock absorber	5005	9-43000GB
6 DRIVE TRAIN		
Drive motor and final drive transmission removal and installation	6001	9-43140GB
Swing reduction gear, removal and installation.....	6003	9-43210GB
Swing reduction gear, disassembly and assembly	6004	9-43220GB
Travel reduction gear assembly and disassembly	6005	9-43150GB
7 UNDERCARRIAGE HYDRAULICS		
8 UPPERSTRUCTURE HYDRAULICS		
Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components.....	8000	9-43500GB
Specifications, troubleshooting, checks and hydraulic pressure settings	8001	9-36260GB
Hydraulic reservoir removal and installation	8002	9-43230GB
Main and pilot pumps, removal and installation	8003	9-43530GB
Main hydraulic control valve, removal and installation.....	8004	9-43260GB
Attachment cylinders, removal and installation.....	8005	9-43250GB
Hydraulic swivel, removal and installation	8006	9-43390GB
Pilot blocs, removal and installation.....	8007	9-43400GB
Swing motor, removal and installation	8008	9-43200GB
Main hydraulic pump, disassembly and assembly.....	8010	9-43240GB
.....	8010	9-43330GB
Main hydraulic control valve, disassembly and assembly.....	8011	9-43550GB
Attachment cylinders, disassembly and assembly.....	8012	9-43320GB
Hand control levers, disassembly and assembly	8013	9-43340GB
Foot control levers, disassembly and assembly	8014	7-28300GB
Six-solenoid valves, disassembly and assembly	8015	9-43360GB
Caution valve, disassembly and assembly	8016	7-27942GB
Safety valve	8017	9-43380GB
Hydraulic swivel, disassembly and assembly	8018	9-43190GB
Swing motor, disassembly and assembly	8019	9-43440GB
Hydraulic functions.....	8020	9-42740GB
Travel hydraulic motor, disassembly and assembly.....	8021	9-43160GB

DIVISION/SECTION	SECTION N°	REFERENCE N°
9 UPPERSTRUCTURE		
Upperstructure, turntable and counterweight.....	9002	9-43410GB
Boom, dipper and bucket.....	9003	9-43420GB
Seat and seat belt.....	9004	9-40460GB
Cab and cab equipment.....	9005	9-43430GB
Air conditioning troubleshooting.....	9006	██████████
Air conditioning unit disassembly and assembly.....	9007	██████████
Air conditioning servicing.....	9008	██████████
Air conditioning components.....	9009	██████████
Large format hydraulic and electrical schematics.....	Pocket	9-35930GB

* *Consult the Engine Service Manual*

██████████ *Sections to be distributed at a later date*

NOTE: CASE Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com