CX470C Tier 4

Crawler Excavator

SERVICE MANUAL

Part number 845 | 2404

1st edition English October 2011



Removal and Installation of Engine Assembly

⚠ WARNING

- · Keep away from fire.
- Be sure to release hydraulic pressure before beginning work.
- The air conditioner circuit is filled with highpressure gas, so there is the danger of gas spraying out when loosening lines.
- Do not use open flames and do not allow sparks near the battery.

⚠ CAUTION


- Be sure to stop the engine before beginning work.
- Be sure to inspect the wire rope and other lifting equipment before beginning work.
- Do not stand or pass under the suspended load.

Items to prepare


- Wrenches (7 mm, 8 mm, 13 mm, 17 mm, 19 mm, 36 mm)
- Box wrench (46 mm)
- Shackle (with the required lifting capacity) x 2
- Wire ropes (with the required breaking load)
- Liftcrane (with the required lifting capacity)
- Marking pen
- Cap
- Plug
- Waste oil can
- Rag
- Cleaning fluid
- · Wood planks, etc.

Removal of Engine Assembly

- Drain the engine oil.(For details, see "Engine Oil Replacing".)
- 2. Drain the coolant from the radiator.(For details, see "Removal and Installation of Radiator".)
- 3. Remove the engine hood.(For details, see "Removal and Installation of Engine Hood".)
- 4. Remove the hydraulic pump.(For details, see "Removal and Installation of Hydraulic Pump".)
- 5. Remove the muffler.(For details, see "Removal and Installation of Muffler".)
- 6. Use a wrench (7 mm) to loosen the hose band (1) on the radiator, and then remove the upper hose (2).

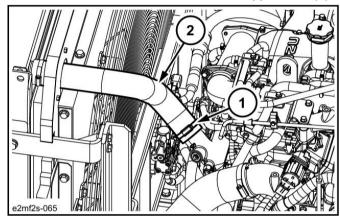

- 7. Use a wrench (8 mm) to loosen the hose band (1) on the inter cooler, and then remove the hose (2).
 - Use caps to cover the lines and hoses to prevent the entry of water, dust or dirt.

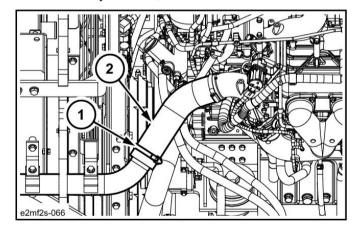

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com