

HYDRAULIC EXCAVATOR

SHOP MANUAL model **CX55B**

INDEX

1	SPECIFICATIONS SECTION
2	MAINTENANCE SECTION
3	SYSTEM SECTION
4	DISASSEMBLY SECTION
5	TROUBLESHOOTING
6	ENGINE SECTION
7	PROCEDURE OF INSTALLING OPTIONS SECTION



INDEX

CASE-NA

CX55BMSR

Book Code No. Distribution Year-Month			Title	Index No.
S5PA0105E01 2010-09		SPECIFICATIONS	OUTLINE	1
S5PS0202E01 2010-09			SPECIFICATIONS	2
S5PS0302E01 2010-09			ATTACHMENT DIMENSIONS	3
S5PJ1131E02 2010-09		MAINTENANCE	TOOLS	11
S5PS1201E01 2010-09			STANDARD MAINTENANCE TIME TABLE	12
S5PS1302E01 2010-09			MAINTENANCE STANDARD AND TEST PROCEDURE	13
—		SYSTEM		
S5PS2202E01 2010-09			HYDRAULIC SYSTEM	22
S5PS2301E01 2010-09			ELECTRIC SYSTEM	23
S5PS2401E01 2010-09			COMPONENTS SYSTEM	24
S5PS2501E01 2010-09			AIR-CONDITIONER SYSTEM	25
—		DISASSEMBLING		
S5PA3105E01 2010-09			GENERAL DISASSEMBLY & ASSEMBLY	31
S5PS3202E01 2010-09			ATTACHMENT	32
S5PS3301E01 2010-09			UPPER SLEWING STRUCTURE	33
S5PS3402E01 2010-09		TRAVEL SYSTEM	34	
—		TROUBLESHOOTING		
S5PS4201E01 2010-09			HYDRAULIC SYSTEM	42
S5PS4301E01 2010-09			ELECTRICAL SYSTEM	43
S5PW4431E02 2010-09		ENGINE	44	
S5PW5131E02 2010-09		E/G	ENGINE	51
—				
—				
—				
PS02-00101~			APPLICABLE MACHINES	

33 25 1
42 34 2
51 43 11 3
44 12
13
22
31 23
32 24

NOTE:

This Manual is prepared as technical material in which the information necessary for the maintenance and repairing services of our hydraulic excavators are collected, and is categorized into 7 Chapters, Specification, Maintenance, System, Disassembly, Troubleshooting, Engine, and Installation Procedures for Optional Attachment.

- The Chapter "Specification" describes the specifications for entire machine and material, which are instructive for replacement and repairing of attachments.
- The Chapter "Maintenance" describes the material, which is helpful for maintenance service and adjustments for entire machine.
- The Chapter "System" describes the operating system like hydraulic system, electric system, components, and so on.
- The Chapter "Disassembly" describes the removal and installing of an assembly mounted on the upper structure and undercarriage, and the assembling and disassembling of the associated hydraulic equipment.
- The Chapter "Troubleshooting" describes how to find the equipment fault.
- The Chapter "Engine" describes the engine, making use of the "Maintenance Manual" provided by the suppliers.
- The Chapter "Installation Procedures for Optional Attachment" describes the supplements added on request as required.

This Manual may be properly revised due to the improvement of products, modification of specifications, etc. And there are cases where the system on actual machine and a part of the contents of this manual may differ due to the variations of specification by countries. For the section in which the description is hardly understood, contact our distributor.

A number is assigned to every part handled in this Manual on account of the description, but the parts cannot be supplied as service parts. Therefore, the order must be placed with respective formal number with due confirmation on the Parts Manual for the applicable machine.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com