



---

## **SERVICE MANUAL**

---

**CRAWLER EXCAVATOR**

**CX700  
TIER III**

# CX700 Crawler Excavator

## Table of Contents

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>1 GENERAL INFORMATION</b>		
Safety, general information and standard torque data .....	1001	7-27691NA
General specifications and special torque setting.....	1002	9-94060NA
Numerical value conversion table .....	1003	9-35540
<b>2 ENGINE</b>		
Radiator and engine removal and installation.....	2001	9-94480NA
Engine specifications .....	*	
Disassembly and assembly of the engine.....	*	
<b>3 FUEL SYSTEM</b>		
Fuel tank, removal and installation.....	3001	9-94470NA
Fuel engine system.....	*	
<b>4 ELECTRICAL SYSTEM</b>		
Electrical system, electrical and electronic troubleshooting.....	4001	9-94700NA
Inspection and maintenance of batteries and connecting a booster battery ...	4002	9-36830NA
Computer and engine controller, removal and installation .....	4003	9-94510NA
<b>5 UNDERCARRIAGE</b>		
Removal and installation of tracks .....	5001	9-36860NA
Rollers.....	5003	9-94340NA
Sprocket.....	5004	9-36890NA
Idler wheel and tension shock absorber .....	5005	9-94350NA
<b>6 DRIVE TRAIN</b>		
Travel-motor reduction gear assembly, removal and installation.....	6001	9-94440NA
Travel hydraulic motor, disassembly and assembly.....	6002	9-94620NA
Swing reduction gear, removal and installation.....	6003	9-94450NA
Swing reduction gear, disassembly and assembly.....	6004	9-42630NA
Travel reduction gear, disassembly and assembly .....	6005	9-94610NA
<b>7 UNDERCARRIAGE HYDRAULICS</b>		
<b>8 UPPERSTRUCTURE HYDRAULICS</b>		
Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components .....	8000	9-94430NA
Specifications, troubleshooting, checks and hydraulic pressure settings.....	8001	9-94080NA
Hydraulic reservoir removal and installation .....	8002	9-94490NA
Main hydraulic pump and pilot pumps, removal and installation .....	8003	9-94540NA
Main hydraulic control valve, removal and installation .....	8004	9-94500NA
Attachment cylinders, removal and installation .....	8005	9-94810NA
Hydraulic swivel, removal and installation .....	8006	9-94600NA
Pilot blocs, removal and installation .....	8007	9-94520NA
Swing motor, removal and installation.....	8008	9-94420NA
Main hydraulic pump, disassembly and assembly .....	8010	9-94590NA
Main hydraulic control valve, disassembly and assembly .....	8011	9-94780NA
Attachment cylinders, disassembly and assembly.....	8012	9-94580NA
Hand control levers, disassembly and assembly .....	8013	9-94630NA
Foot control levers, disassembly and assembly .....	8014	9-40991NA
Eight-solenoid valves, disassembly and assembly .....	8015	9-42521NA
Caution valve, disassembly and assembly.....	8016	9-94530NA
Safety valve.....	8017	9-94690NA
Hydraulic swivel, disassembly and assembly .....	8018	9-94410NA
Swing motor, disassembly and assembly .....	8019	9-42530NA

DIVISION/SECTION	SECTION N°	REFERENCE N°
Hydraulic functions.....	8020	9-94090NA
Fan motor, removal and installation .....	8022	9-94660NA
Fan motor, disassembly and assembly .....	8023	9-94670NA
Fan pump, removal, disassembly, assembly and installation .....	8024	9-94680NA
Hydraulic component functions .....	8030	9-94130NA
<b>9    UPPERSTRUCTURE</b>		
Upperstructure, turntable and counterweight.....	9002	9-94560NA
Boom, dipper and bucket .....	9003	9-94570NA
Seat and seat belt .....	9004	9-40960NA
Cab and cab equipment.....	9005	9-94650NA
Air conditioning troubleshooting .....	9006	[REDACTED]
Air conditioning unit disassembly and assembly .....	9007	9-94640NA
Air conditioning servicing .....	9008	[REDACTED]
Air conditioning components .....	9009	[REDACTED]
Removal and installation attachment, counterweight and side frame .....	9010	9-94140NA
Large size hydraulic schematic .....	Pocket	87519799
Large size electrical schematic .....	Pocket	87519792

\* Consult the Engine Service Manual 9-36410NA

[REDACTED] Sections to be distributed at a later date

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

**Thank you so much for reading.**

**Please click the “Buy Now!”  
button below to download the  
complete manual.**

***Buy Now***



**After you pay.**

**You can download the most  
perfect and complete manual in  
the world immediately.**

**Our support email:**

**ebooklibonline@outlook.com**