

**WX218**  
Wheeled Excavator

**SERVICE MANUAL**

Part number 48005326

English

April 2016

**CASE**  
CONSTRUCTION



# **SERVICE MANUAL**

**WX218**

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
WX218	Asia Pacific	F4GE9684
WX218	Europe	F4GE9684
WX218	Middle East Africa	F4GE9684

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.202] Air cleaners and lines .....	10.1
[10.206] Fuel filters .....	10.2
[10.216] Fuel tanks .....	10.3
[10.218] Fuel injection system.....	10.4
[10.254] Intake and exhaust manifolds and muffler .....	10.5
[10.310] Aftercooler.....	10.6
[10.400] Engine cooling system .....	10.7
<b>Transmission</b> .....	<b>21</b>
[21.105] Powershift transmission lubrication system .....	21.1
[21.113] Powershift transmission .....	21.2
[21.135] Powershift transmission external controls.....	21.3
[21.155] Powershift transmission internal components.....	21.4
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.314] Drive shaft.....	23.1
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.122] Axle suspension control.....	25.4
<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Brakes and controls</b> .....	<b>33</b>

[33.110] Parking brake or parking lock .....	33.1
[33.202] Hydraulic service brakes .....	33.2
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.106] Variable displacement pump .....	35.2
[35.300] Reservoir, cooler, and filters.....	35.3
[35.304] Combination pump units .....	35.4
[35.352] Hydraulic swing system .....	35.5
[35.353] Hydraulic travel system .....	35.6
[35.354] Hydraulic central joint .....	35.7
[35.357] Pilot system .....	35.8
[35.359] Main control valve.....	35.9
[35.360] Hammer and rotating bucket hydraulic system .....	35.10
[35.703] Stabilizer hydraulic system.....	35.11
[35.730] Positioning arm hydraulic system .....	35.12
[35.736] Boom hydraulic system .....	35.13
[35.737] Dipper hydraulic system.....	35.14
[35.738] Excavator and backhoe bucket hydraulic system.....	35.15
[35.741] Dozer blade cylinders .....	35.16
<b>Frames and ballasting .....</b>	<b>39</b>
[39.103] Swing ring assembly .....	39.1
[39.129] Stabilizers .....	39.2
[39.140] Ballasts and supports .....	39.3
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders .....	41.4

<b>Wheels</b> .....	<b>44</b>
[44.511] Front wheels .....	44.1
[44.520] Rear wheels .....	44.2
<b>Cab climate control</b> .....	<b>50</b>
[50.200] Air conditioning .....	50.1
<b>Electrical systems</b> .....	<b>55</b>
[55.000] Electrical system .....	55.1
[55.010] Fuel injection system .....	55.2
[55.011] Fuel tank system .....	55.3
[55.012] Engine cooling system .....	55.4
[55.014] Engine intake and exhaust system .....	55.5
[55.015] Engine control system .....	55.6
[55.020] Transmission speed sensors .....	55.7
[55.036] Hydraulic system control .....	55.8
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system .....	55.9
[55.100] Harnesses and connectors .....	55.10
[55.110] Electrical rotary joint .....	55.11
[55.302] Battery .....	55.12
[55.404] External lighting .....	55.13
[55.416] Swing control system .....	55.14
[55.425] Boom, dipper, and bucket control system .....	55.15
[55.512] Cab controls .....	55.16
[55.514] Cab lighting .....	55.17
[55.525] Cab engine controls .....	55.18
[55.530] Camera .....	55.19
[55.640] Electronic modules .....	55.20
<b>Booms, dippers, and buckets</b> .....	<b>84</b>
[84.100] Bucket .....	84.1

[84.910] Boom .....	84.2
<b>Dozer blade and arm.....</b>	<b>86</b>
[86.110] Dozer blade .....	86.1
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.118] Protections and footboards.....	90.1
[90.124] Pneumatically-adjusted operator seat.....	90.2
[90.150] Cab .....	90.3
[90.151] Cab interior.....	90.4

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)