

Product: SKID STEER LOADER

Model: 268B SKID STEER LOADER LBA

Configuration: 248B 268B SKID STEER LOADER LBA00001-UP (MACHINE) POWERED BY 3044C Engine

Disassembly and Assembly

3044C Industrial Engine and Engines for Caterpillar Built Machines

Media Number -REN7582-07

Publication Date -01/01/2010

Date Updated -26/02/2010

i02000757

Fuel Injection Pump - Remove

SMCS - 1251-011

Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-2320	Combination Puller	1

Start By:

- A. Remove the fuel injection lines. Refer to Disassembly and Assembly, "Fuel Injection Lines - Remove and Install".

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

1. Ensure that the No. 1 cylinder is at the top center compression stroke. Refer to Testing and Adjusting, "Finding Top Center Position for No. 1 Piston".
-

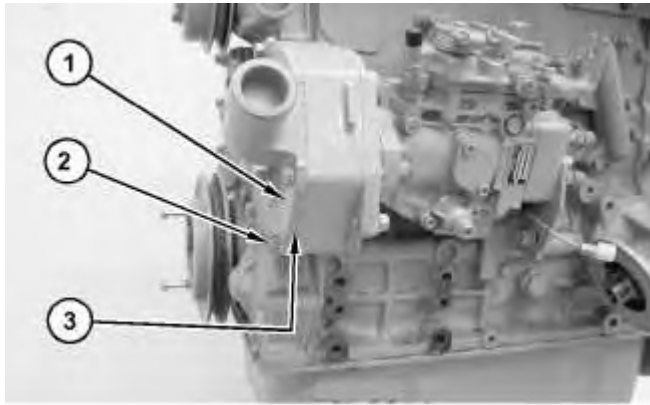


Illustration 1

g01035206

2. Remove bolts (2). Remove cover (1) and O-ring seal (3) .



Illustration 2

g01035208

3. Mark gear teeth (4) for timing purposes.

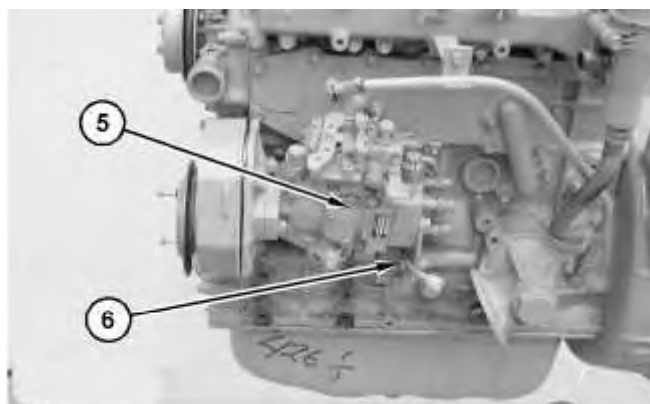


Illustration 3

g01035221

4. Remove bolt (6). Remove fuel injection pump (5) .

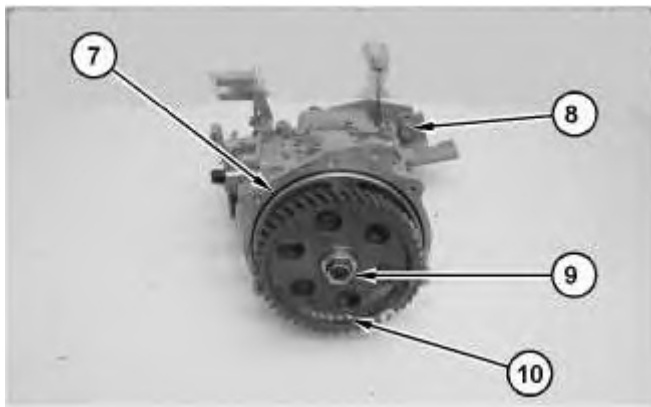


Illustration 4

g01035230

5. Remove O-ring seal (7). Remove the bolt and bracket (8). Remove nut (9) from gear (10) .

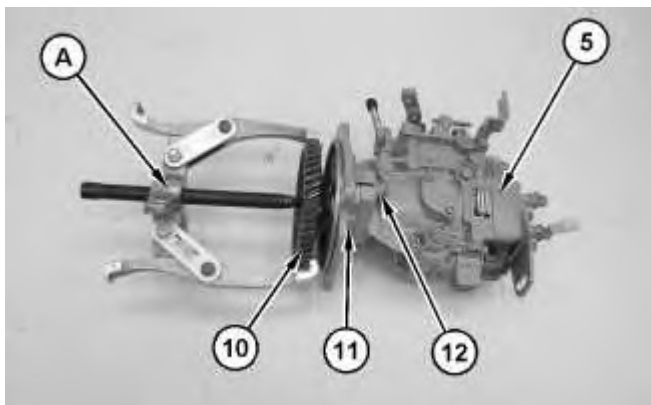


Illustration 5

g01035232

6. Use Tooling (A) to remove gear (10). Mark housing (11) and fuel injection pump (5) for installation purposes. Remove bolts (12) and housing (11) .

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com