

Product: COMPACT TRACK LOADER

Model: 289C COMPACT TRACK LOADER JMP

Configuration: 289C Compact Track Loader JMP00001-UP (MACHINE) POWERED BY 3044C Engine

Disassembly and Assembly

279C, 279C2, 289C, 289C2 and 299C Compact Track Loaders Power Train

Media Number -KENR8831-06

Publication Date -01/01/2016

Date Updated -06/01/2016

i06659865

Piston Pump (Hydrostatic) - Disassemble

SMCS - 5070-015-H7

Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-0510	Driver Gp	1
B	9S-9152	Puller Attachment As.	1
C	0S-1527	Bolt	1
	2J-3506	Full Nut	1
	8T-4122	Hard Washer	2
D	1P-1859	Retaining Ring Pliers	1

Start By:

- a. Remove the pump. Refer to Disassembly and Assembly, "Piston Pump (Hydrostatic) - Remove".
-

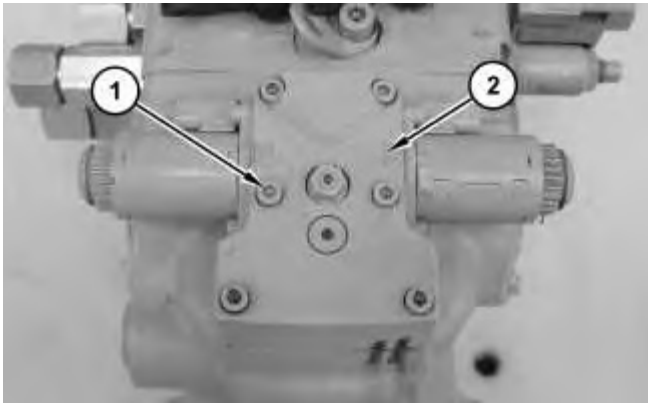


Illustration 1

g01325524

1. Remove bolts (1) and valve (2).

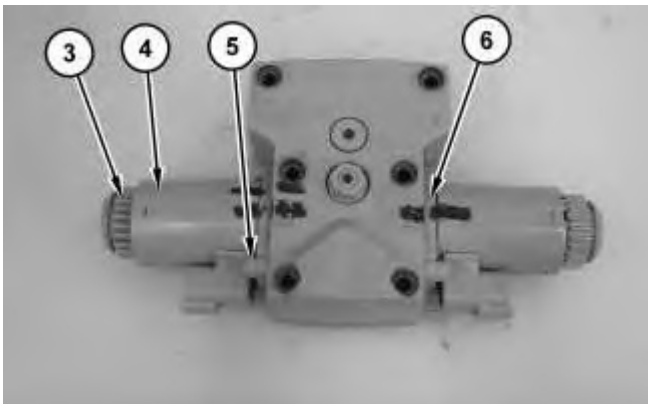


Illustration 2

g01325526

2. Remove nut (3), the O-ring seal, coil (4), bolts (5), and cartridge (6).

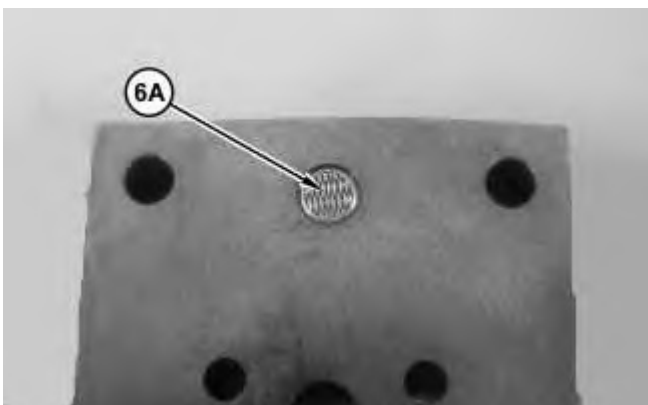


Illustration 3

g01377500

3. Remove screen (6A).

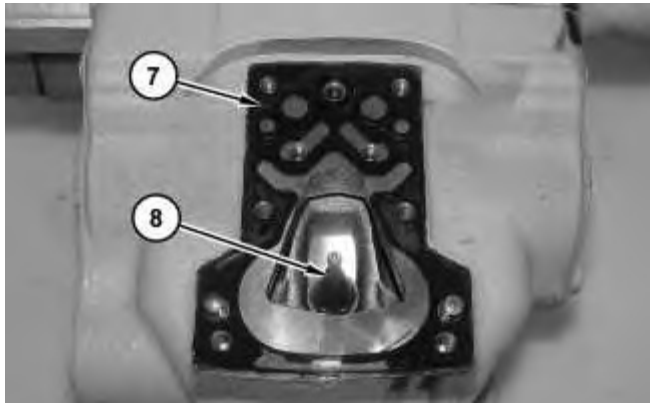


Illustration 4

g01325527

4. Remove gasket (7) and control arm (8).

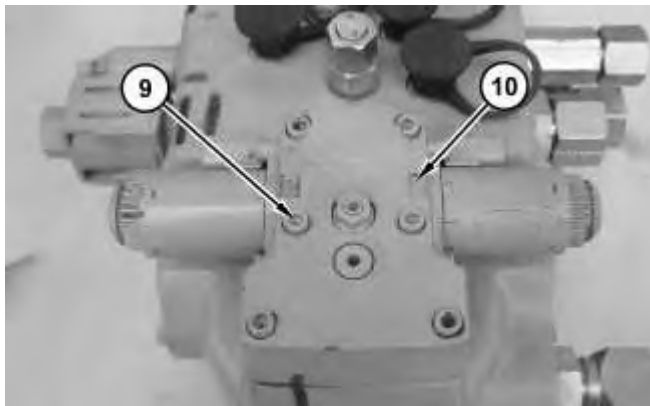


Illustration 5

g01325534

5. Remove bolts (9) and valve (10).
6. Repeat Steps 2 through Steps 4 for valve (10).

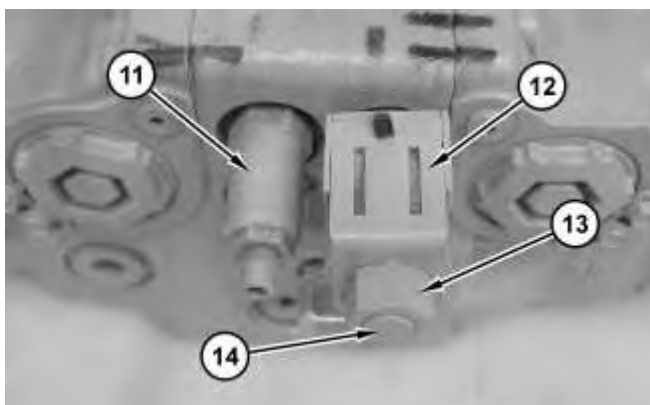


Illustration 6

g01325536

7. Remove nut (13), coil (12), and cartridge (14).
8. Remove valve (11).

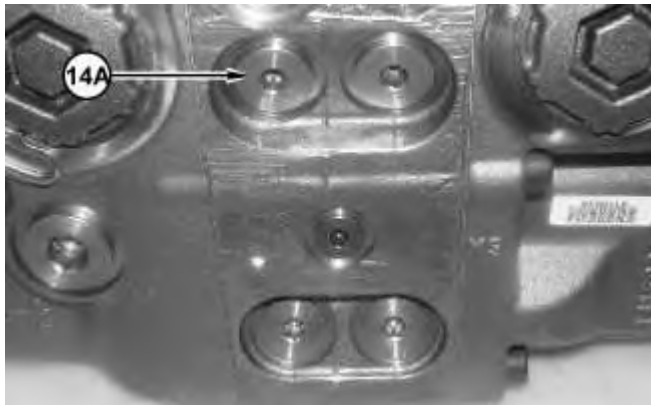


Illustration 7

g01377504

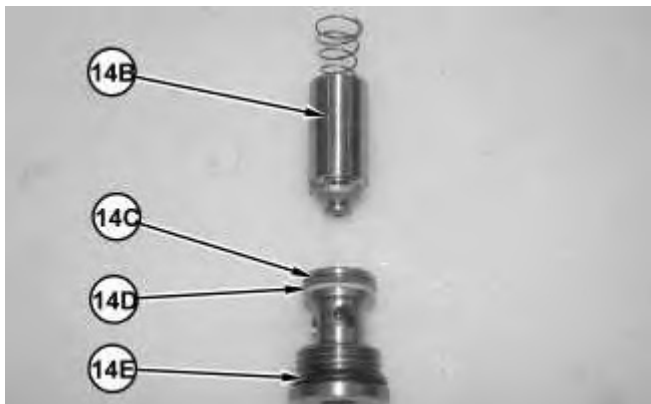


Illustration 8

g01377507

9. Remove plugs (14A), O-ring seal (14E), O-ring seal (14C), backup ring (14D) and crossover relief valves (14B), from the head.

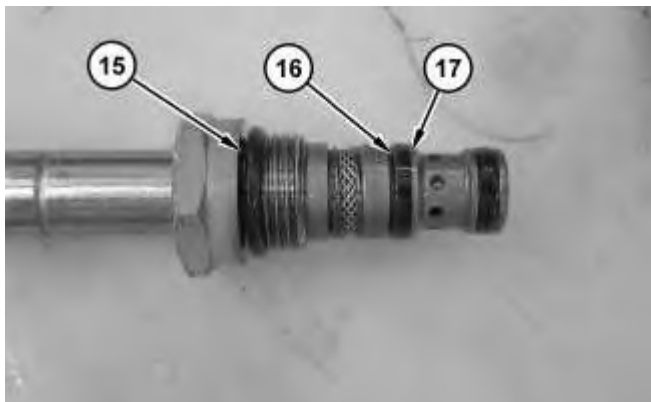


Illustration 9

g01325538

10. Remove O-ring seal (15), backup rings (16), and O-ring seals (17).
-

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com